INTAKE SHUTTER VALVE INSPECTION [SKYACTIV-D 1.5]


id0116q2093500

Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the intake shutter valve connector.
3. Inspect the resistance between intake shutter valve terminals A and B.

   Intake shutter valve resistance (specification)
   0.3—100 ohms [20 °C {68 °F}]

   - If not within the specification, replace the intake shutter valve. (See INTAKE SHUTTER VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

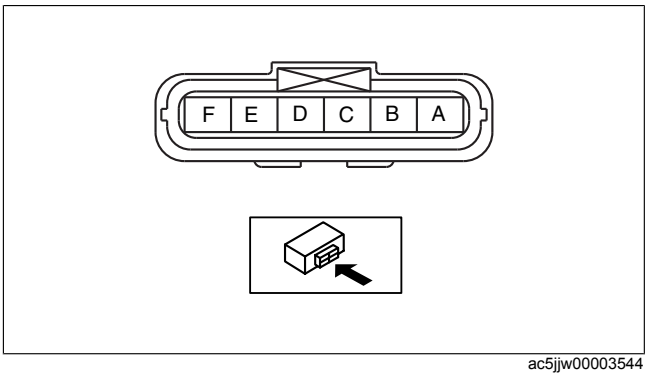

ac5jjw00003544