
EGR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0116q2099000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts: (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
   - Fresh-air duct
   - Air cleaner
   - Air hose
   - Air intake pipe
3. Remove the battery and the battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Set the DC-DC converter (i-ELOOP) aside so that it does not interfere with the servicing. (With i-ELOOP) (See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)
5. Remove the front crossmember. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Disconnect the front drive shaft from the transaxle side and set is aside so that it does not interfere with the servicing. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
7. Remove the catalytic converter (DPF). (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
8. Remove in the order shown in the figure.
9. Install in the reverse order of removal.

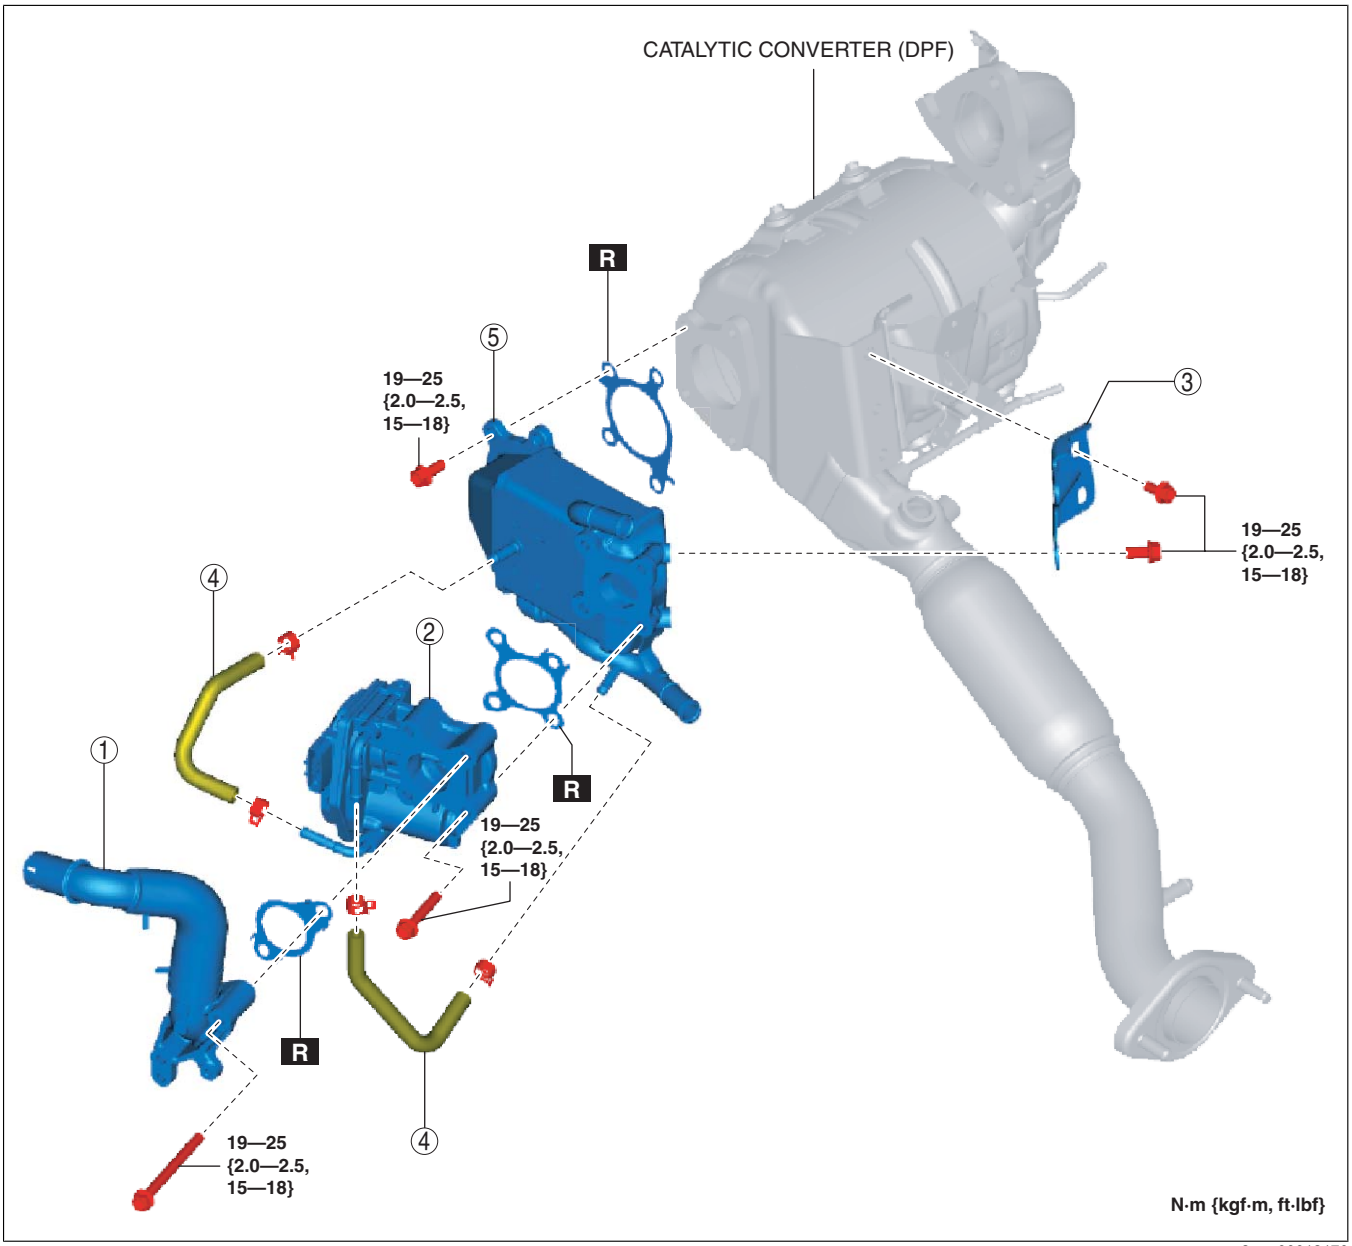

am2zzw00012170

1	LP-EGR flange (See LP-EGR CONTROL VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

2	LP-EGR control valve (See LP-EGR CONTROL VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
3	Bracket

4	Water hose
5	EGR cooler