
EGR COOLER INSPECTION [SKYACTIV-D 1.5]

id0116q2099800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the EGR cooler. (See EGR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Verify that there is airflow from port B when pressure is applied from port A.
   - If there is no airflow, replace the EGR cooler. (See EGR COOLER REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

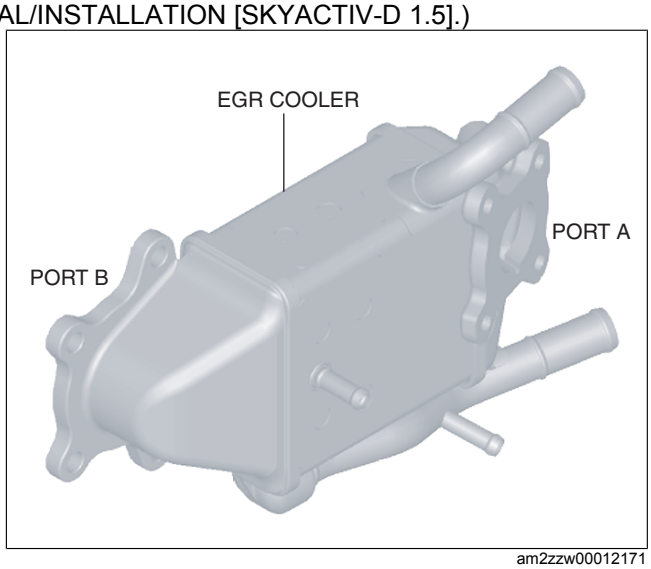

am2zzw00012171