EVAPORATIVE CHAMBER [SKYACTIV-D 1.5]


id0116q2156800

Purpose, Function

- The evaporative chamber prevents water penetrating the atmospheric air inlet.

Construction

- The evaporative chamber is located on the rollover valve.

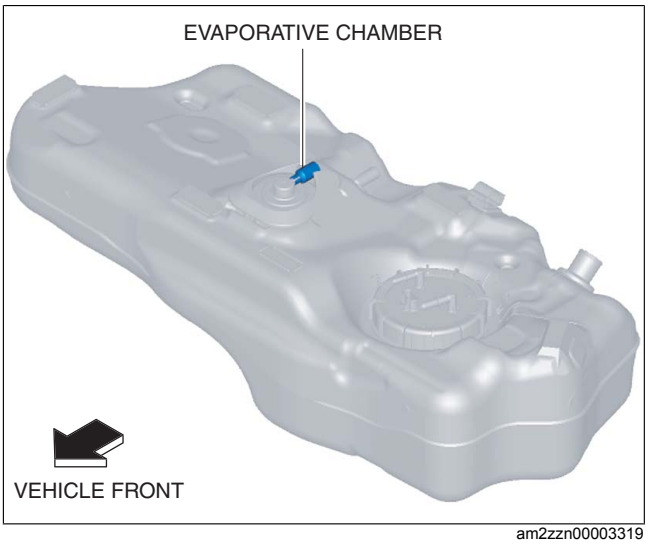

am2zzn00003319

Operation

- There partitions protect the fuel tank by preventing flooding as atmospheric air enters from the airflow holes.