EGR PIPE [SKYACTIV-D 1.5]

id0116q2189300


Purpose, Function

- The EGR pipe is the passage for recirculating the exhaust gas to the intake air side.

Construction

HP-EGR control valve side


- The EGR pipe is located between the intake manifold and HP-EGR control valve.

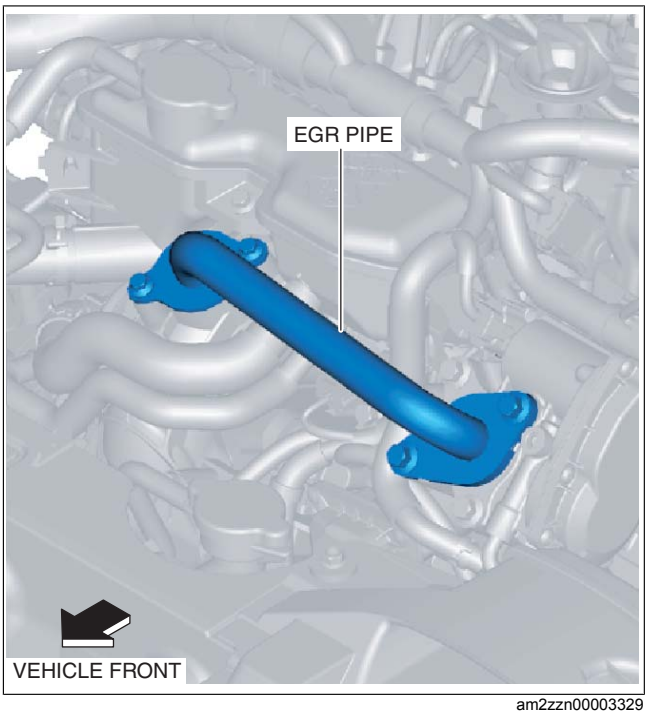

am2zzn00003329


LP-EGR control valve side

- The EGR pipe is located between the variable geometry turbocharger and the LP-EGR control valve.

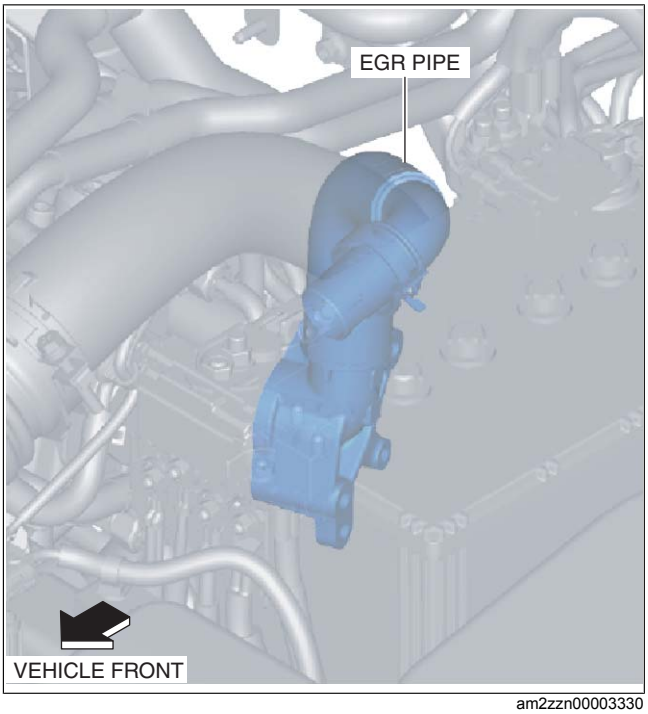

am2zzn00003330

- The end of the pipe has holes (slits) to facilitate mixing of the exhaust gas and intake air.

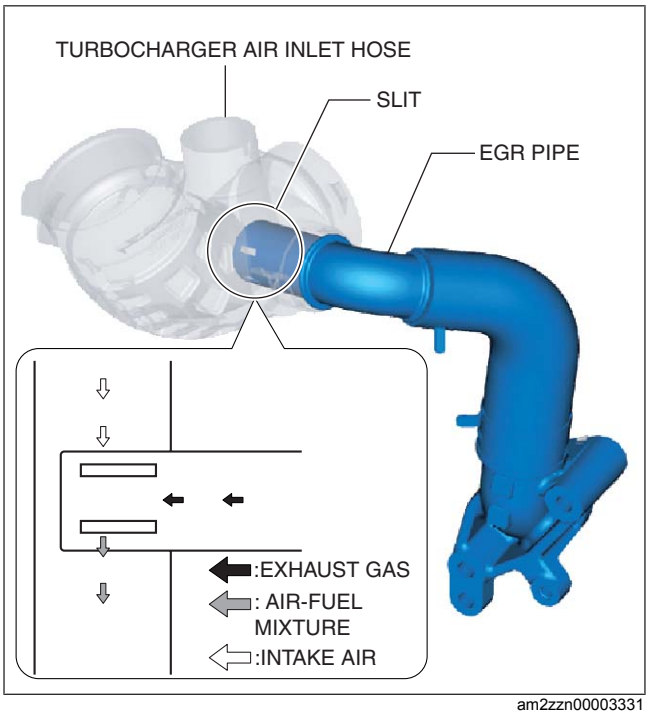

am2zzn00003331