HP-EGR CONTROL VALVE INSPECTION [SKYACTIV-D 1.5]


id0116q2489600

Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Disconnect the HP-EGR control valve connector.
3. Inspect the resistance between HP-EGR control valve terminals A and E.

   HP-EGR control valve resistance (specification)
   0.3—100 ohms [20 °C {68 °F}]

   - If not within the specification, replace the HP-EGR control valve. (See HP-EGR CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

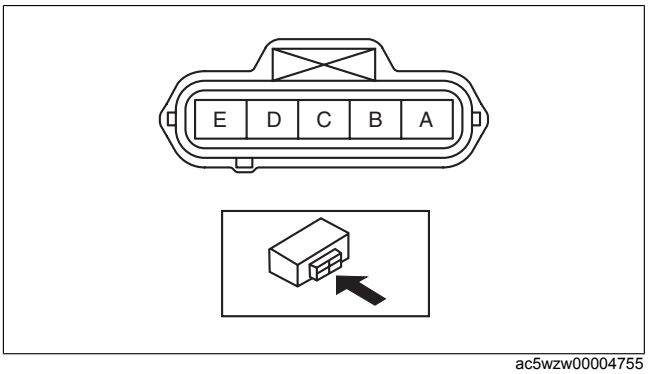

ac5wzw00004755