LP-EGR CONTROL VALVE INSPECTION [SKYACTIV-D 1.5]


id0116q2489700

Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Lift up the vehicle.
3. Remove the insulator. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Disconnect the LP-EGR control valve connector.
5. Inspect the resistance between LP-EGR control valve terminals D and E.

   LP-EGR control valve resistance (specification)
   0.3—100 ohms [20 °C {68 °F}]

   - If not within the specification, replace the LP-EGR control valve. (See LP-EGR CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

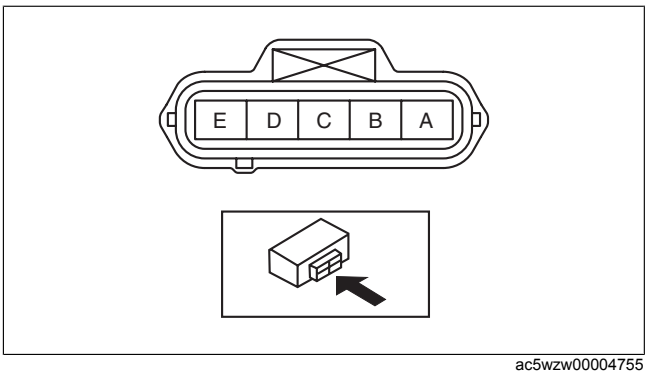

ac5wzw00004755