HP-EGR CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0116q2702800

Note
- If the HP-EGR control valve is replaced, perform the “HP-EGR Control Valve Replacement Procedure”.

HP-EGR Control Valve Replacement Procedure


1. If the HP-EGR control valve is replaced, perform the following procedure.

STEP	ACTION	PAGE/CONDITION
1	Start the engine.	—
2	Depress the accelerator pedal and race the engine (hold at 2000 rpm for 5 s).	—
3	Release the accelerator pedal and idle the engine.	—
4	Switch the ignition off.	—
5	Wait for 20 s or more.	—
6	Perform KOEO self-test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)
7	Perform KOER self-test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)

HP-EGR Control Valve Removal /Installation

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-D 1.5].)
4. Remove the EGR pipe. (See EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5. Remove in the order shown in the figure.

1	HP-EGR control valve connector
2	Water hose (See Water hose installation note.)
3	HP-EGR control valve (See HP-EGR Control Valve Replacement Procedure.)
4	HP-EGR pipe (See HP-EGR pipe removal note.) (See HP-EGR pipe installation note.)

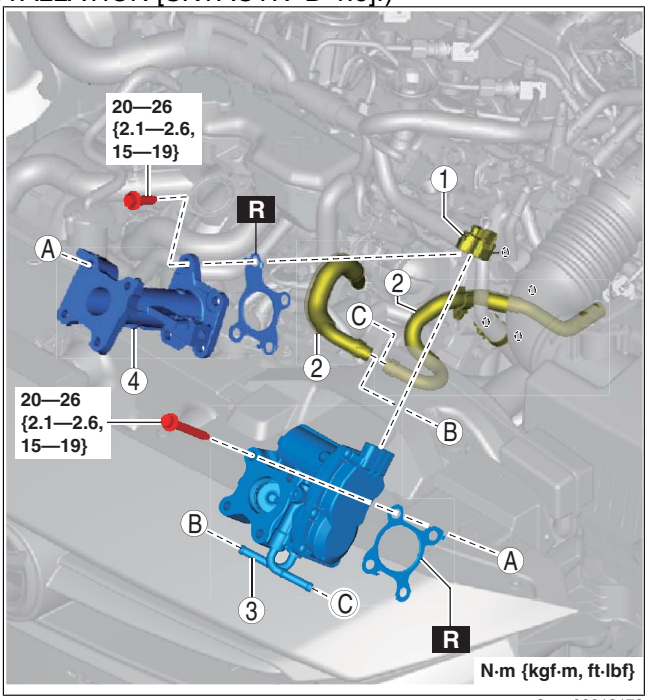


am2zzw00012172

6. Install in the reverse order of removal.

HP-EGR pipe removal note


1. Disconnect the wiring harness clip and hose clip shown in the figure from the HP-EGR pipe.
2. Remove the HP-EGR pipe.

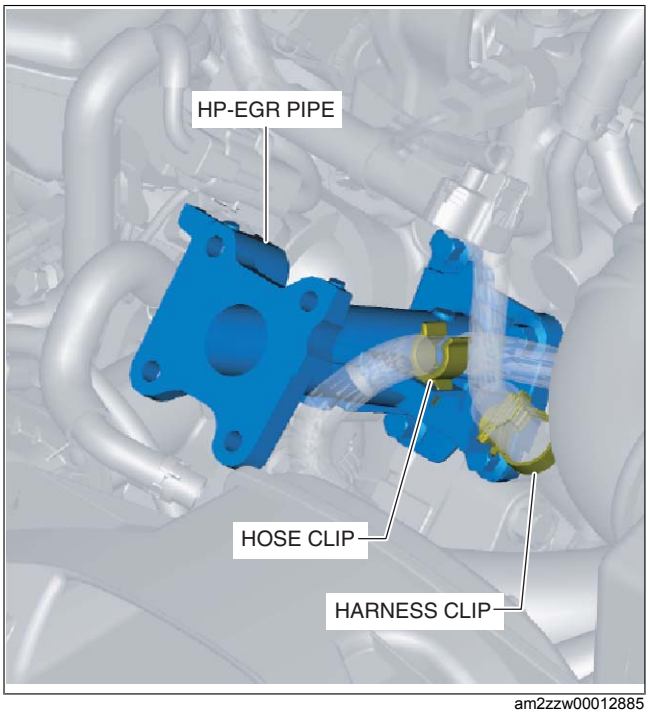

am2zzw00012885

HP-EGR pipe installation note


1. Install the EGR pipe.
2. Connect the harness clip and hose clip to the HP-EGR pipe shown in the figure.

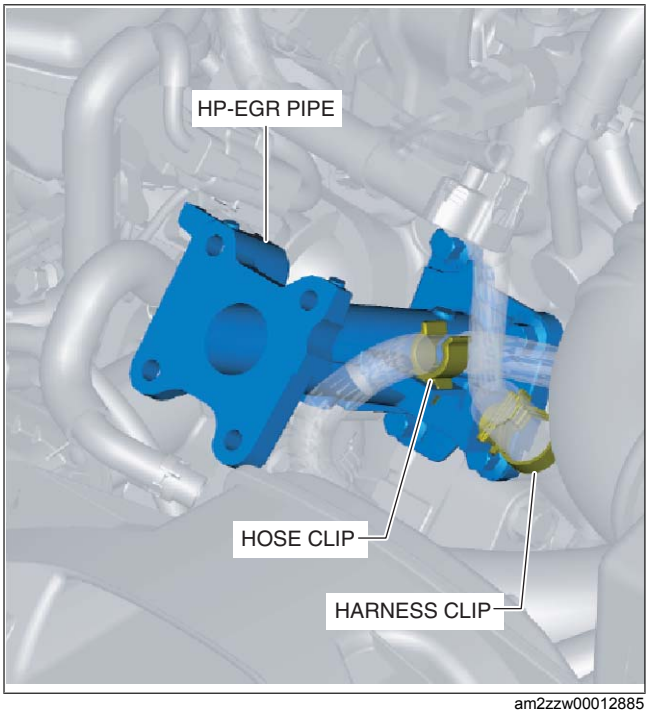

am2zzw00012885

Water hose installation note

1. Install water hose as shown in the figure.

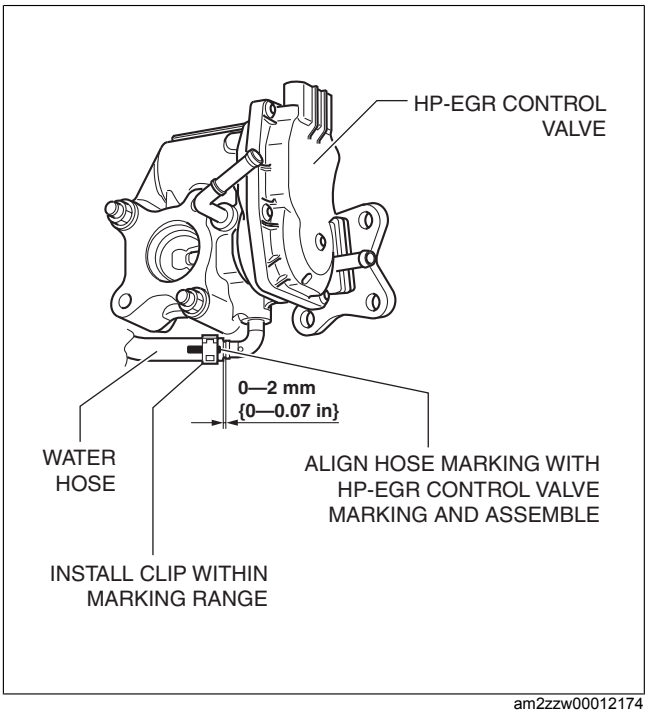

am2zzw00012174