LP-EGR CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0116q2702900

Note
- If the LP-EGR control valve is replaced, perform the “LP-EGR Control Valve Replacement Procedure”.


LP-EGR Control Valve Replacement Procedure

1. If the LP-EGR control valve is replaced, perform the following procedure.

STEP	ACTION	PAGE/CONDITION
1	Start the engine.	—
2	Warm the engine until the engine coolant temperature is 70 degrees C.	—
3	Depress the accelerator pedal and race the engine (hold at 2000 rpm for 5 s).	—
4	Release the accelerator pedal and idle the engine.	—
5	Switch the ignition off.	—
6	Wait for 20 s or more.	—
7	Perform KOEO self-test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)
8	Perform KOER self-test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)


LP-EGR Control Valve Removal /Installation

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-D 1.5].)
4. Remove the plate. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5. Disconnect the A/F sensor connector. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Disconnect the exhaust gas temperature sensor No.4. (See EXHAUST GAS TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
7. Set the wiring harness bracket shown in the figure aside so that it does not interfere with the servicing.
8. Remove in the order shown in the figure.

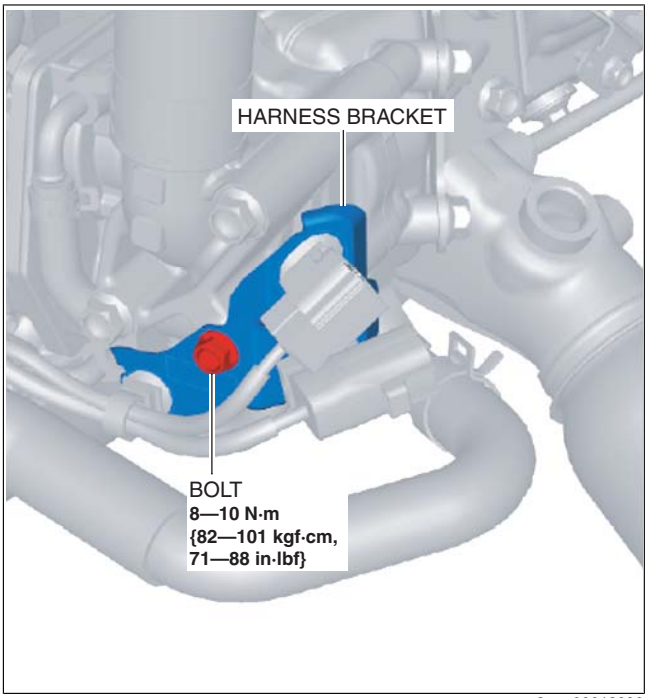

am2zzw00012886

9. Install in the reverse order of removal.

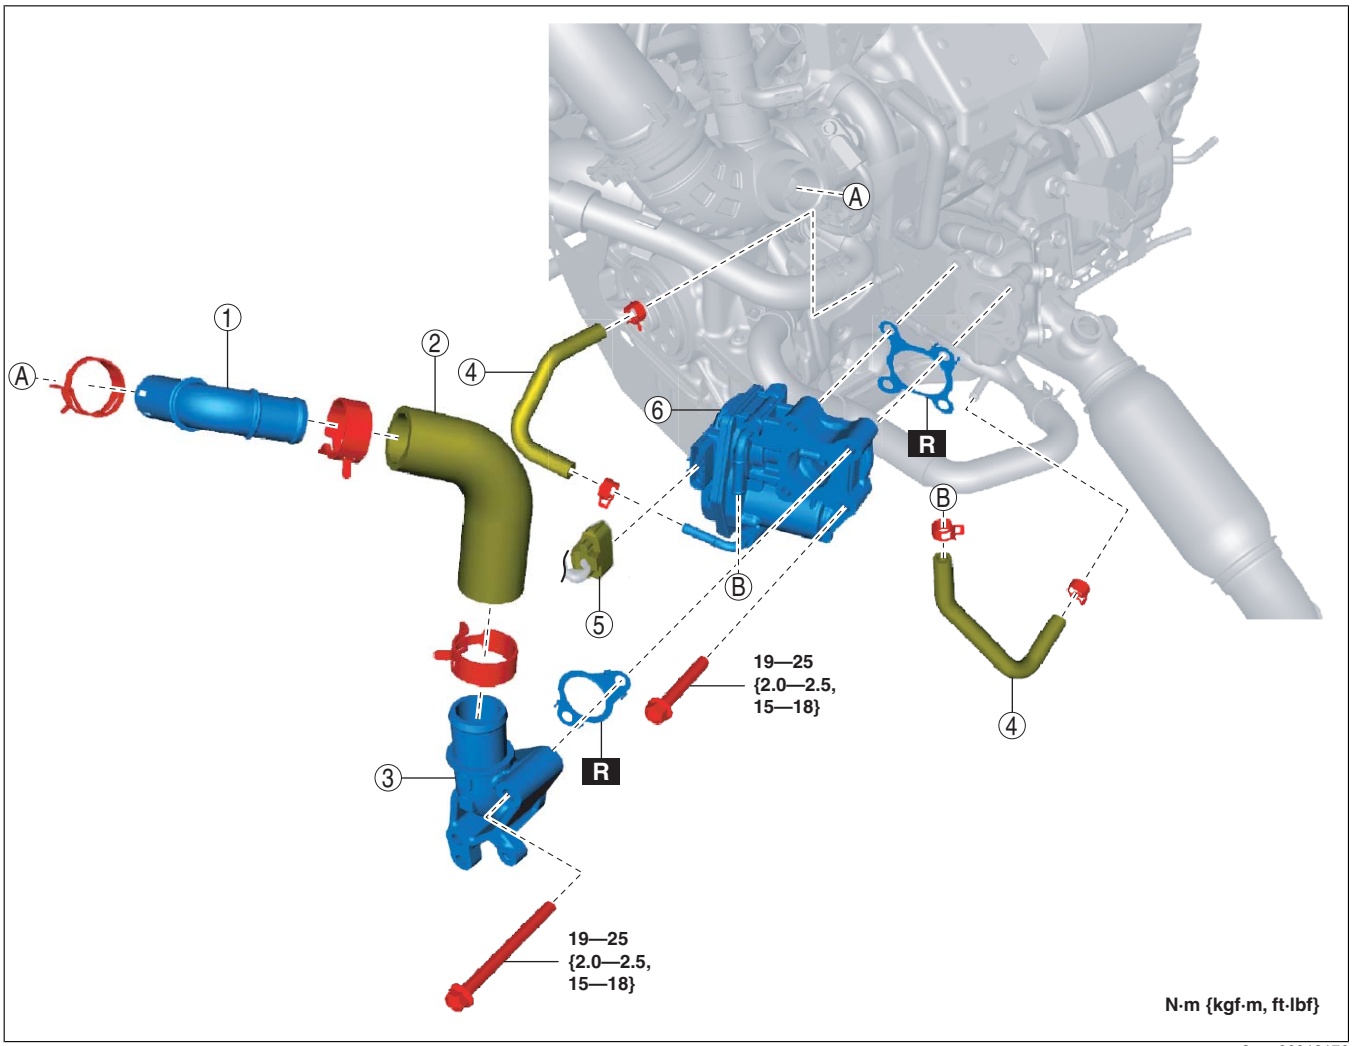

am2zzw00012176


1	LP-EGR pipe (See LP-EGR pipe removal note.) (See LP-EGR pipe installation note.)
2	LP-EGR hose (See LP-EGR hose installation note.)
3	LP-EGR flange
4	Water hose (See Water hose installation note.)
5	LP-EGR control valve connector
6	LP-EGR control valve (See LP-EGR Control Valve Replacement Procedure.)

LP-EGR pipe removal note

1. Remove the following parts as a single unit:
   - LP-EGR pipe
   - LP-EGR hose
   - LP-EGR flange
2. Remove the LP-EGR pipe.

Water hose installation note


1. Install water hose as shown in the figure.

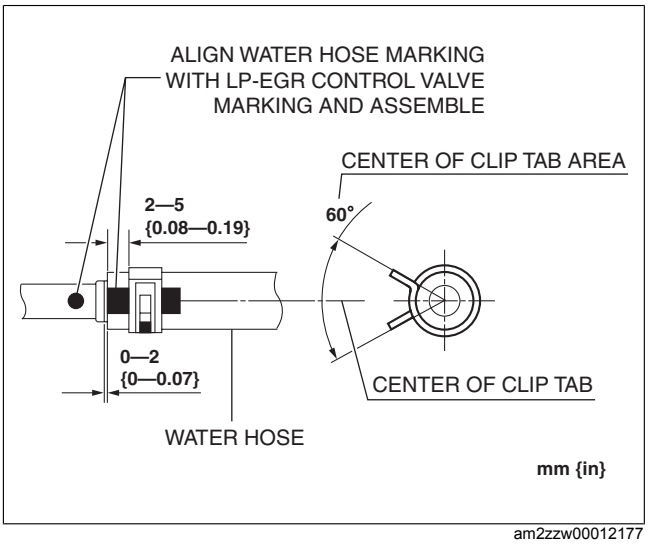

am2zzw00012177

LP-EGR hose installation note

1. Install LP-EGR hose as shown in the figure.

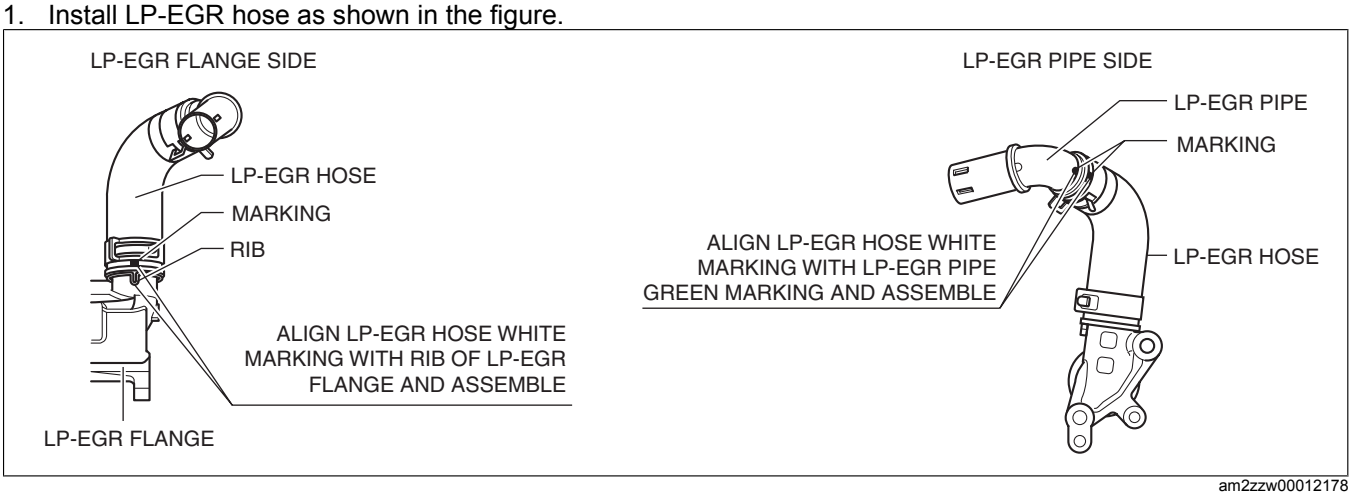

am2zzw00012178

LP-EGR pipe installation note

1. Install the following parts as a single unit:
   - LP-EGR flange
   - LP-EGR hose
   - LP-EGR pipe