
EMISSION SYSTEM LOCATION INDEX [SKYACTIV-D 1.5]

id0116q2803700

Engine Compartment Side

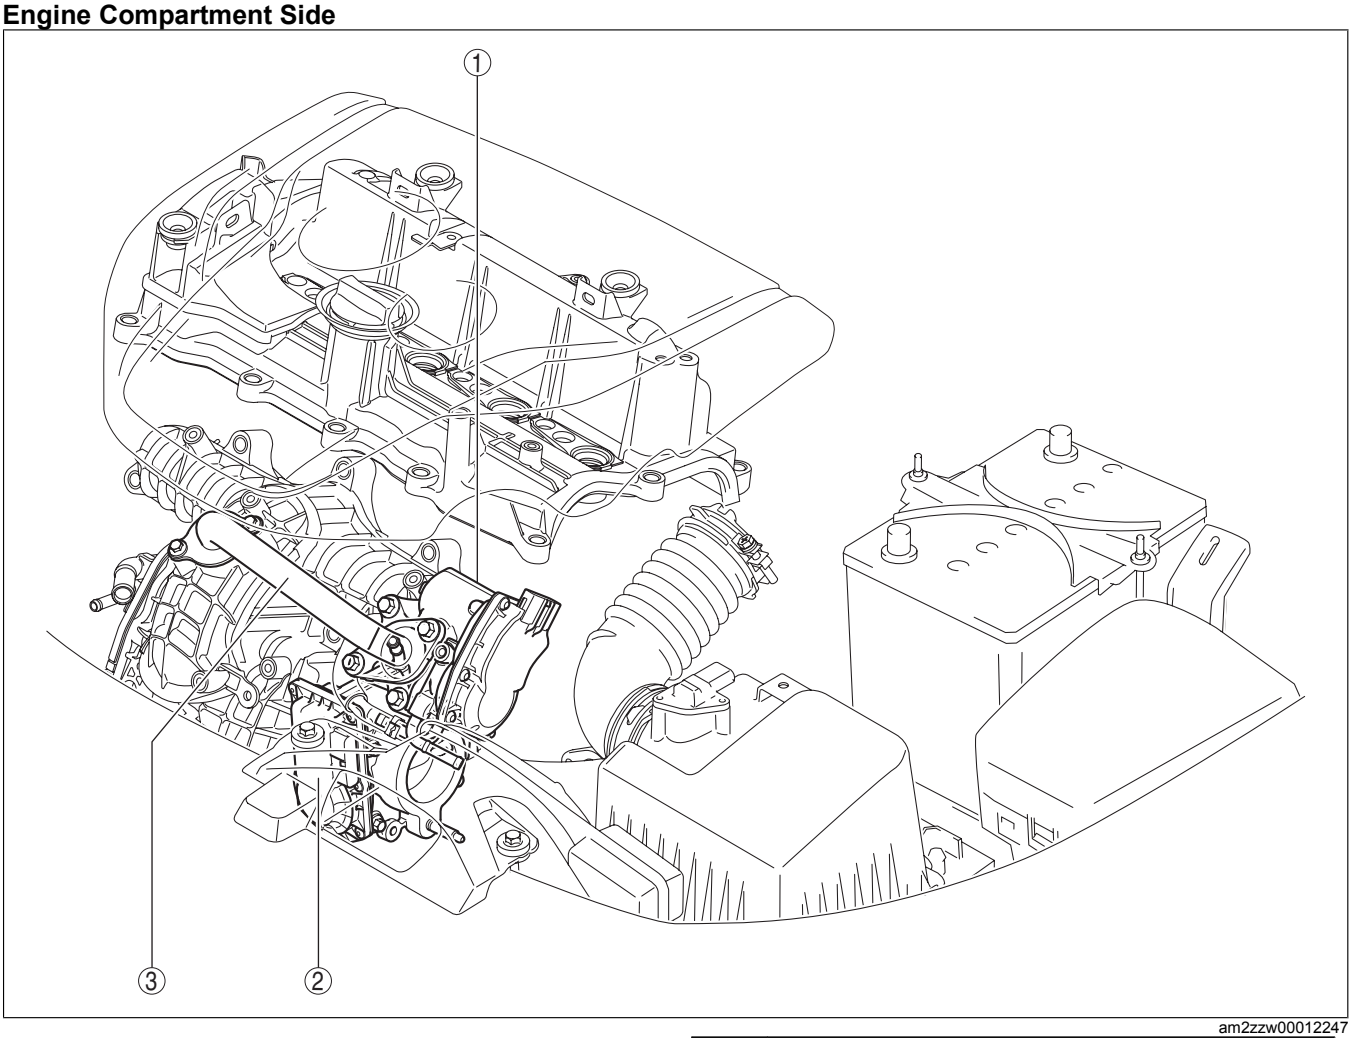


am2zzw00012247

1	HP-EGR control valve (See HP-EGR CONTROL VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See HP-EGR CONTROL VALVE INSPECTION [SKYACTIV-D 1.5].)
2	Intake shutter valve (See INTAKE SHUTTER VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See INTAKE SHUTTER VALVE INSPECTION [SKYACTIV-D 1.5].)
3	EGR pipe (See EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)


Exhaust System Side

1	Catalytic Converter (DPF) (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
2	Catalytic Converter (oxidation catalyst) (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
3	LP-EGR control valve (See LP-EGR CONTROL VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See LP-EGR CONTROL VALVE INSPECTION [SKYACTIV-D 1.5].)
4	EGR cooler (See EGR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EGR COOLER INSPECTION [SKYACTIV-D 1.5].)
5	Exhaust shutter valve (See EXHAUST SHUTTER VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST SHUTTER VALVE INSPECTION [SKYACTIV-D 1.5].)

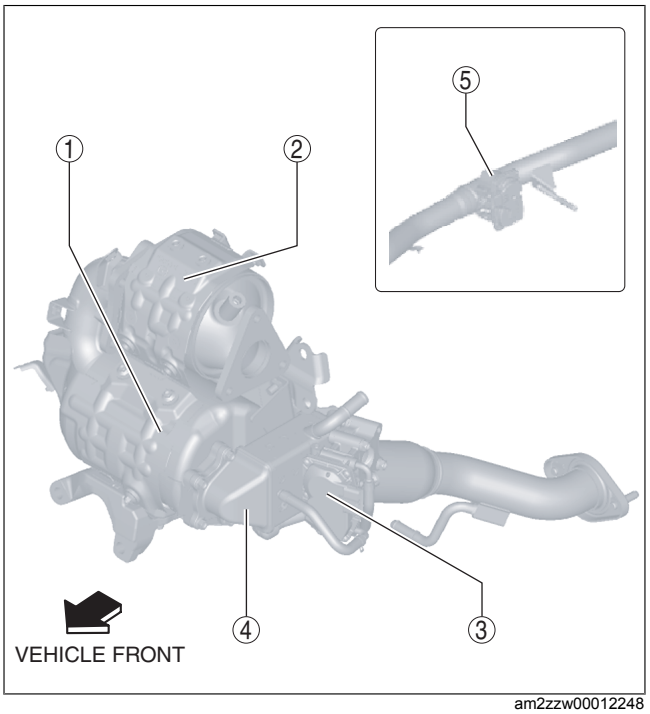

am2zzw00012248

Fuel Tank Side

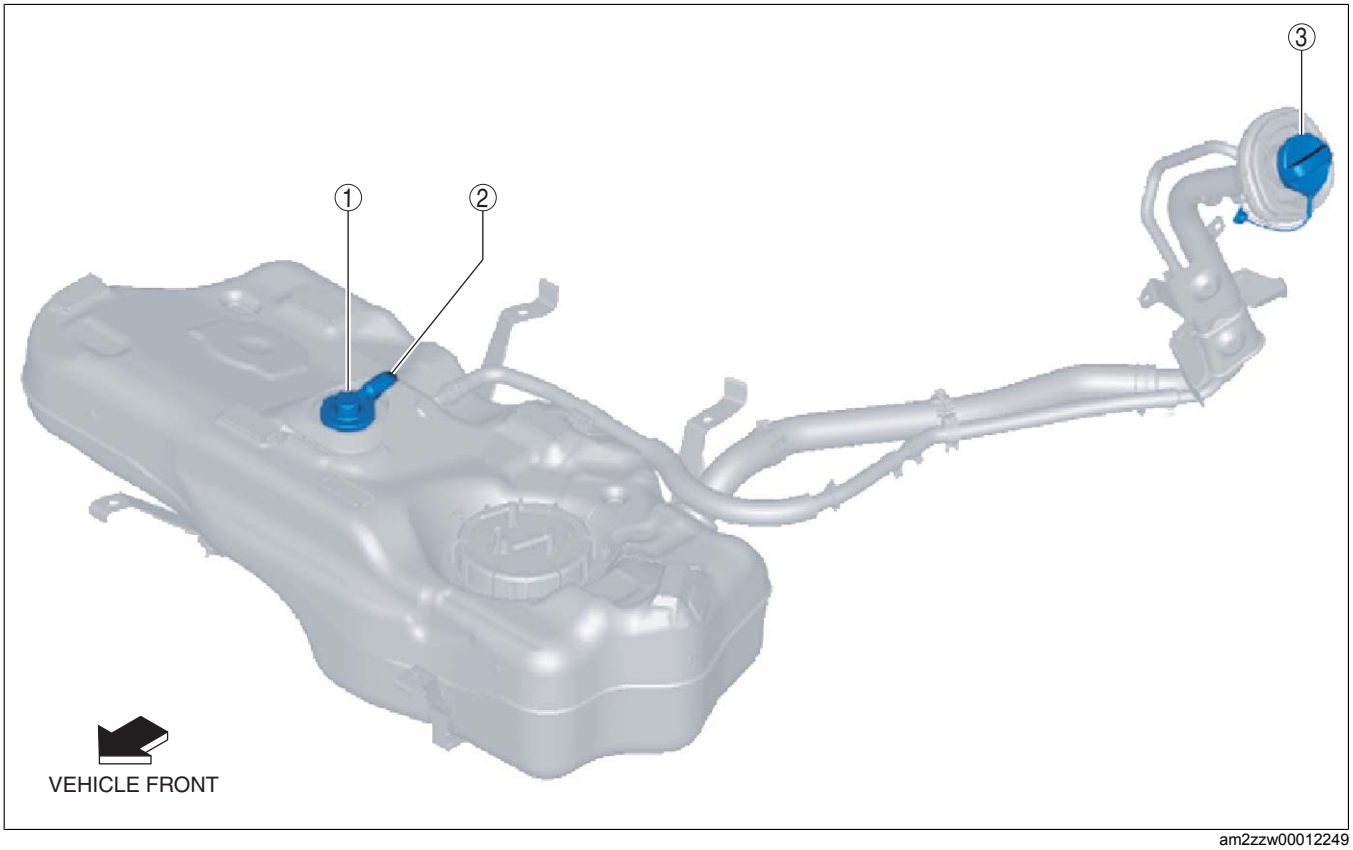

am2zzw00012249

1	Rollover valve (Integrated with check valve) (See ROLLOVER VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See ROLLOVER VALVE INSPECTION [SKYACTIV-D 1.5].) (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See CHECK VALVE INSPECTION [SKYACTIV-D 1.5].)

2	Evaporative chamber (See EVAPORATIVE CHAMBER REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See EVAPORATIVE CHAMBER INSPECTION [SKYACTIV-D 1.5].)

3	Fuel-filler cap (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)