
EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0116q2810000

1. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
2. Remove the EGR pipe.
3. Install in the reverse order of removal.

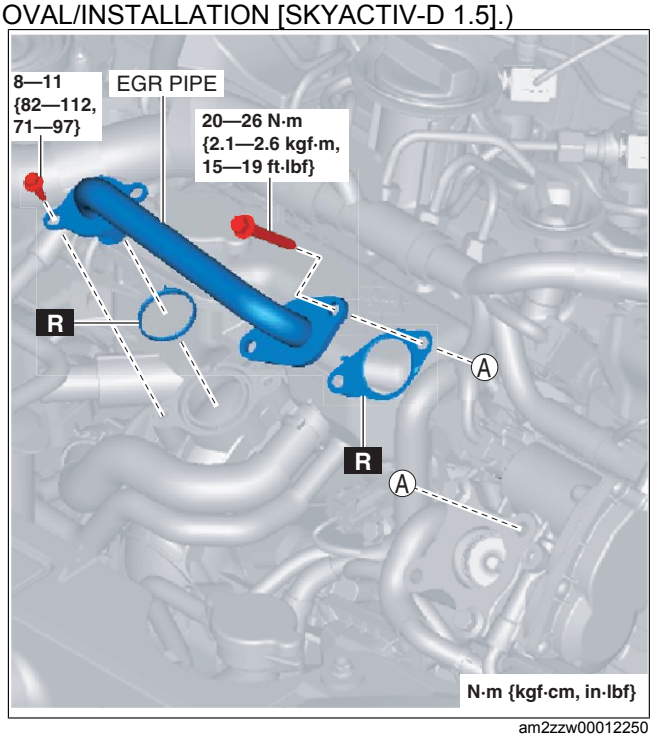

am2zzw00012250