
DC-DC CONVERTER REMOVAL/INSTALLATION [WITHOUT i-ELOOP]

id0117000046j9


Note

- The i-ELOOP caution label is adhered to the position shown in the figure below on vehicles with i-ELOOP. When determining if a vehicle in for servicing is equipped with i-ELOOP, refer to the i-ELOOP section. (See DC-DC CONVERTER (i-ELOOP) REMOVAL/ INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].)(See DC-DC CONVERTER (i-ELOOP) REMOVAL/ INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)

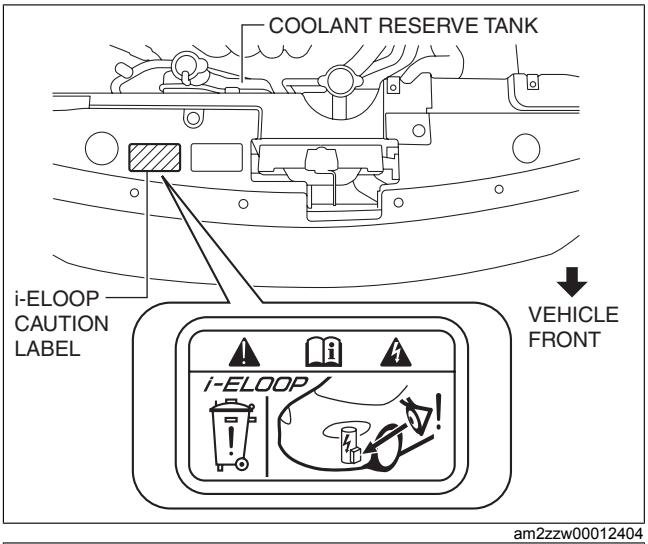


am2zzw00012404

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Set the front mudguard (LH) aside as shown in the figure. (See MUDGUARD REMOVAL/ INSTALLATION.)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

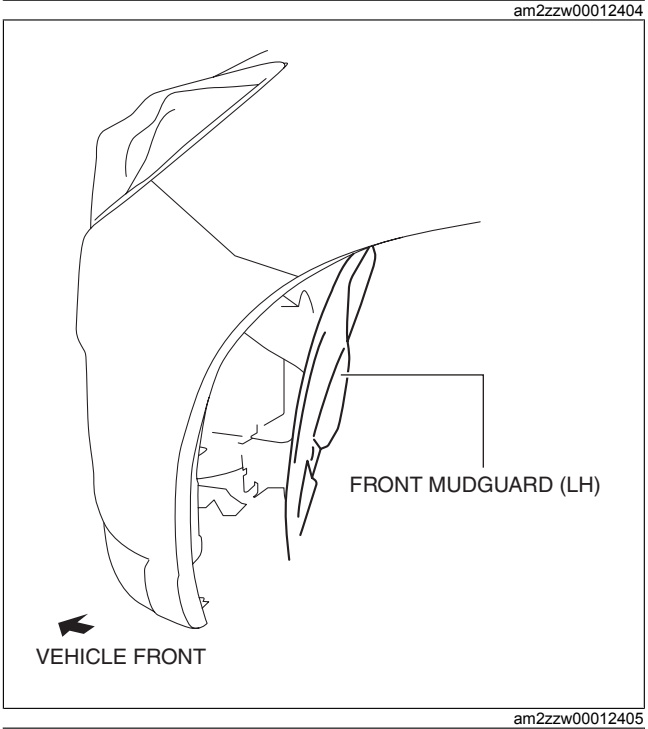

am2zzw00012405


1	DC-DC converter connector (See DC-DC Converter Connector Installation Note.)
2	DC-DC converter

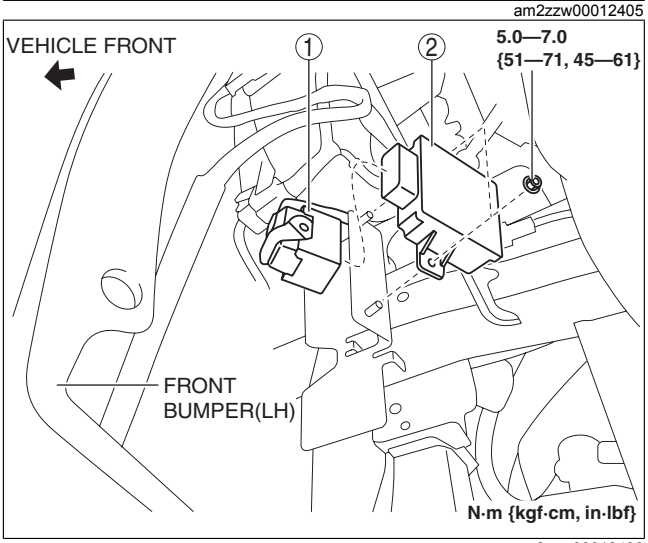

am2zzw00012406


DC-DC Converter Connector Installation Note

1. Before installation, verify that the connector lever is unlocked position.

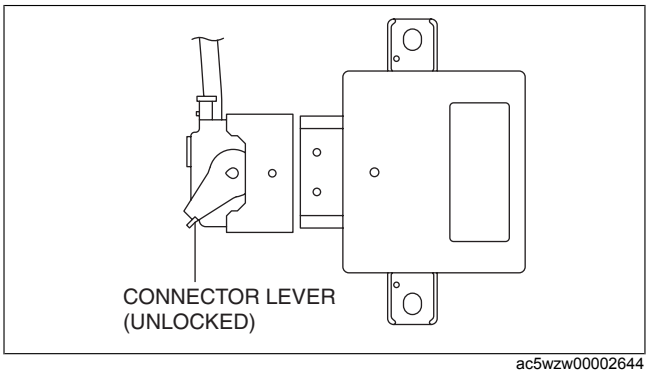


ac5wzw00002644

2. Connect the DC-DC converter connector using the following procedure:
   (1) Insert the DC-DC converter connector straight until it stops.

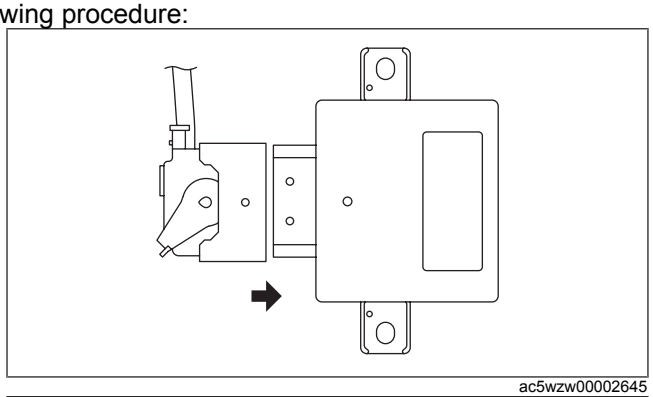
ac5wzw00002645

   (2) Move the connector lever until a click sound is heard.

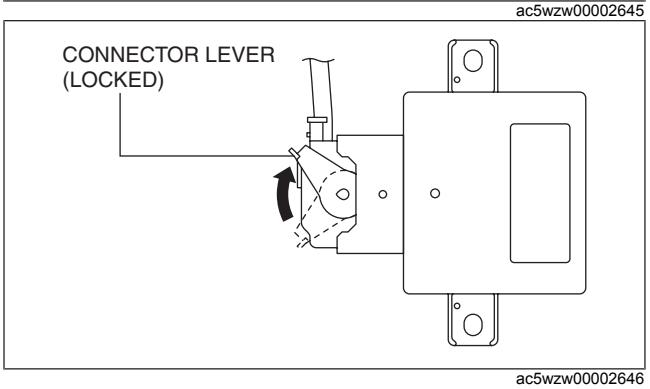

ac5wzw00002646