
DC-DC CONVERTER INSPECTION [WITHOUT i-ELOOP]

id0117000047j9

Note
- The i-ELOOP caution label is adhered to the position shown in the figure below on vehicles with i-ELOOP. When determining if a vehicle in for servicing is equipped with i-ELOOP, refer to the i-ELOOP section. (See DC-DC CONVERTER (i-ELOOP) INSPECTION [i-ELOOP].)

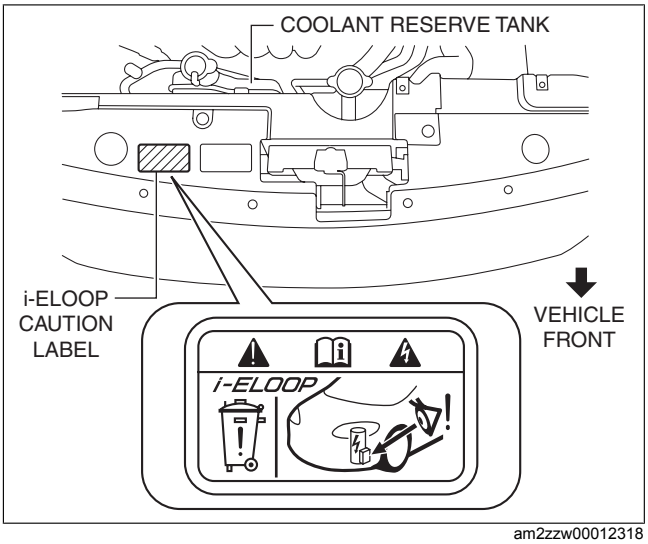

am2zzw00012318

DC-DC Converter Operation Inspection
1. Verify that the DC-DC converter related DTC is detected. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
   - If DTCs are detected, repair the malfunctioning part according to the applicable DTC troubleshooting.
   - If a DTC is not detected, go to the next step.
2. Inspect the battery. (See BATTERY INSPECTION)
   - If there is a malfunction, recharge or replace the battery, then go to the next step. (See BATTERY RECHARGING.) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. When the engine is restarted by the i-stop control, verify that the following measured voltages are not lower than **11.5V**.
   - Rain sensor (auto light sensor) supply terminal (vehicle wiring harness-side connector terminal D) (with auto light system)
   - Audio unit supply terminal (vehicle wiring harness-side connector terminal 1B) (without center display)
   - Tuner and amp unit (TAU) supply terminal (vehicle wiring harness-side connector terminal 2B) (with center display)
     — If it cannot be verified, go to the next step.
4. Inspect the wiring harness between the following terminals for an open or short circuit.
   - DC-DC converter terminal K—Rain sensor (auto light sensor) terminal D (with auto light system)
   - DC-DC converter terminal K—Audio unit terminal 1B (without center display)
   - DC-DC converter terminal K—Tuner and amp unit (TAU) terminal 2B (with center display)
     — If there is any open or short circuit in the wiring harness, repair or replace the malfunctioning part.
     — If there is any open or short circuit in the wiring harness, replace the DC-DC converter. (See DC-DC CONVERTER REMOVAL/INSTALLATION [WITHOUT i-ELOOP].)