
CHARGING SYSTEM LOCATION INDEX [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)]

id0117008001q8

Note

- For location index of the generator, DC-DC converter (i-ELOOP), capacitor (i-ELOOP) on vehicles with i-ELOOP, refer to the i-ELOOP section. (See CHARGING SYSTEM LOCATION INDEX [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].)

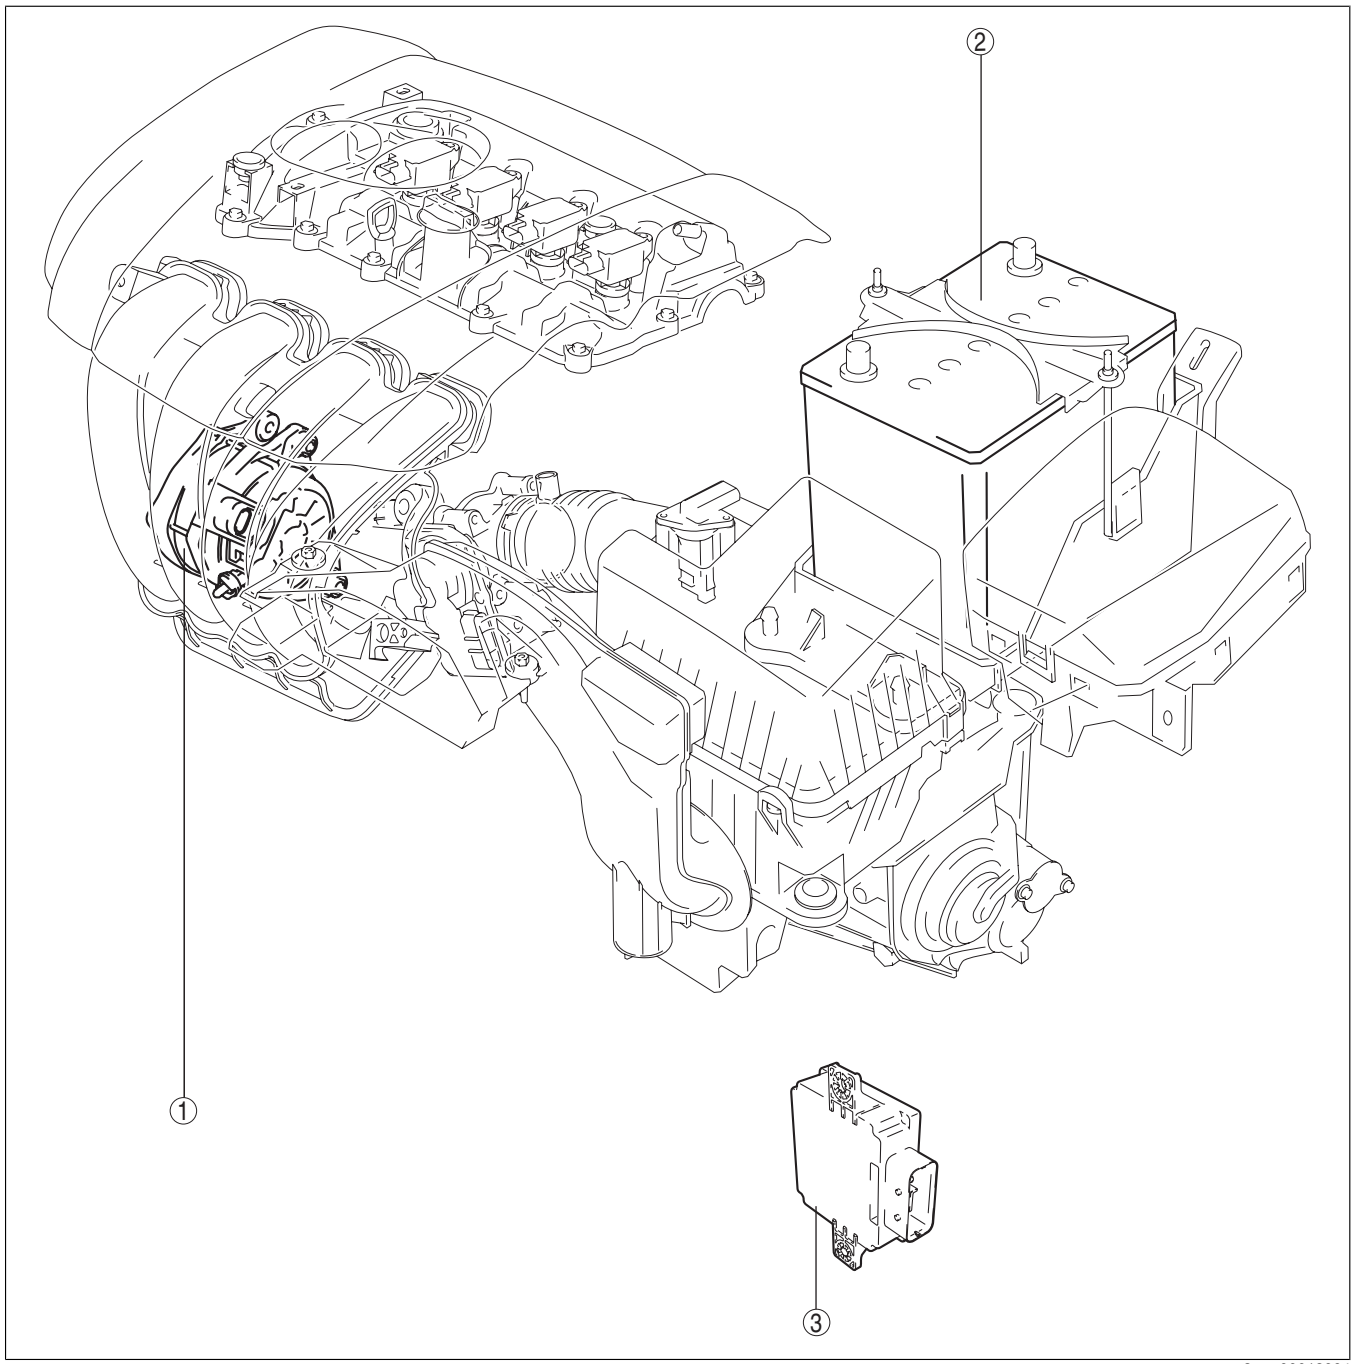

am2zzw00012364

1	Generator (See GENERATOR REMOVAL/INSTALLATION [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR INSPECTION [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR DISASSEMBLY/ASSEMBLY [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].)

2	Battery (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BATTERY INSPECTION.) (See BATTERY RECHARGING.) (See BATTERY CONDITION INITIALIZATION SETTING (i-stop SETTING).)

3	DC-DC converter (with i-stop) (See DC-DC CONVERTER REMOVAL/ INSTALLATION [WITHOUT i-ELOOP].) (See DC-DC CONVERTER INSPECTION [WITHOUT i-ELOOP].)