
GENERATOR DISASSEMBLY/ASSEMBLY [WITHOUT i-ELOOP (SKYACTIV-D 1.5)]

id0117008004j8

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

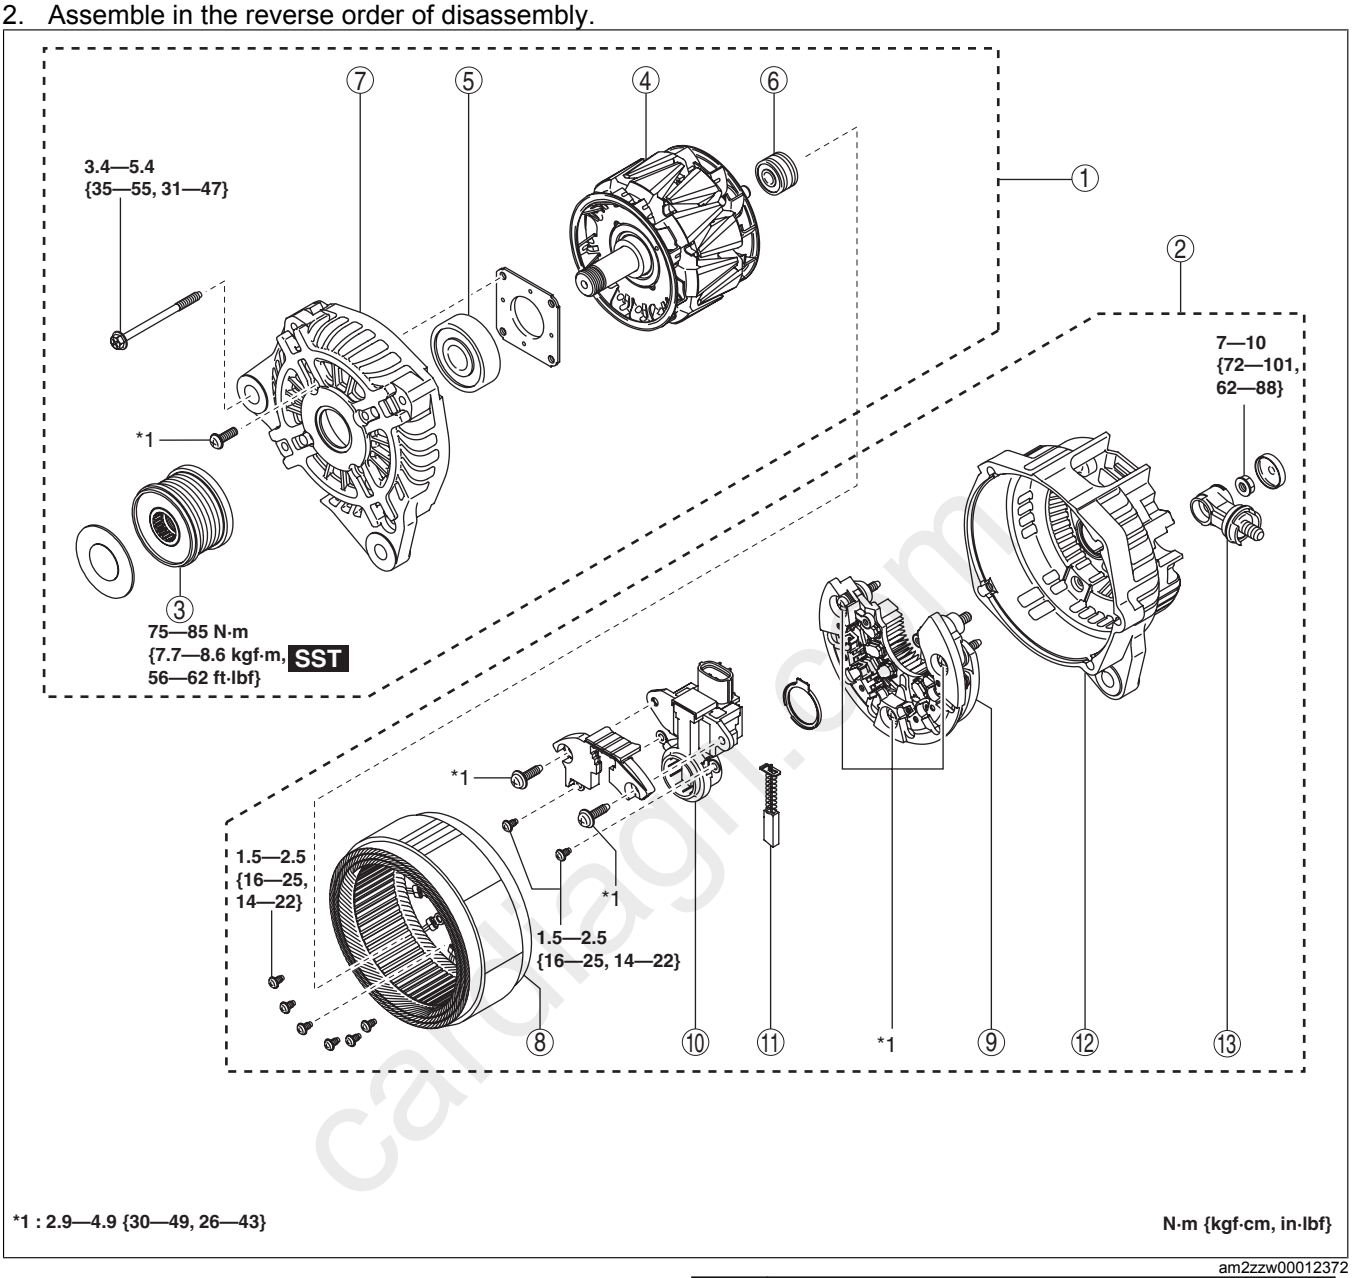

am2zzw00012372


1	Rotor component
2	Stator coil component
3	Pulley (See Pulley Disassembly/Assembly Note.)
4	Rotor
5	Front bearing
6	Rear bearing
7	Front cover
8	Stator coil

9	Rectifier
10	Regulator component
11	Brush (See Brush Disassembly Note.) (See Brush Assembly Note.)
12	Rear cover
13	Terminal B component

carmanuals.com

Pulley Disassembly/Assembly Note

1. Disassemble/assemble the pulley using the SST.

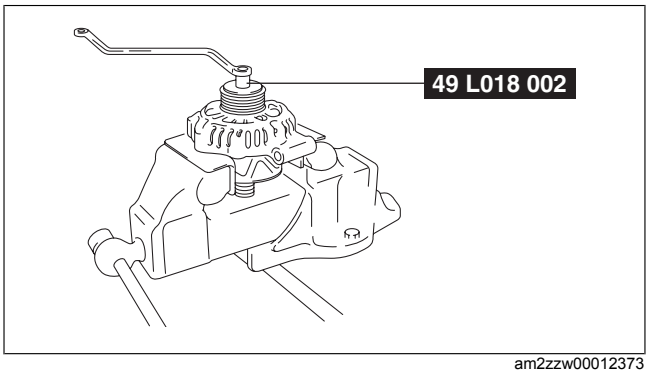


am2zzw00012373

Brush Disassembly Note

Caution

- **Melt the solder quickly, otherwise the diodes (rectifier) and regulator will be damaged by excessive heat.**

1. Melt the solder and remove the brush from the regulator component.

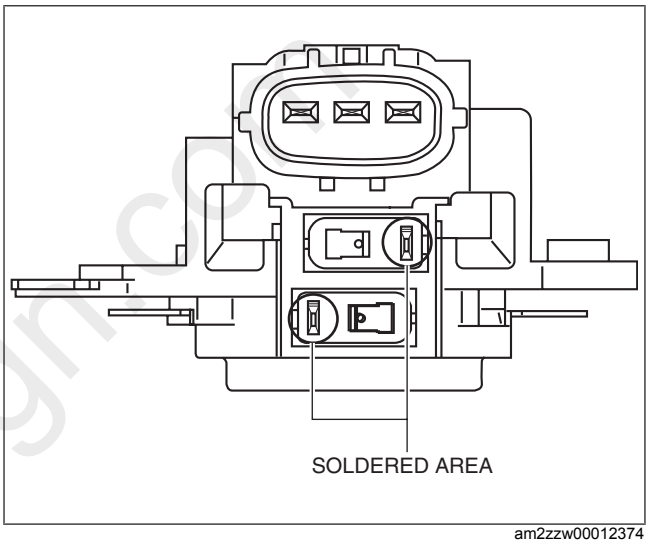


am2zzw00012374

Brush Assembly Note

Caution


- **Melt the solder quickly, otherwise the diodes (rectifier) and regulator will be damaged by excessive heat.**

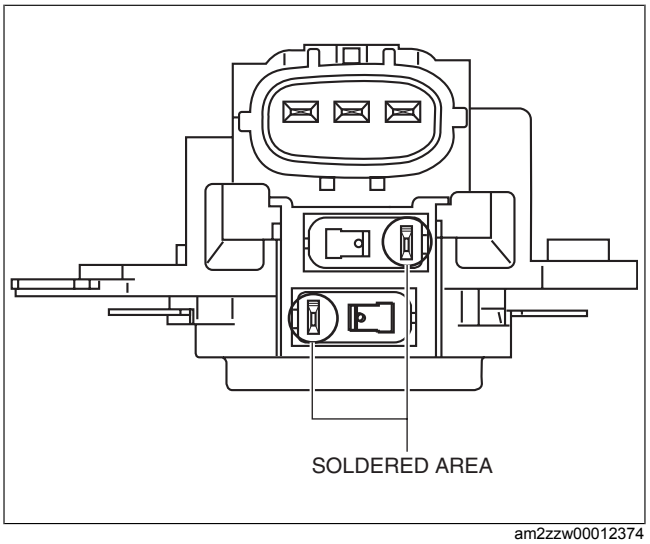

am2zzw00012374

cardiagn.com

1. Press the brush into the regulator component with it facing in the direction shown in the figure.
2. Solder the brush to the regulator component.

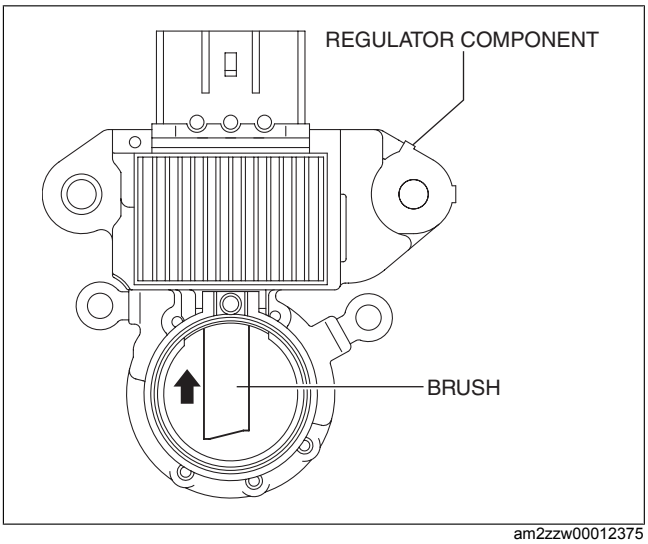

am2zzw00012375

cardiagn.com