
GENERATOR DISASSEMBLY/ASSEMBLY [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)]

id0117008004q8

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

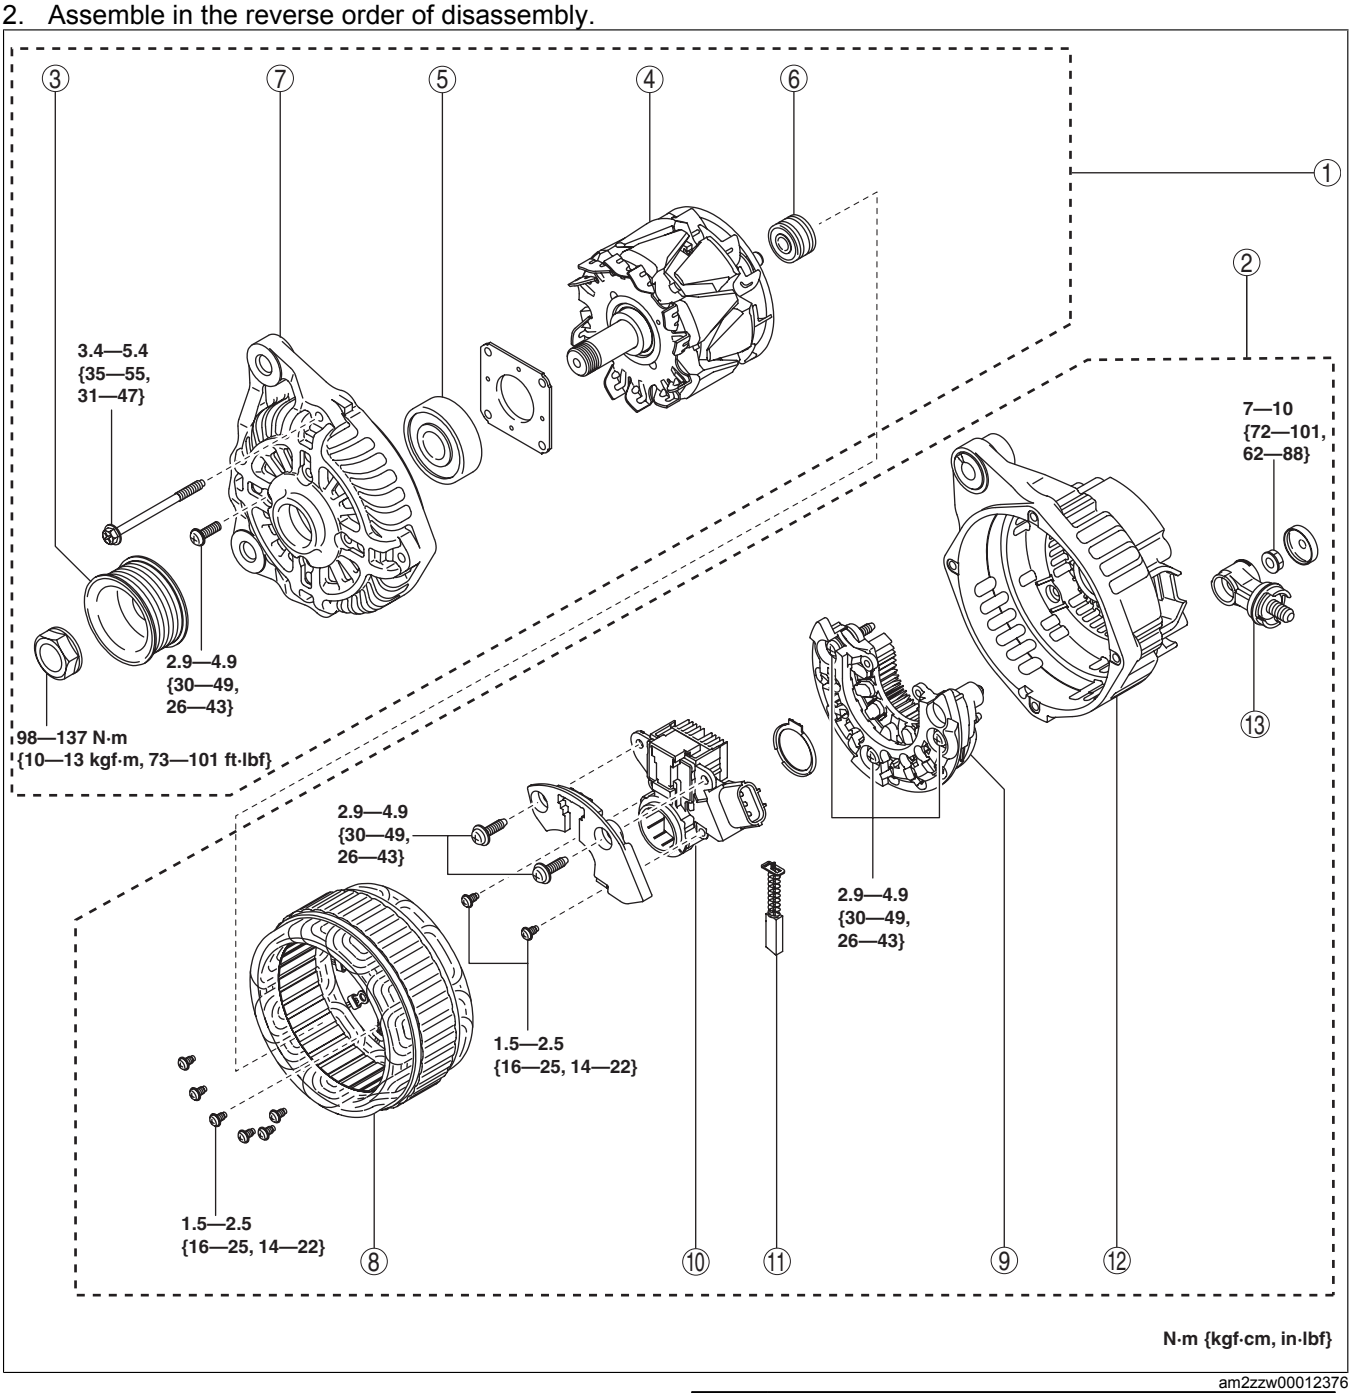

am2zzw00012376


1	Rotor component
2	Stator coil component
3	Pulley
4	Rotor
5	Front bearing
6	Rear bearing
7	Front cover
8	Stator coil

9	Rectifier
10	Regulator component
11	Brush (See Brush Disassembly Note.) (See Brush Assembly Note.)
12	Rear cover
13	Terminal B component

Brush Disassembly Note

Caution
- **Melt the solder quickly, otherwise the diodes (rectifier) and regulator will be damaged by excessive heat.**

1. Melt the solder and remove the brush from the regulator component.

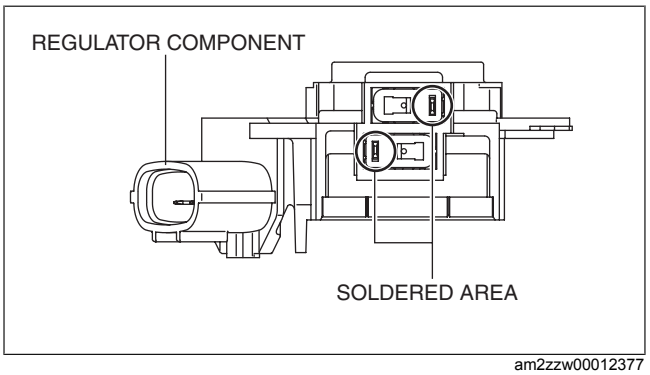


am2zzw00012377


Brush Assembly Note

Caution
- **Melt the solder quickly, otherwise the diodes (rectifier) and regulator will be damaged by excessive heat.**

1. Press the brush into the regulator component with it facing in the direction shown in the figure.
2. Solder the brush to the regulator component.

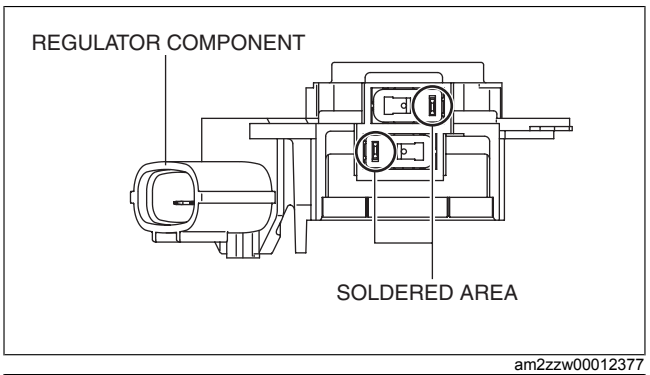

am2zzw00012377

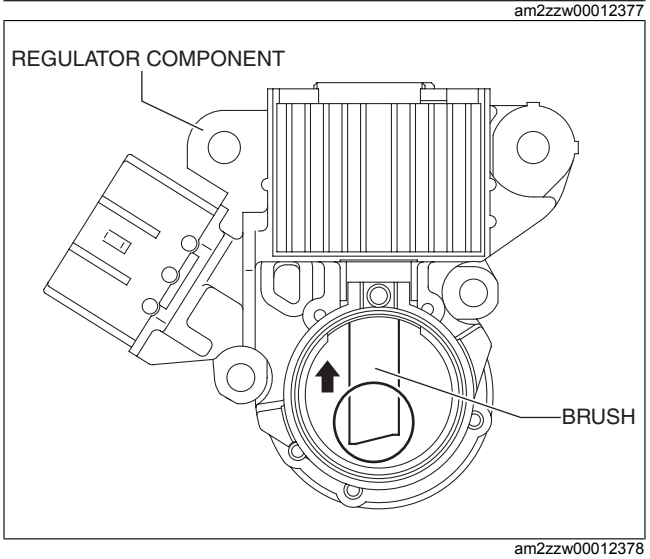

am2zzw00012378