BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0117008005q6

Operation After Replacing Battery (With i-stop)

Note


- If the battery charge/discharge flow (number of times battery can operate) exceeds the specification, a DTC is recorded and the i-stop warning light (amber) flashes. If the battery charge/discharge flow (number of times battery can operate) exceeds the specification, replace the battery with a new one.
- When replacing the battery, perform the following procedure: When replacing the PCM simultaneously, perform the PCM configuration first. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See PCM CONFIGURATION (USING READ/WRITE FUNCTION) [SKYACTIV-D 1.5].) (See PCM CONFIGURATION (USING AS-BUILT DATA) [SKYACTIV-D 1.5].)

Step	Action
1	Switch the ignition ON (engine off).
2	Shift the selector lever to the N position. (ATX) Shift the shift lever to the neutral position. (MTX)
3	Perform the following work with the brake pedal depressed. 1. Depress the accelerator pedal for 5 s or more. 2. Verify that the charging system warning light and the master warning light flash. 3. Depress and release the accelerator pedal 3 times. 4. Verify that the charging system warning light illuminates and the master warning light turns off.
4	Switch the ignition off and disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5	Verifying battery condition initialization setting (i-stop setting). (See BATTERY CONDITION INITIALIZATION SETTING (i-stop SETTING).)

Battery Removal/Installation


1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

Without i-ELOOP

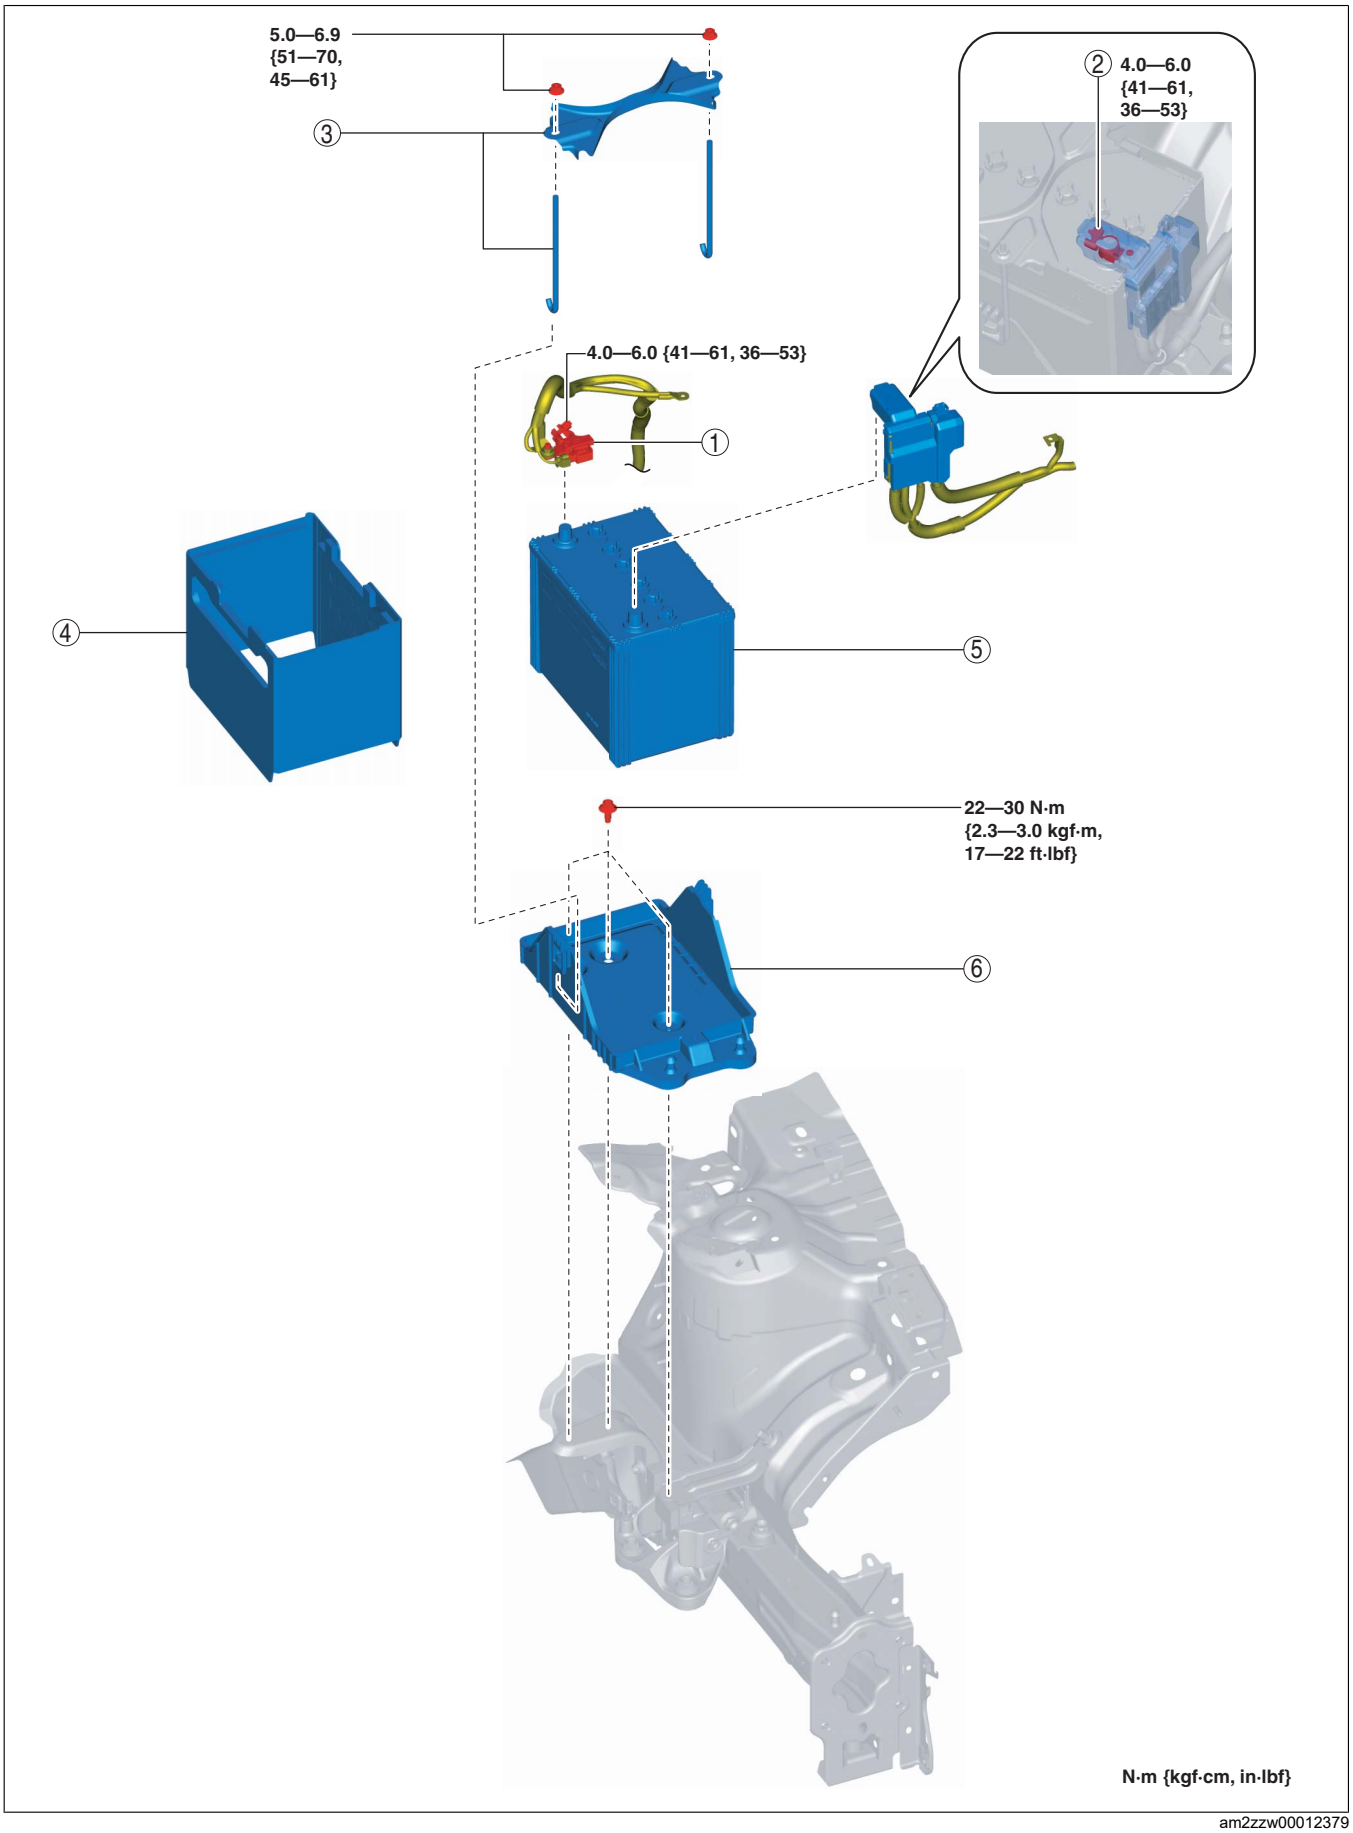

am2zzw00012379

With i-ELOOP

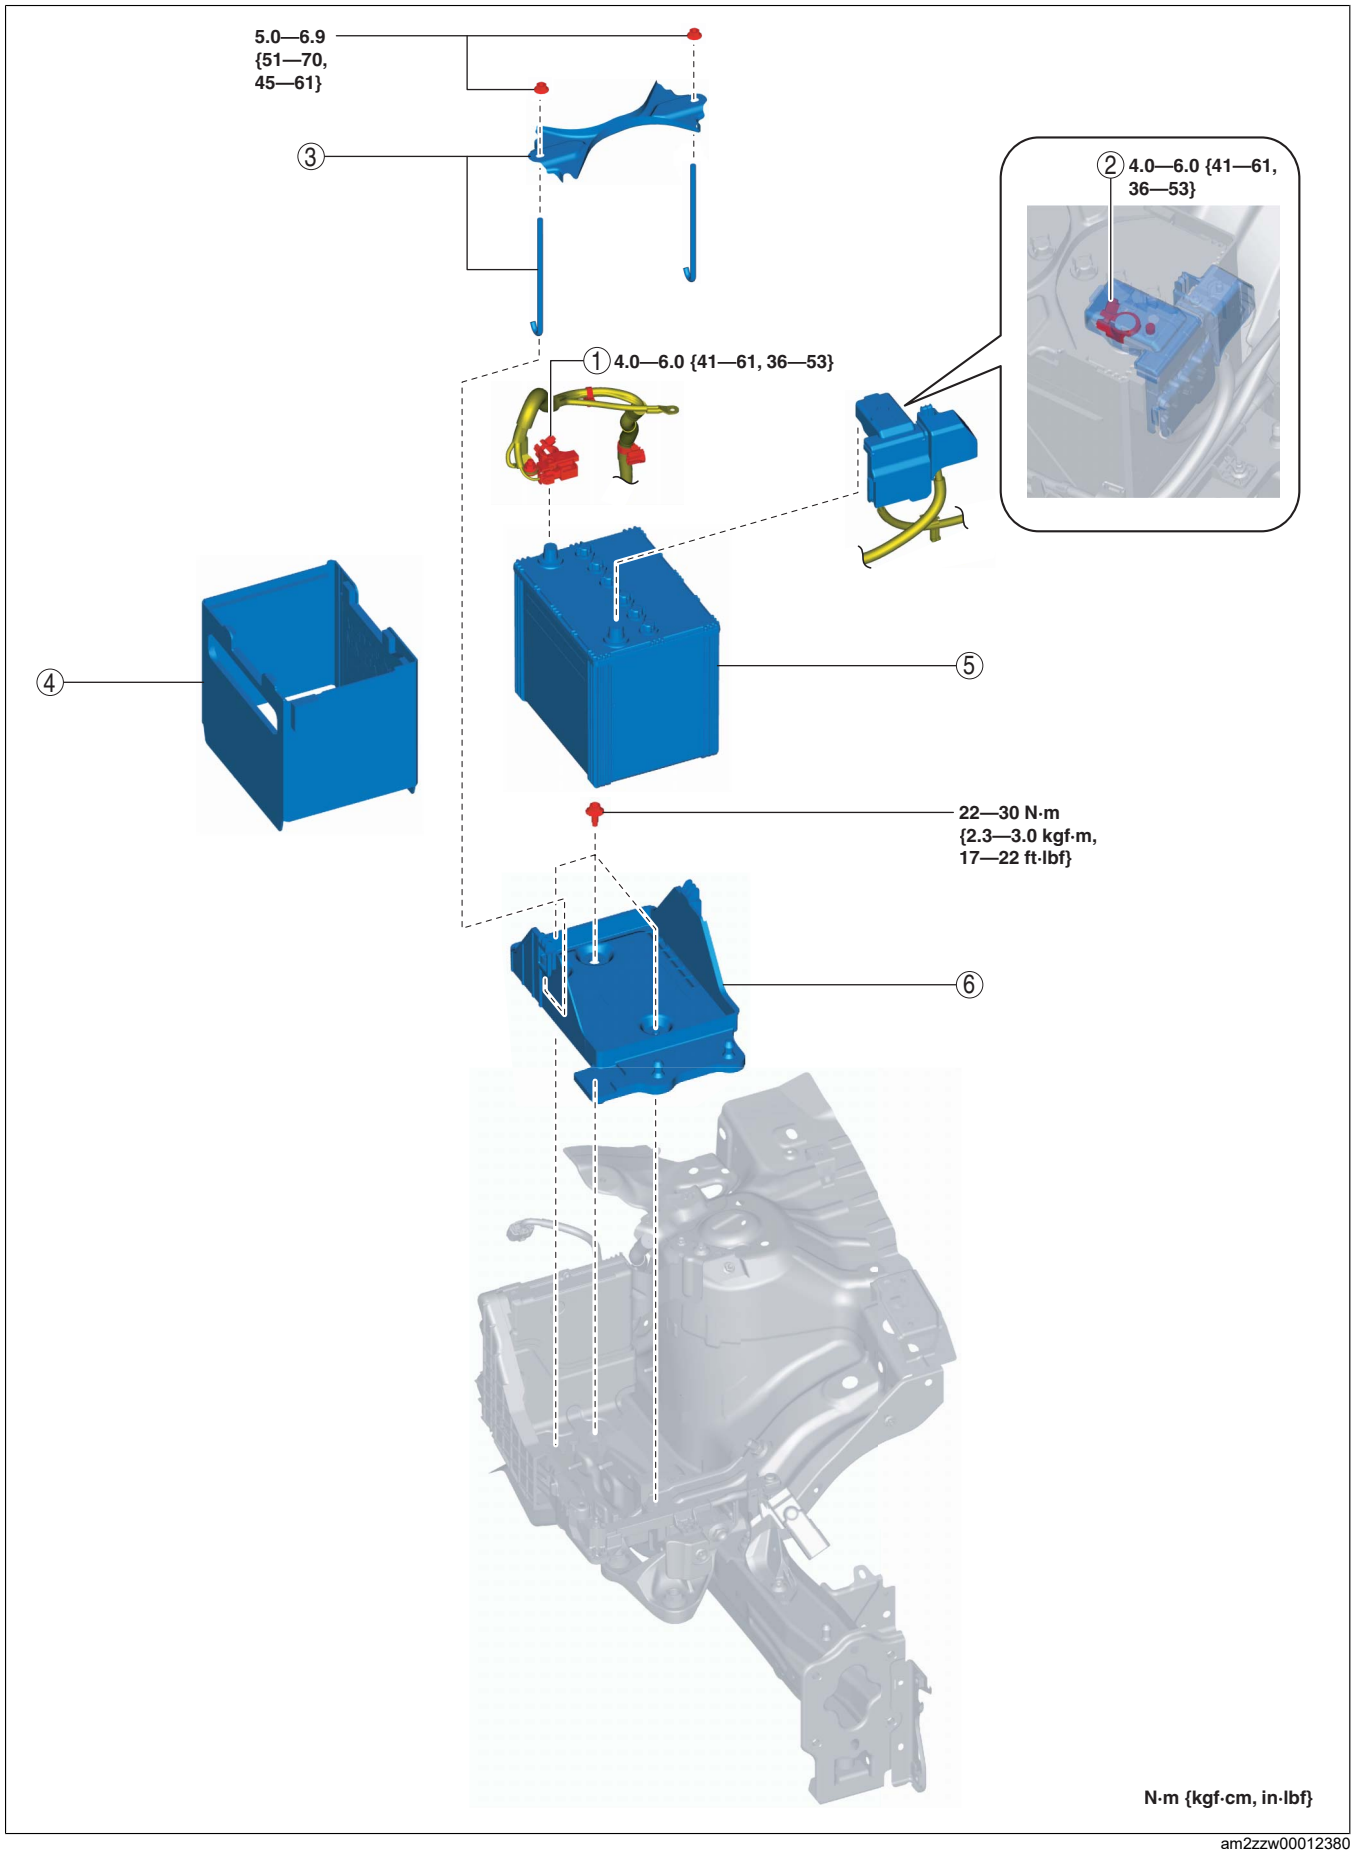


am2zzw00012380

1	Negative battery cable (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) (See Negative battery cable connection note.)
2	Positive battery cable
3	Battery clamp
4	Battery box (See Battery box installation note.)
5	Battery
6	Battery tray (See Battery tray removal note.)


Battery tray removal note

1. Remove the battery tray using the following procedure:
   (1) Remove the two fresh air duct bolts shown in the figure.

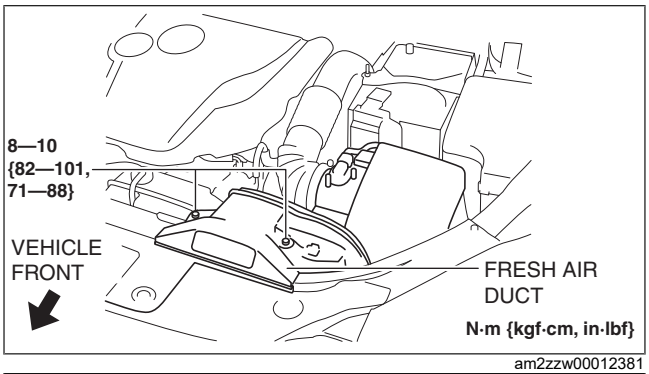


am2zzw00012381

   (2) Lightly lift the air cleaner component and set the battery tray aside as shown in the figure.

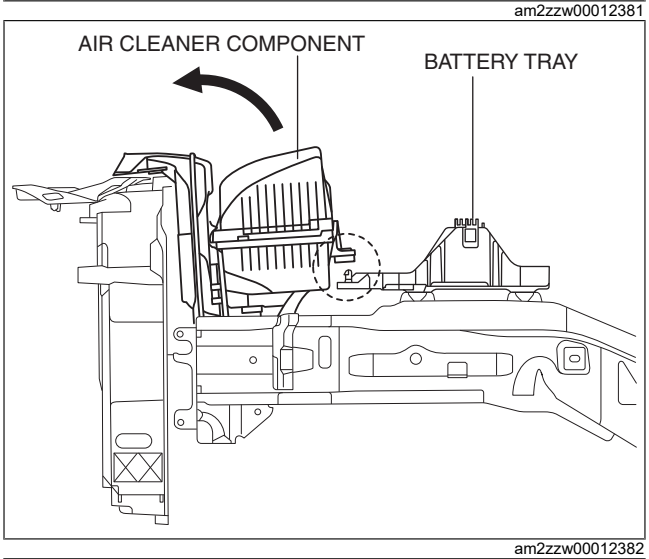


am2zzw00012382

   (3) Remove the wiring harness clip shown in the figure from the battery tray. (Without i-ELOOP)

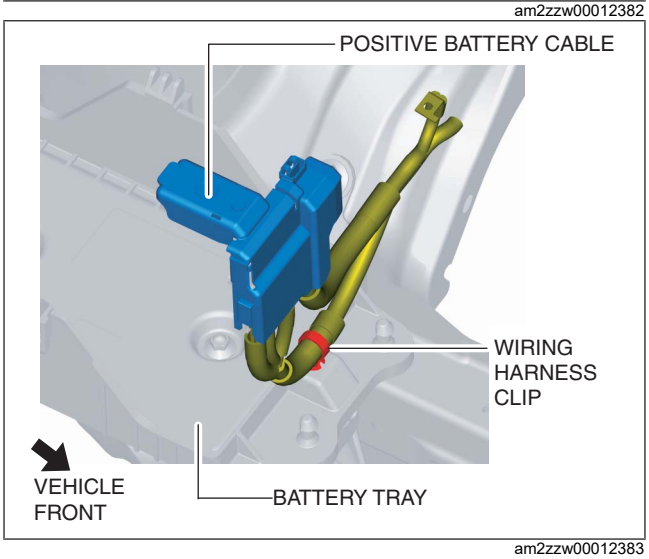

am2zzw00012383


(4) Remove the nuts and set the cable away from the battery tray. (With i-ELOOP)
(5) Remove the battery tray.

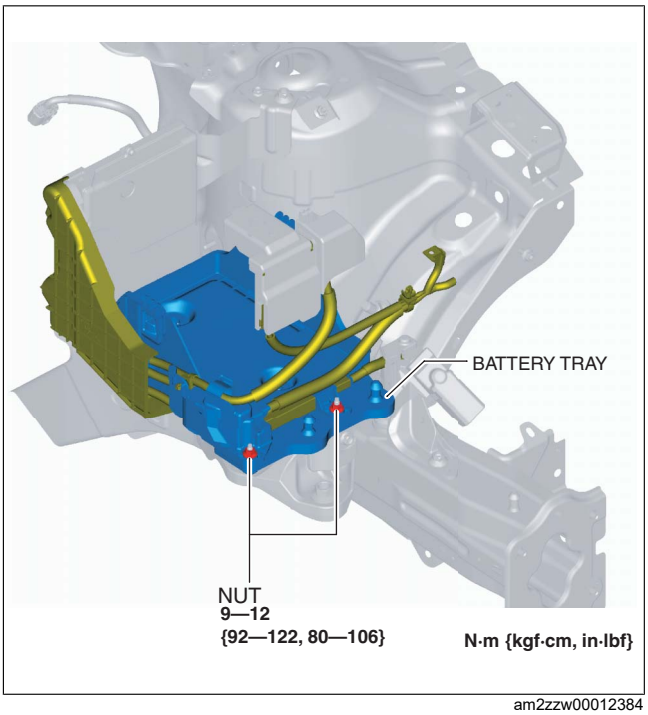

am2zzw00012384

Battery box installation note


1. Install the battery box so that the side with the larger notch is pointed at the engine side.

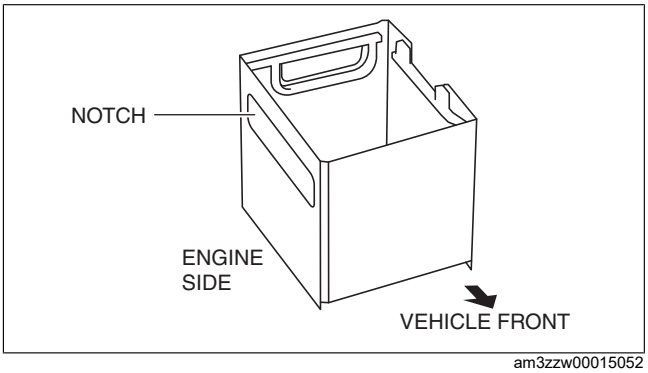

am3zzw00015052

Negative battery cable connection note

1. Connect the negative battery cable with the current sensor and the battery parallel to each other.

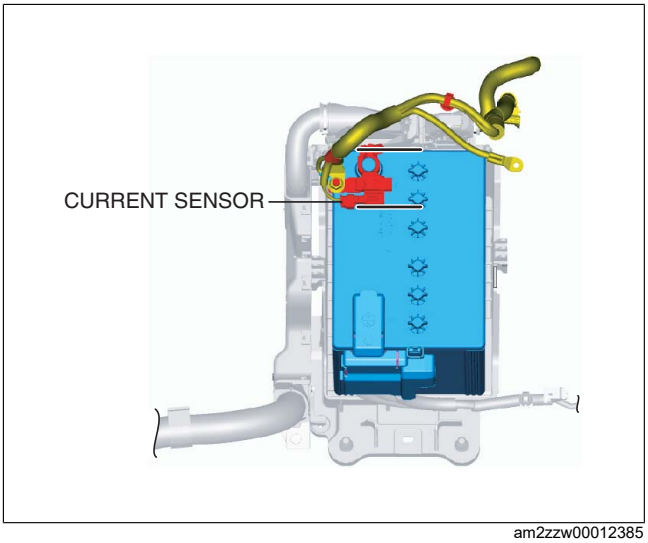

am2zzw00012385