DC-DC CONVERTER [WITHOUT i-ELOOP (SKYACTIV-D 1.5)]


id0117q60045j8

Purpose, Function

- When the engine is restarted by the i-stop control, the battery voltage temporarily decreases to operate the starter. Pressure is increased to maintain the voltage for vehicle electrical devices at that time.

Construction


- The DC-DC converter is located on the vehicle's left front part (lower part of front combination light).

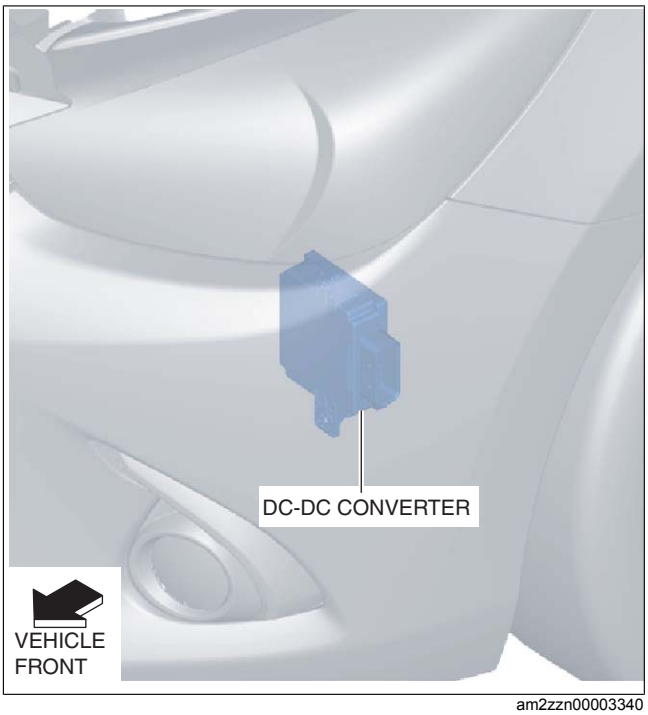

am2zzn00003340

Operation

- The battery voltage increases based on the control signal from the PCM.

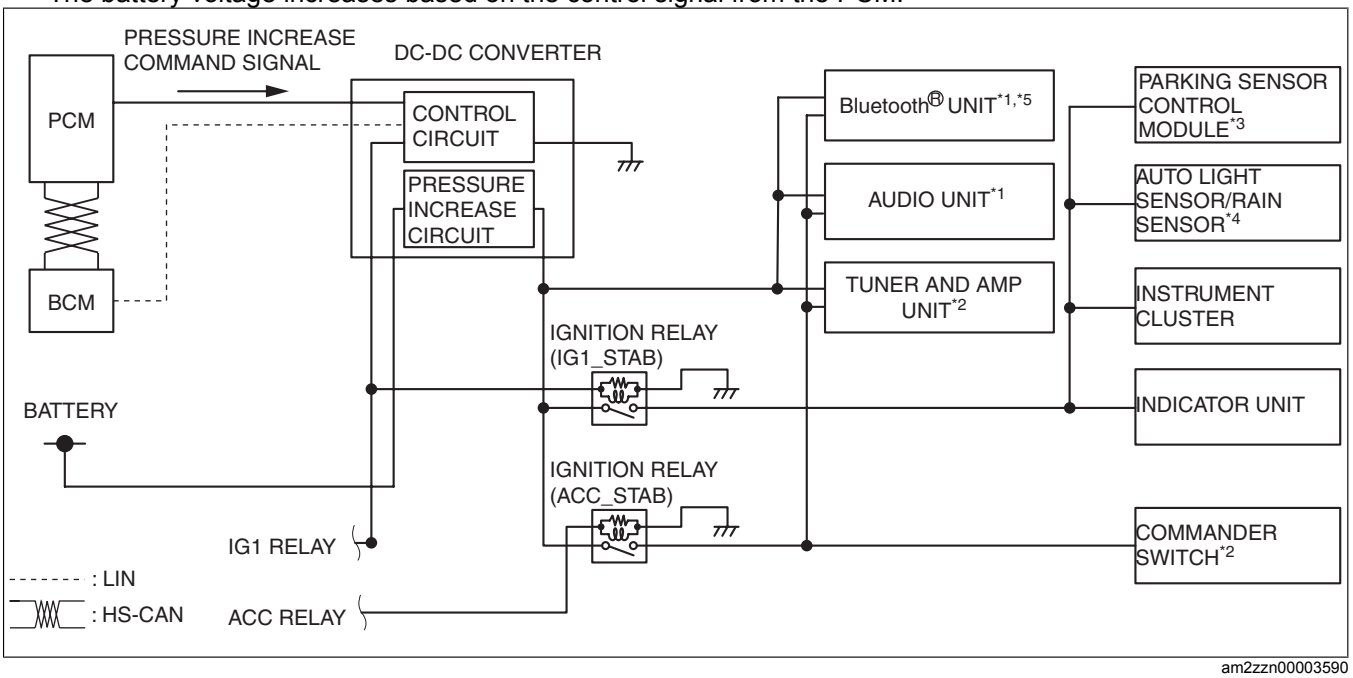

am2zzn00003590

*1 : Without center display
*2 : With center display
*3 : With parking sensor system
*4 : With auto wiper system/auto light system
*5 : With Bluetooth® system

- For details of the DC-DC converter control, refer to CONTROL SYSTEM. (See DC-DC CONVERTER CONTROL [SKYACTIV-D 1.5].)

Fail-safe
- Not applicable