BATTERY [SKYACTIV-D 1.5]


id0117q6185200

Purpose, Function

- The battery stores electricity generated by the generator. In addition, it supplies power to electronic devices if necessary.

Construction

- The battery is located in the engine compartment (vehicle left).

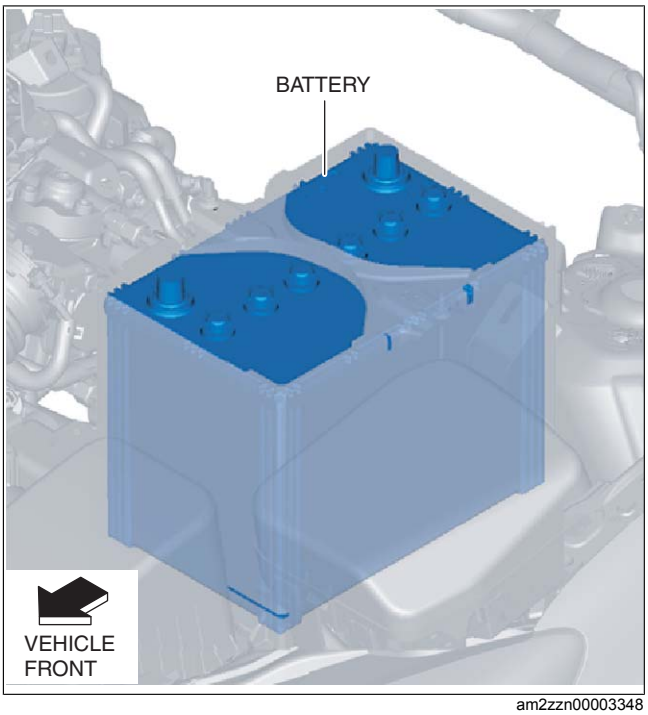

am2zzn00003348

Fail-safe

DTC No.	Fail-safe function
P2502:00	• Inhibits engine-stop by operating the i-stop function.
P2503:00	
P2504:00	
P2507:00	