DC-DC CONVERTER [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)]

id0117q70045q8


Vehicle with i-stop

Purpose, Function

- When the engine is restarted by the i-stop control, the battery voltage temporarily decreases to operate the starter. Pressure is increased to maintain the voltage for vehicle electrical devices at that time.

Construction


- The DC-DC converter is located on the vehicle's left front part (lower part of front combination light).

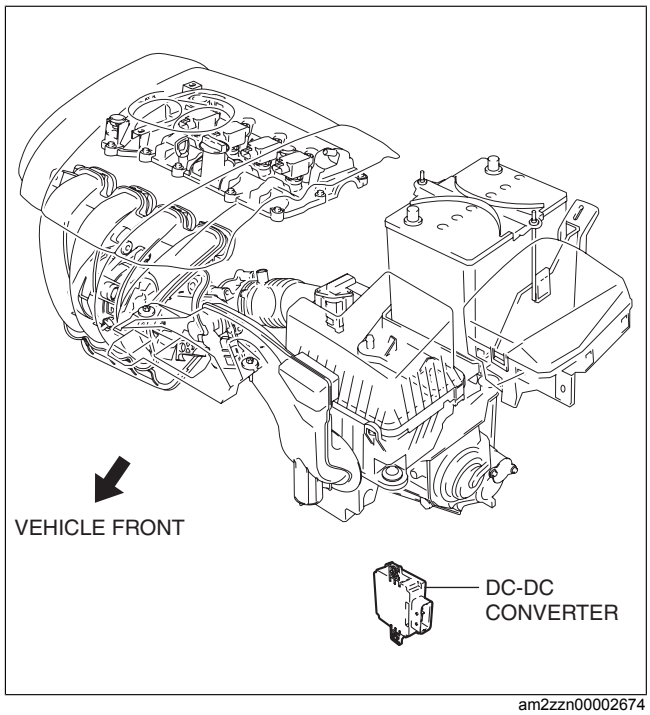

am2zzn00002674

Operation

- The battery voltage increases based on the control signal from the PCM.

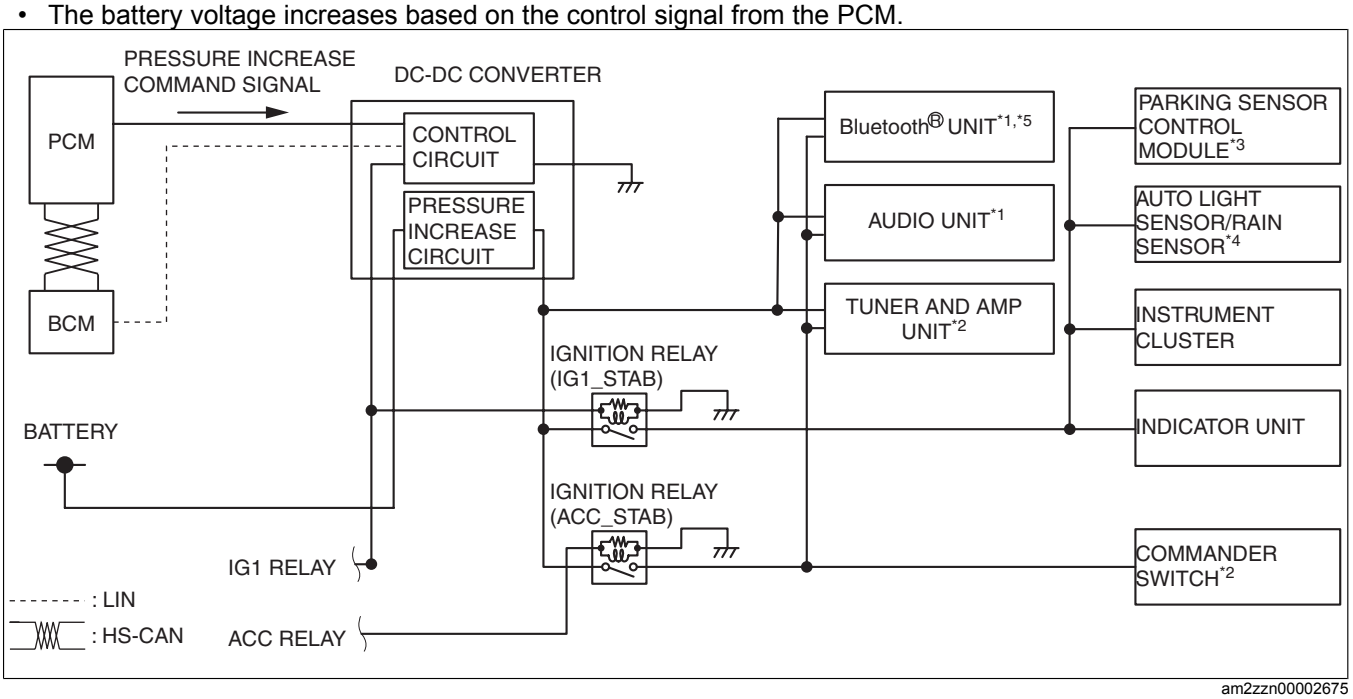

am2zzn00002675

*1 : Without center display

*2 : With center display

*3 : With parking sensor system

*4 : With auto wiper system/auto light system

*5 : With Bluetooth® system

- For details of the DC-DC converter control, refer to CONTROL SYSTEM. (See DC-DC CONVERTER CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Fail-safe

DTC	Fail-safe
P0A8D:00	• Inhibits engine-stop by operating the i-stop function. (With i-stop)
P0A94:00	
U0298:00	