GENERATOR [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)]


id0117q71043q8

Purpose, Function

- The generator operates by obtaining drive force from the engine via the drive belt and generates the required electricity for electronic devices.


Construction

- The generator is located on the left front side of the engine.
- Output control is performed by the PCM resulting in the elimination of the IC regulator and the simplification of the construction.

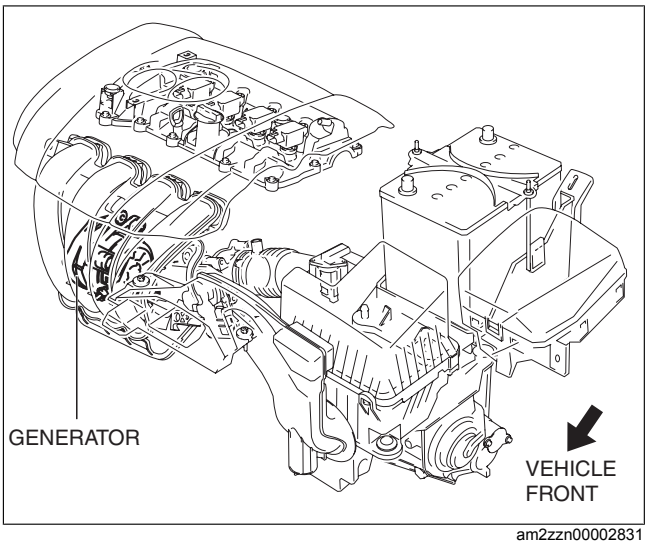


am2zzn00002831

- Two delta connection type stator coils have been adopted.

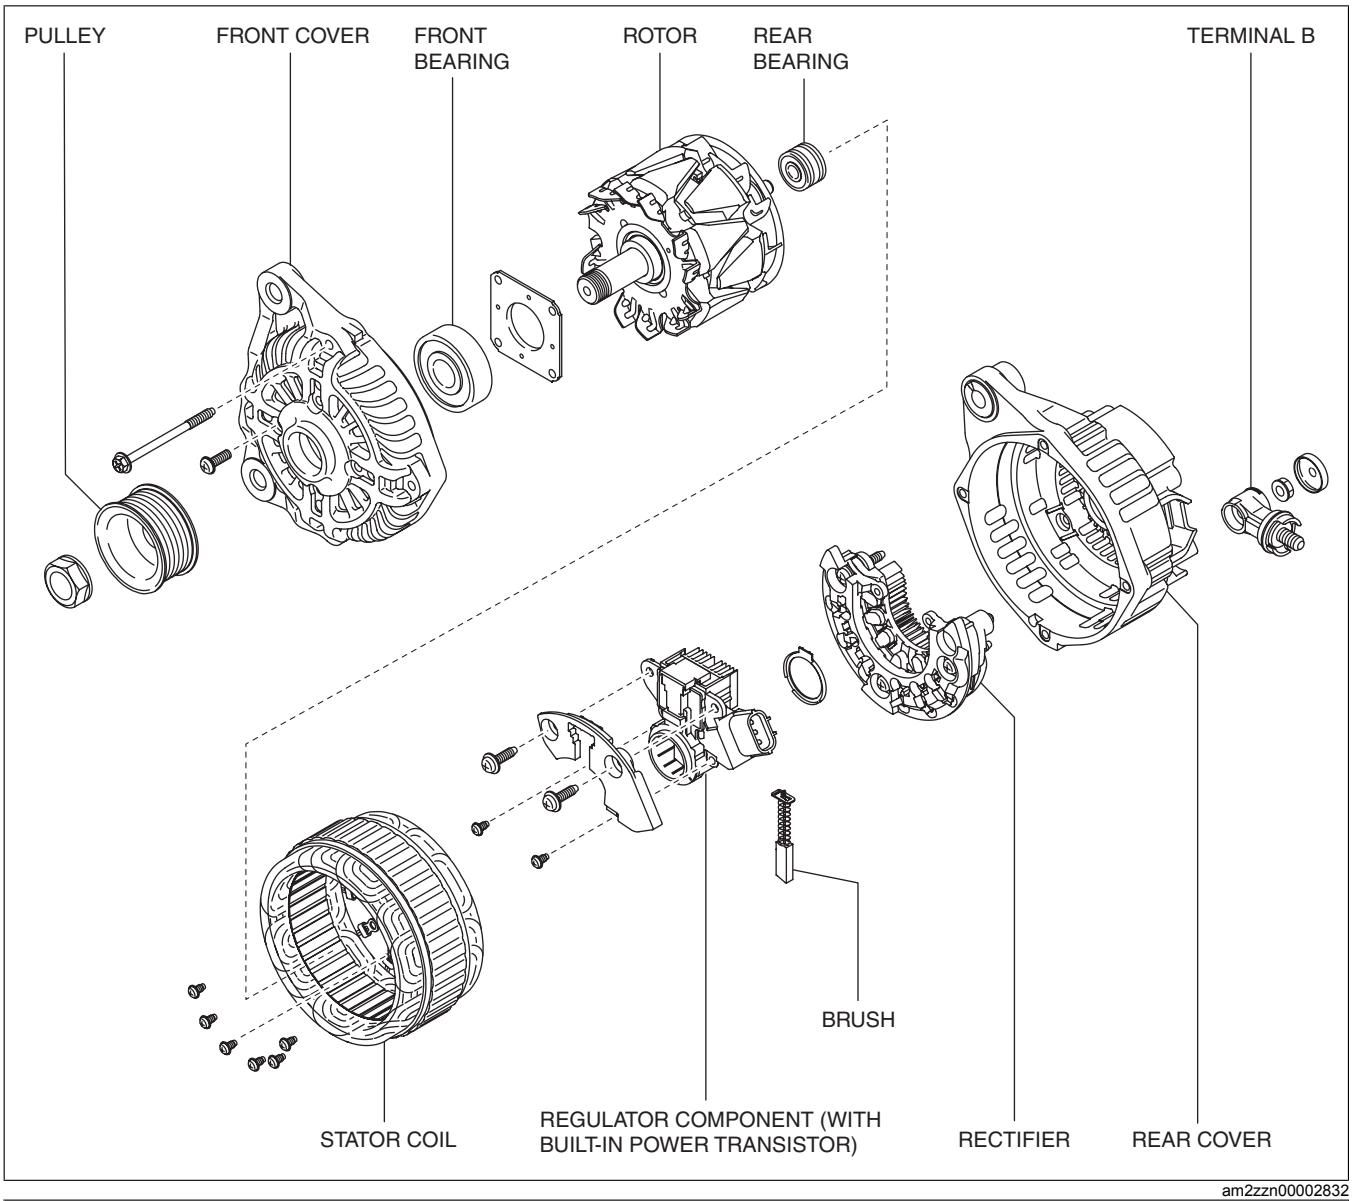


am2zzn00002832

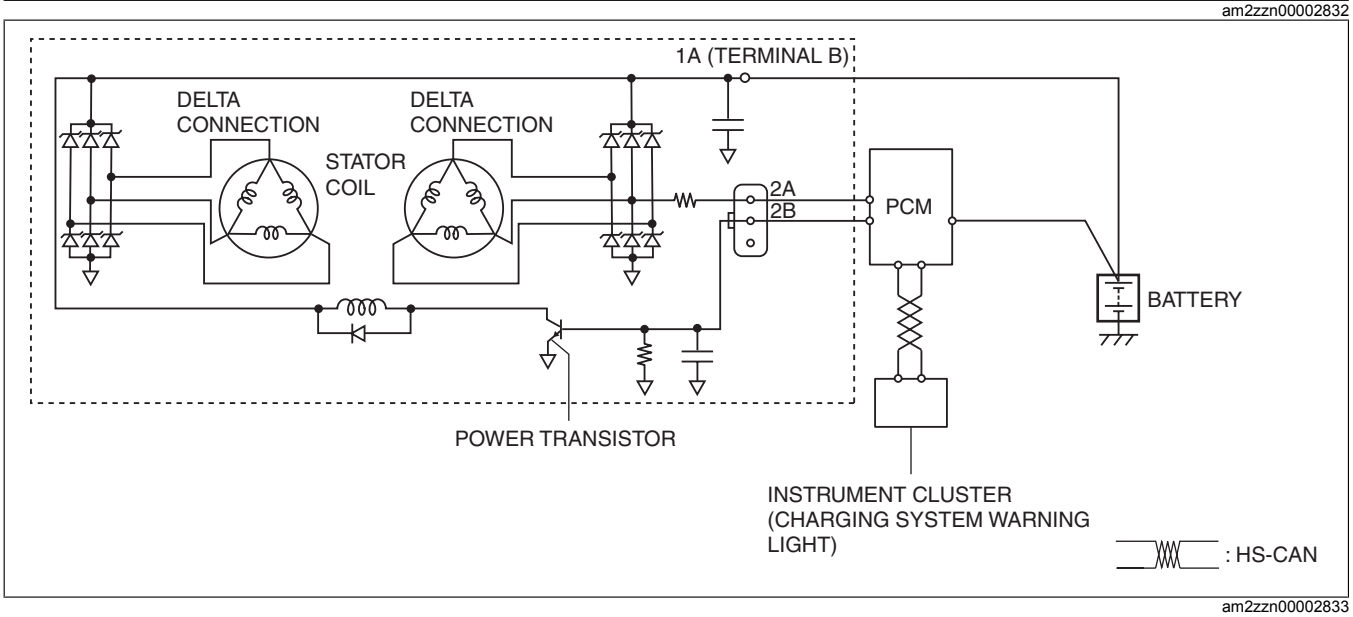


am2zzn00002833

- The two stator coils form the circuit having a phase difference, and magnetic pull, which operates between the rotor and stator coil by the phase difference, is theoretically eliminated. Due to this, electromagnetic vibration and generator operation noise (electromagnetic noise) have been reduced.

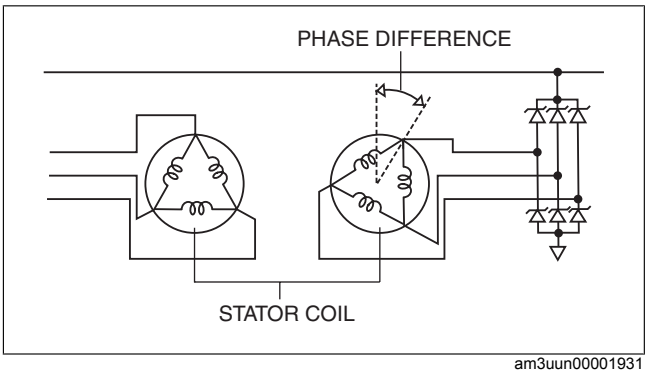

am3uun00001931

- Pulsation occurring through voltage rectifying using two stator coils having a phase difference is minimized and stable voltage output is supplied.

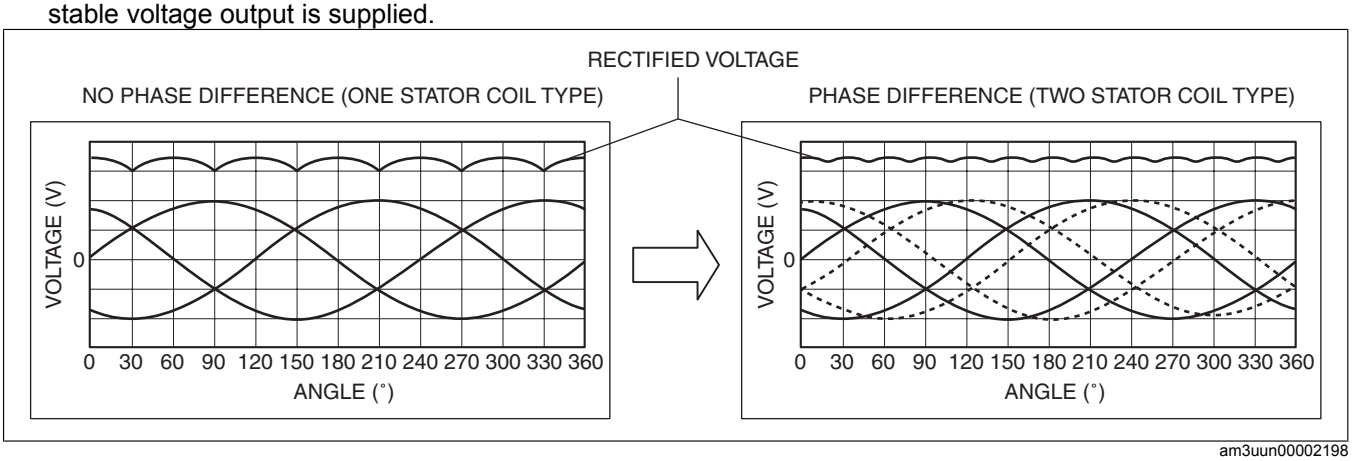

am3uun00002198

Operation

- For generator control details, refer to CONTROL SYSTEM. (See GENERATOR CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Fail-safe

DTC	Fail-safe
P2502:00	• Inhibits engine-stop by operating the i-stop function. (With i-stop) • Generator control is inhibited.
P2503:00	
P2504:00	