BATTERY [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0117q7185200

Purpose, Function

- The battery stores electricity generated by the generator. In addition, it supplies power to electronic devices if necessary.

Construction

- The battery is located in the engine compartment (vehicle left).

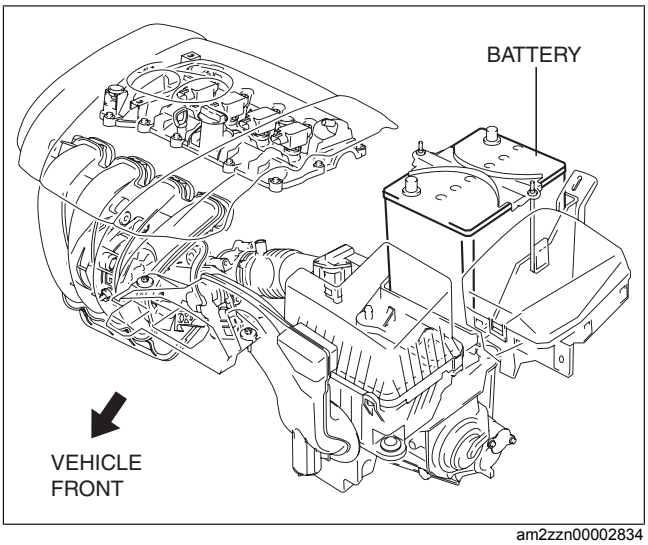

am2zzn00002834

Fail-safe

DTC	Fail-safe
P057F:00	• Inhibits engine-stop by operating the i-stop function. (With i-stop) • Inhibits the i-ELOOP control. (With i-ELOOP)
P0A8D:00	• Inhibits engine-stop by operating the i-stop function. (With i-stop)
P0A8F:00	• Inhibits engine-stop by operating the i-stop function. (With i-stop) • Inhibits the i-ELOOP control. (With i-ELOOP)