
IGNITION COIL/ION SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0118i4811200

Note
- The ignition coil for the SKYACTIV-G 1.3 and SKYACTIV-G 1.5 (with 4-1 exhaust system) engines does not have a built-in ion sensor.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

1	Connector
2	Ignition coil/ion sensor

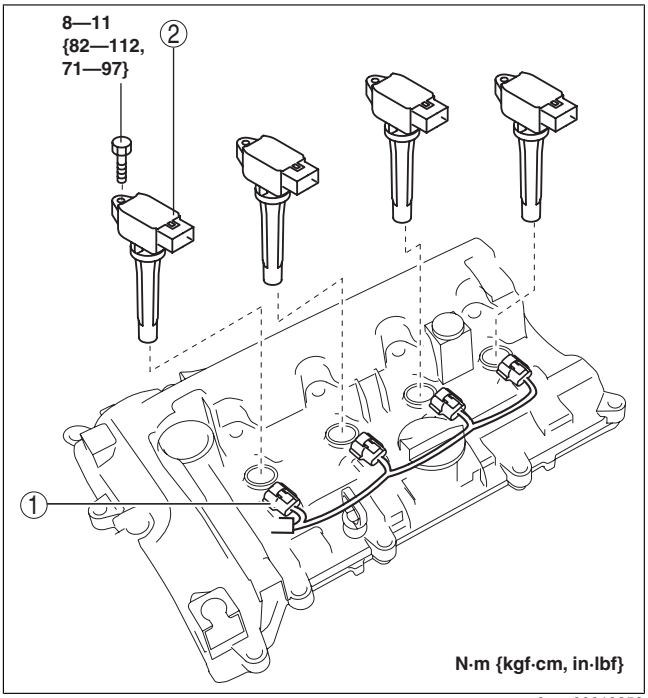

am6zzw00010252