IGNITION COIL [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0118q3000100

Purpose, Function

- The ignition coil generates high voltage required for ignition by electromagnetic induction.

Construction

- The ignition coil is located on the upper part of the spark plug. (Direct ignition coil)
- With the adoption of the direct ignition coil, transmission path from the ignition coil to the spark plug has been simplified. Due to this, voltage required for ignition can be suppressed and ignition performance of the spark plug is stabilized.
- The ignition coil is built into the igniter and ion sensor. (SKYACTIV-G 1.5 (with 4-2-1 exhaust system))
  For the ion sensor, refer to CONTROL SYSTEM. (See ION SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

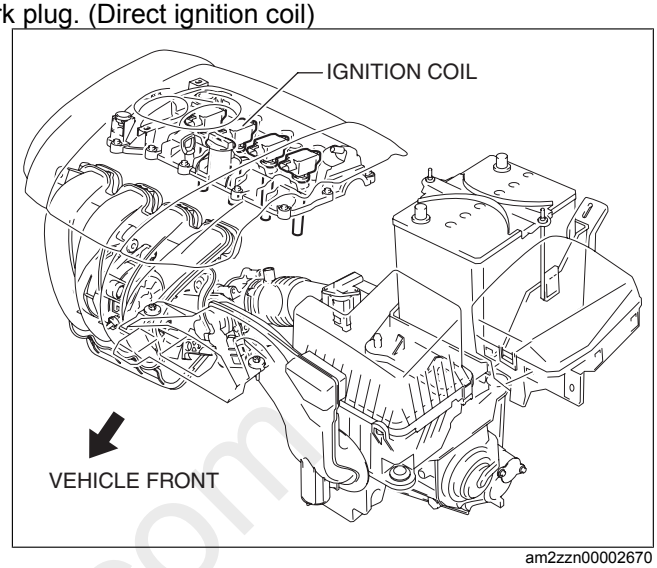


am2zzn00002670

Operation

- Current to the ignition coils is blocked and high voltage is generated at the optimum timing according to the driving conditions by the PCM ignition control.


SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

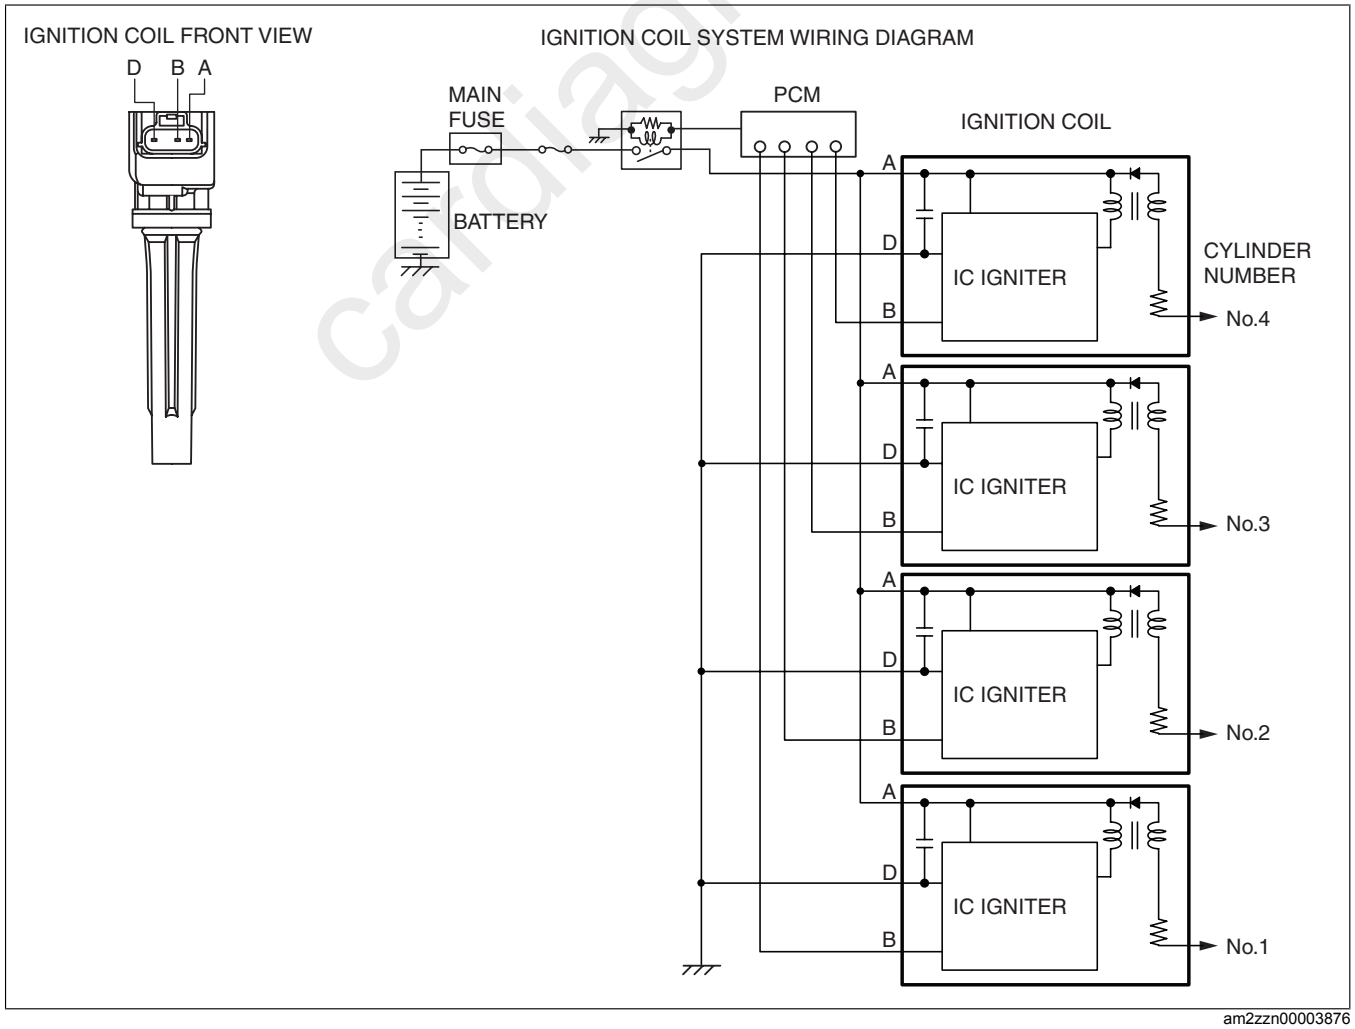

am2zzn00003876

carmanuals.com

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

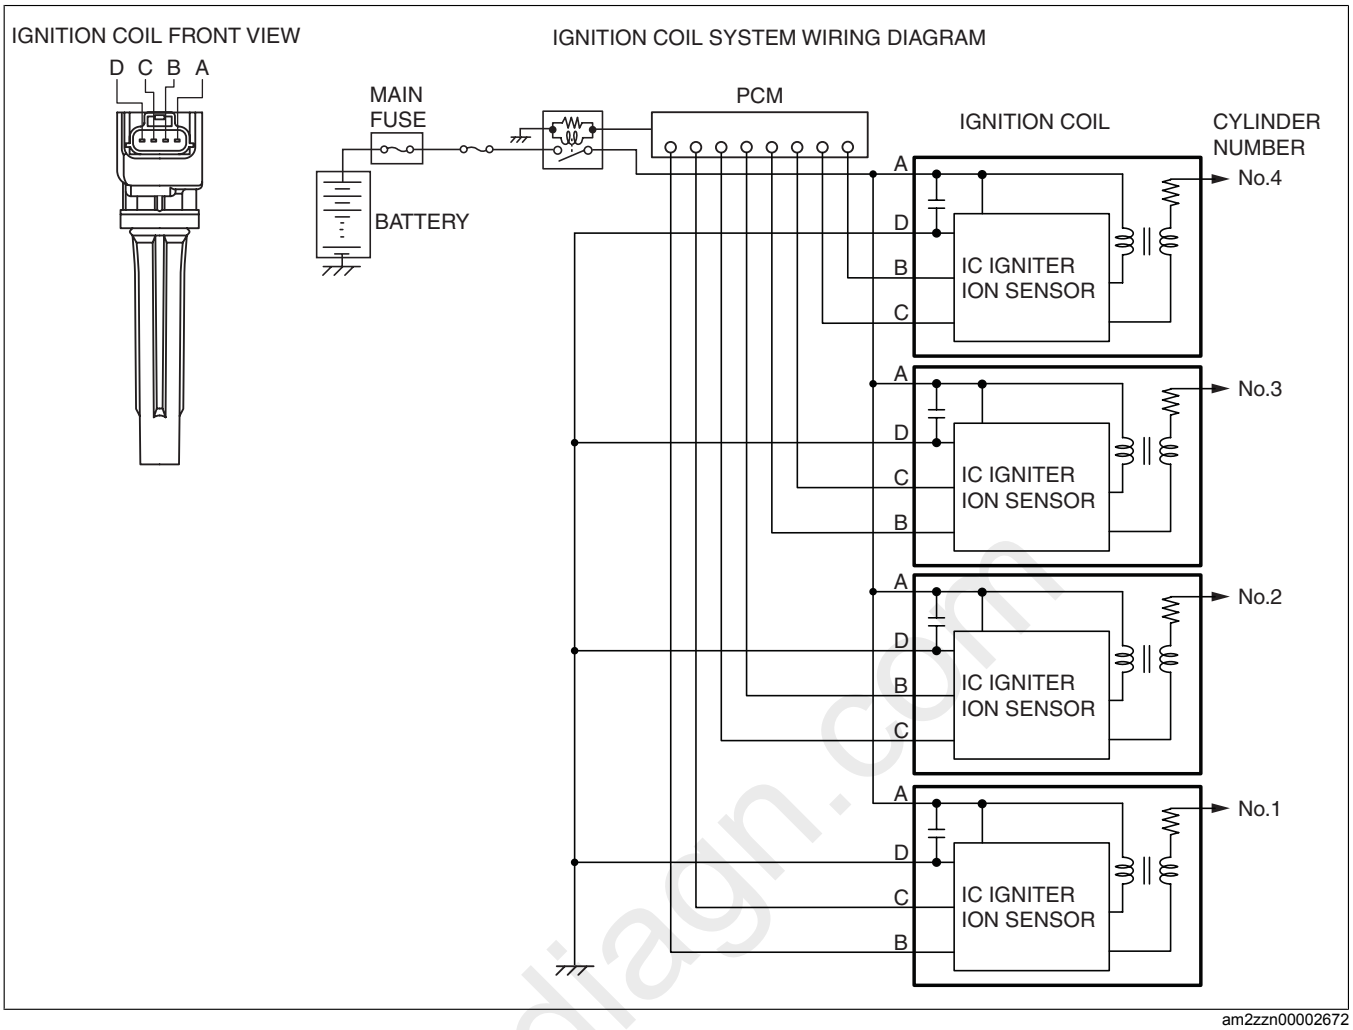

am2zzn00002672

Fail-safe

DTC	Fail-safe
P0300:00	• Limits intake air amount. • Implement fuel-cut control (if the catalytic converter may be damaged, perform fuel-cut on cylinder misfiring the most).
P0301:00 P0302:00 P0303:00 P0304:00	

cardiagn.com