
STARTER DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0119i7104500

Without i-stop Only

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

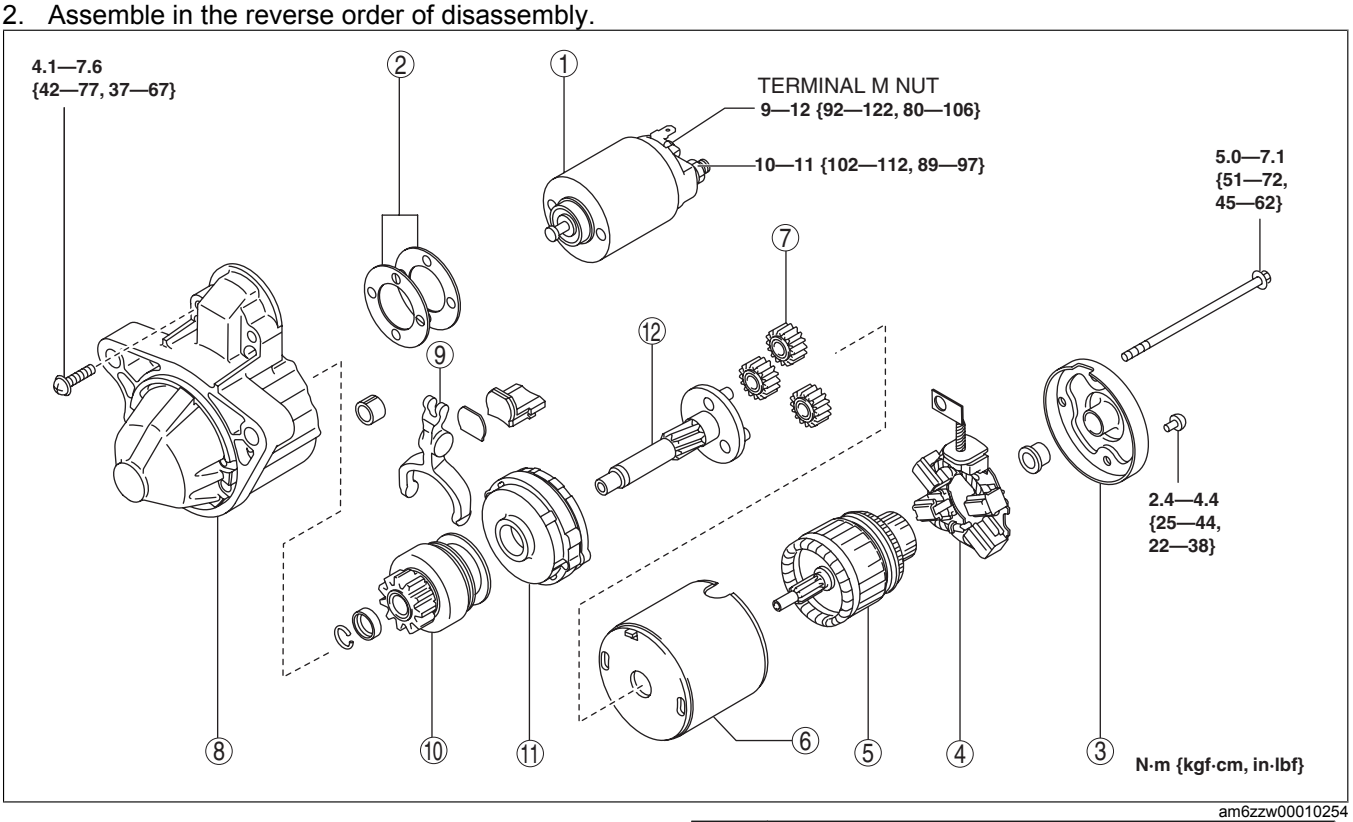

am6zzw00010254

1	Magnetic switch
2	Adjustment washer
3	Rear housing
4	Brush and brush holder
5	Armature
6	Yoke
7	Planetary gear

8	Front cover
9	Lever
10	Drive pinion
11	Internal gear
12	Gear shaft