STARTER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0119i7800200

Operation After Replacing Starter (With i-stop)

Note

- If the number of times the starter can operate exceeds the limit, or there is any malfunction of the i-stop system-related parts, the i-stop warning light (amber) flashes.In addition, DTCs are stored simultaneously.
- To ensure reliability of the i-stop system, replace the starter with a new one if the number of times the starter can operate has exceeded the upper limit.
- When replacing the starter, perform the following procedure: When replacing the PCM simultaneously, perform the PCM configuration first. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM CONFIGURATION (USING READ/WRITE FUNCTION) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM CONFIGURATION (USING AS-BUILT DATA) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)


Step	Action
1	**Note** • Perform the procedures from Step 1 to 5 within 2 min. — If the operation exceeds 2 min, switch the ignition off and repeat the procedures from Step 1. Switch the ignition ON (engine off).
2	Apply the parking brake firmly.
3	Shift the selector lever to the N position. (ATX) Shift the shift lever to the neutral position. (MTX)
4	Perform the following work with the brake pedal depressed. 1. Depress and release the accelerator pedal 6 times. 2. Verify that the i-stop indicator light (green) flashes. • If the light does not flash, switch the ignition off and repeat the procedure from Step 1. 3. Depress and release the accelerator pedal 6 times. 4. Verify that the i-stop indicator light (green) changes from flashing to illumination. • If the light does not change to illumination, switch the ignition off and repeat the procedure from Step 1.
5	Long-press the i-stop OFF switch. Wait until the i-stop indicator light (green) turns off (for 5 s or more). • If the light does not turn off, switch the ignition off and repeat the procedure from Step 1.
6	Switch the ignition off.
7	Start the engine.
8	Verify that the i-stop warning light (amber) turns off. • If the light does not turn off, switch the ignition off and repeat the procedure from Step 1.
9	Switch the ignition off and disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
10	Verifying battery condition initialization setting (i-stop setting). (See BATTERY CONDITION INITIALIZATION SETTING (i-stop SETTING).)

Starter Removal/Installation

Warning

- **Remove and install all parts when the engine is cold, otherwise they can cause severe burns or serious injury.**
- **When the battery cables are connected, touching the vehicle body with starter terminal B will generate sparks. This can cause personal injury, fire, and damage to the electrical components. Always disconnect the negative battery cable before performing the following operation.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

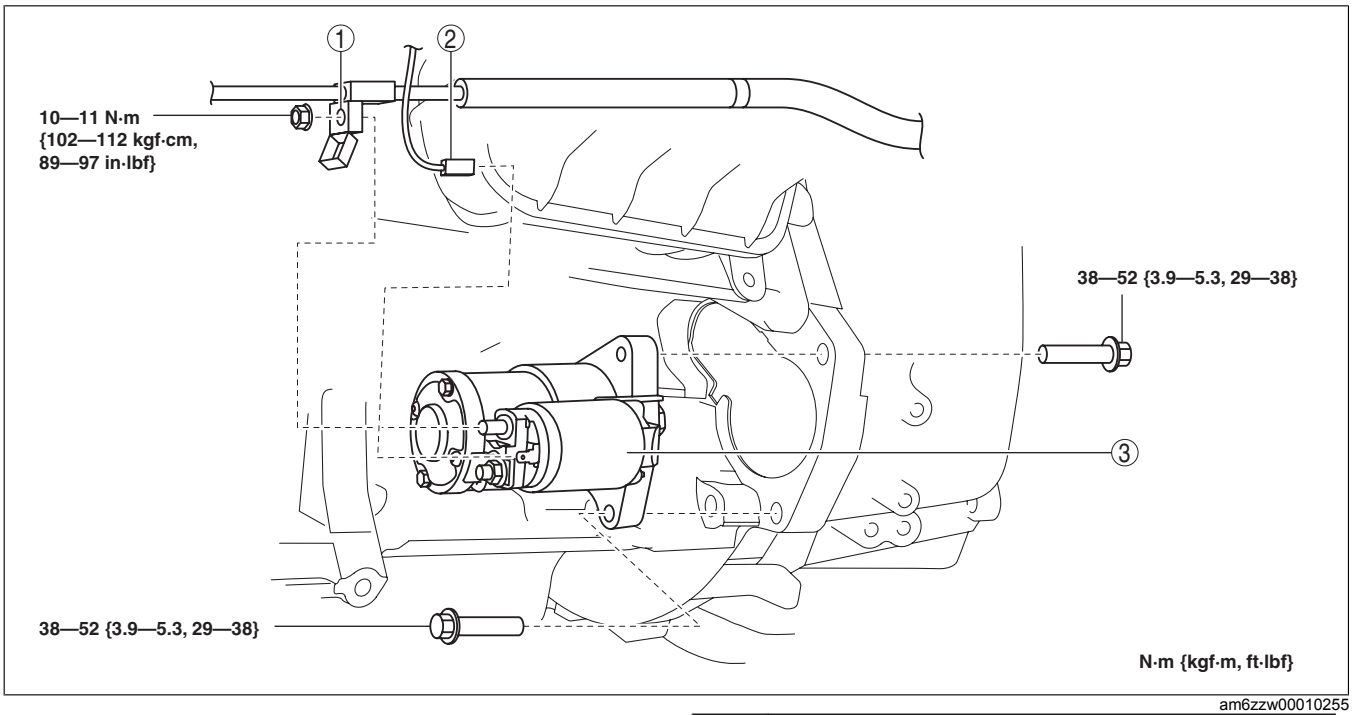

am6zzw00010255


1	Terminal B cable
2	Terminal S connector

3	Starter (See Starter installation note (ATX).)

Starter installation note (ATX)

Caution

- **Do not overlap the starter with the end plate (area A shown in figure) when installing. If the starter is not correctly installed, the nut installed to the drive plate may contact the end plate causing abnormal noise.**

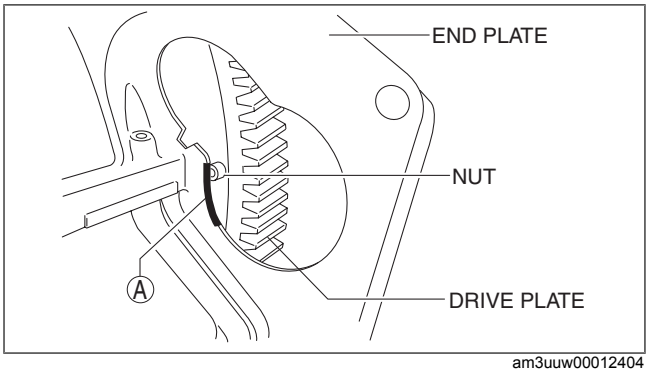

am3uuw00012404