STARTER INTERLOCK SWITCH INSPECTION [SKYACTIV-D 1.5]

id0119q2104200

Caution

- **Do not reuse the starter interlock switch if it is removed from the vehicle even once. Replace with a new starter interlock switch when installing.**


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Disconnect the starter interlock switch connector.
3. Verify that the continuity is as indicated in the table using a ohmmeter.

○—○ : Continuity

Condition	Terminal	
	A	B
Clutch pedal is depressed	○	○
Clutch pedal is not depressed		

am2zzw00012338

- If the continuity is not as indicated in the table, replace the starter interlock switch. (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [F66M-R].)

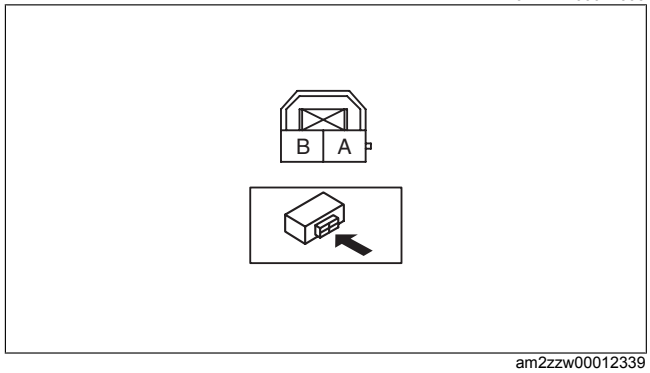

am2zzw00012339