STARTER INTERLOCK SWITCH [SKYACTIV-D 1.5]


id0119q2133000

Purpose, Function

- The starter interlock switch mechanism prevents vehicle surge when the engine is started, enhancing safety. The engine cannot be started unless the clutch is depressed.

Construction


- The starter interlock switch is located on the clutch pedal.

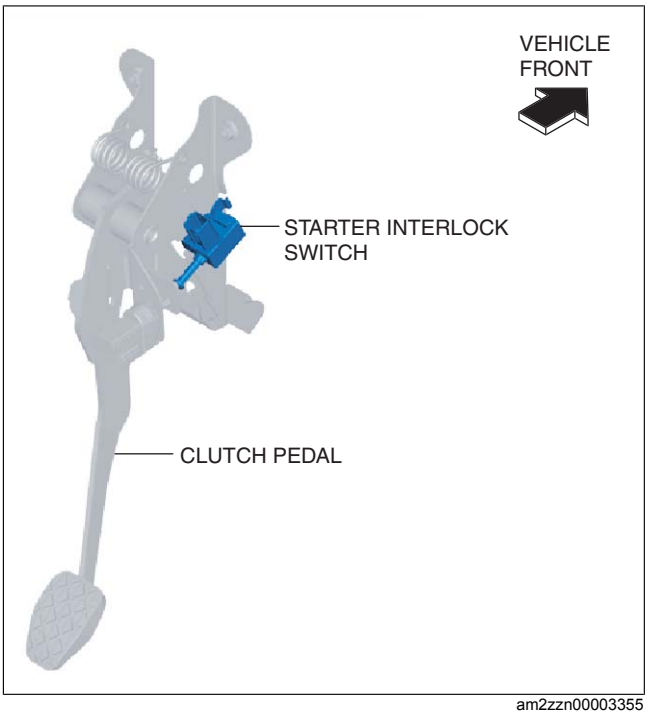

am2zzn00003355

Operation

- The starter interlock switch rod is pressed by the depression of the clutch pedal. At this time, the starter interlock switch is turned on, and by establishing a circuit, engine starting (from starter) permission is transmitted to the PCM and start stop unit.

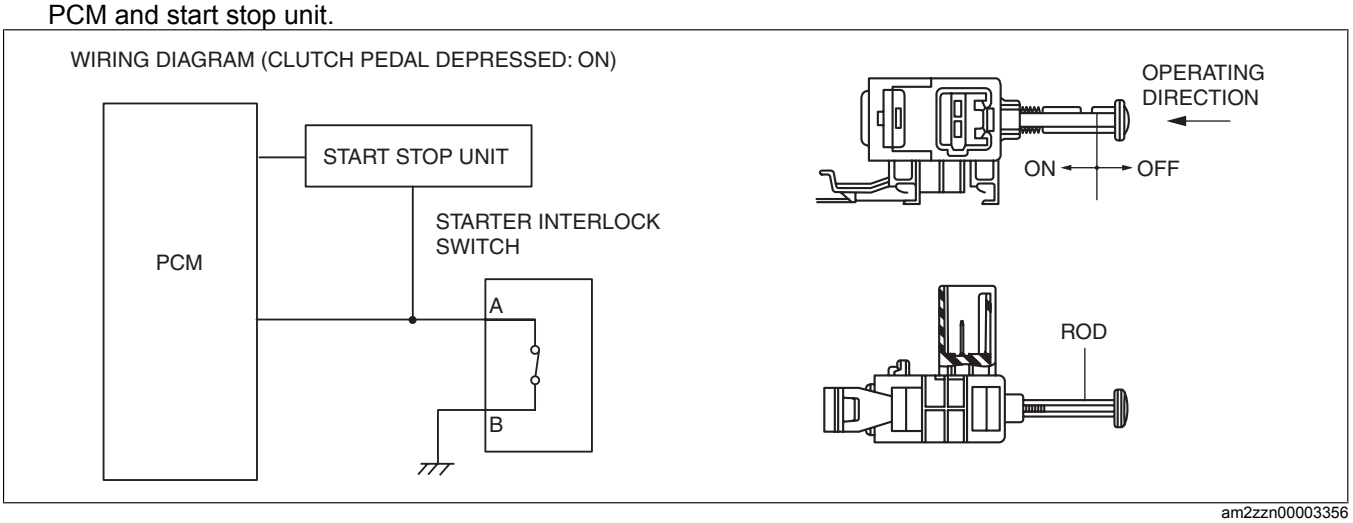

am2zzn00003356

Fail-safe

DTC No.	Fail-safe function
P176E:00	• Inhibits engine-stop by operating the i-stop function.