STARTER INSPECTION [SKYACTIV-D 1.5]

id0119q2800300

On-vehicle Inspection


1. Verify that the battery is fully charged. (See BATTERY INSPECTION.)
2. The starter is normal if it rotates smoothly and without any noise when the engine is cranked.
   - If the starter does not operate, inspect the following:
     — Remove the starter, and inspect the starter unit. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
     — Inspect the related wiring harnesses, the push button start, and the transaxle range sensor (ATX) or starter interlock switch (MTX). (See STARTER INTERLOCK SWITCH INSPECTION [SKYACTIV-D 1.5].)

No-load Test

1. Verify that the battery is fully charged.
2. Connect the starter, battery, and a tester as shown in the figure.
3. Operate the starter and verify that it rotates smoothly.
   - If the starter does not rotate smoothly, inspect the starter unit.
4. Measure the voltage and current while the starter is operating.
   - If not within specification, replace the starter. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Starter no-load test voltage
11 V

Starter no-load test current
105 A or less

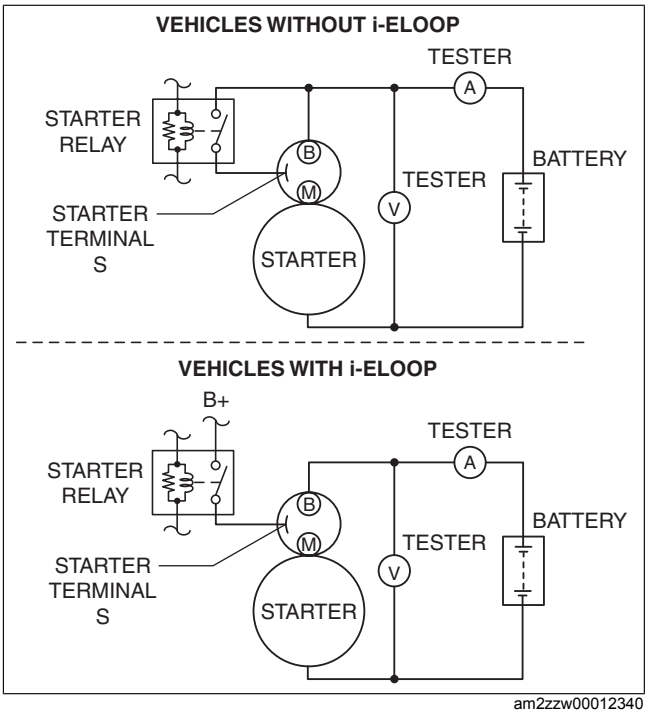

am2zzw00012340