STARTER [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0119q3108300

Purpose, Function

- The starter rotates the crankshaft via the ring gear of the dual-mass flywheel (MTX)/drive plate (ATX) and it serves as a trigger to start the engine.


Construction

- The starter is located on the left rear side of the engine.

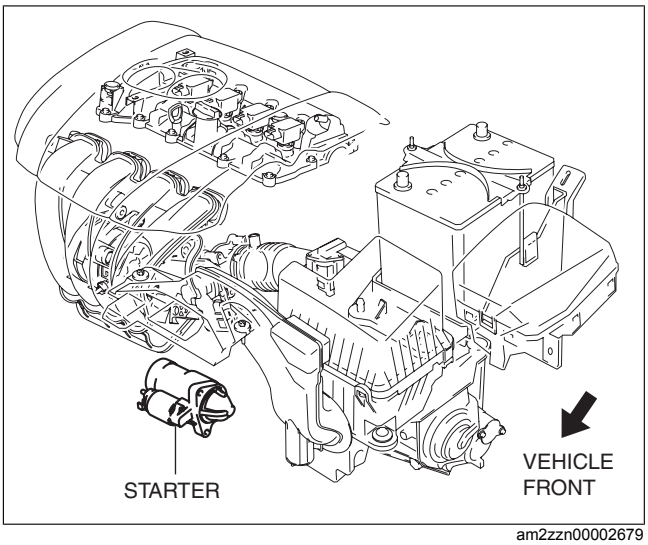

am2zzn00002679

- The starter is a coaxial reduction type which can obtain high torque.

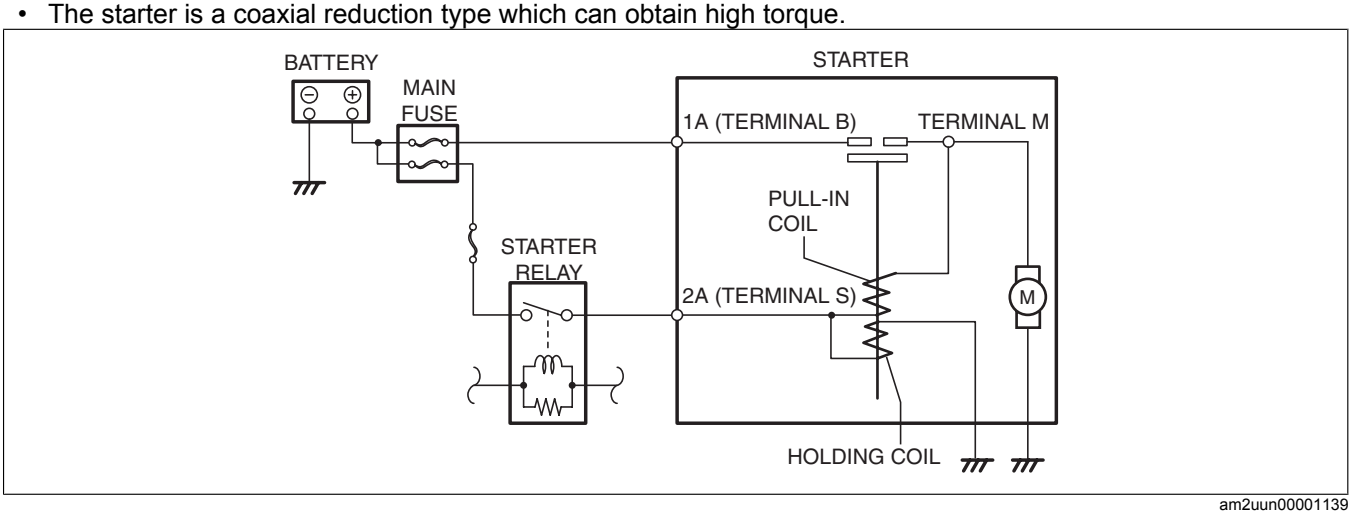

am2uun00001139

Operation

- For starter cut-off control details, refer to CONTROL SYSTEM. (See STARTER CUT-OFF CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Fail-safe

DTC	Fail-safe
P0A0F:00	• Flashes the i-stop warning light (amber) and inhibits engine-stop by operating the i-stop function. (with i-stop)
P0615:00	