STARTER INTERLOCK SWITCH [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0119q3133000

Purpose, Function

- The starter interlock prevents a false start of the vehicle at engine start and assures safety. If the clutch pedal is not depressed, engine starting is inhibited.

Construction


- The starter interlock switch is located on the clutch pedal.

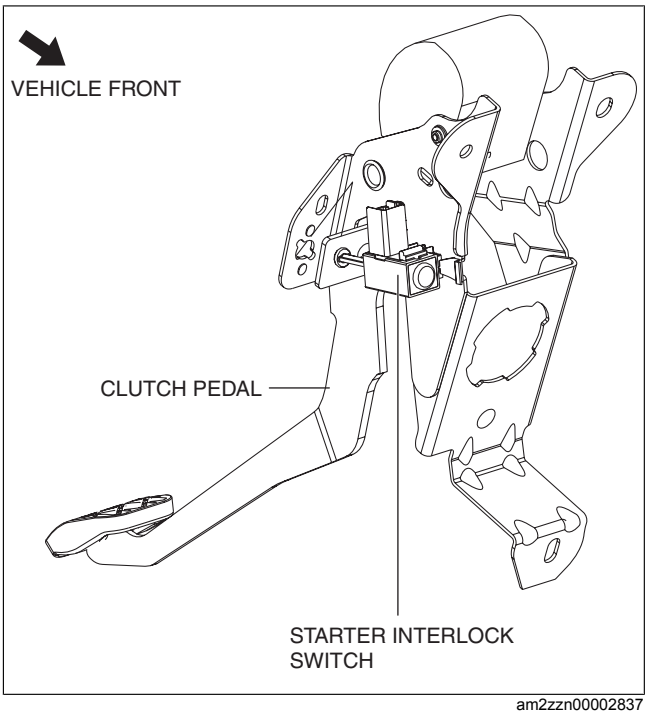

am2zzn00002837

Operation

- The starter interlock switch rod is pressed by the depression of the clutch pedal. At this time, the starter interlock switch is turned on, and by establishing a circuit, engine starting (from starter) permission is transmitted to the PCM and start stop unit.

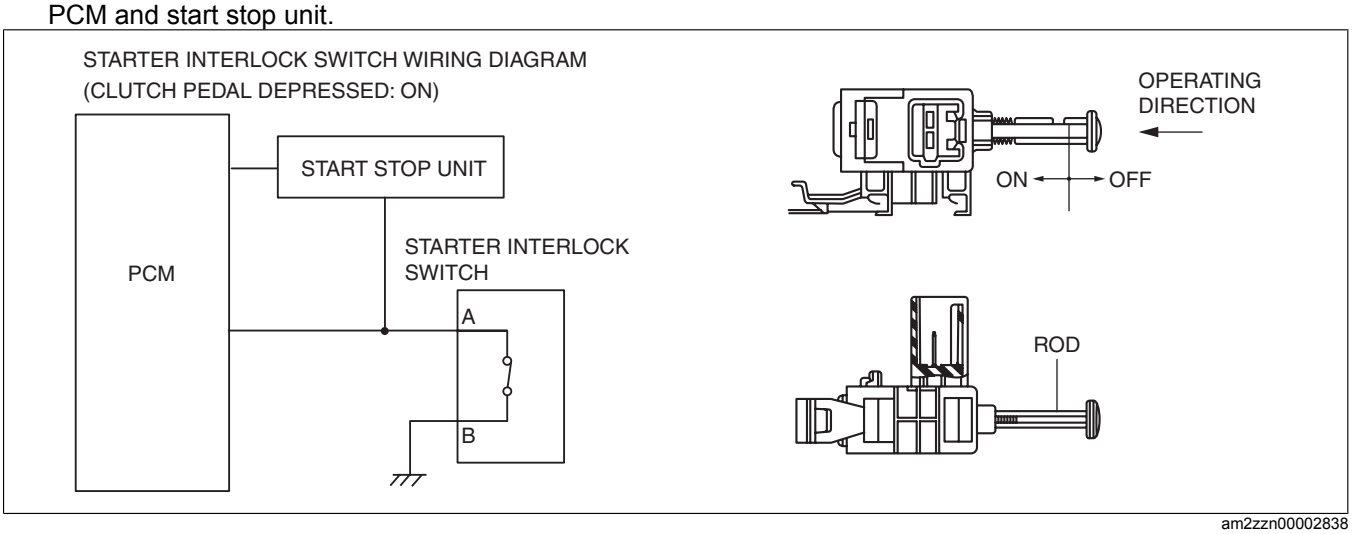

am2zzn00002838

Fail-safe

DTC	Fail-safe
P176E:00	• Flashes the i-stop warning light (amber) and inhibits engine-stop by operating the i-stop function. (with i-stop)