DC-DC CONVERTER CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1004300

Without i-ELOOP

Outline

- Stability of the power supply to the cabin has been realized by preventing decreases in the power supply due to battery voltage decreases while the engine is restarted by the i-stop control.
- When the engine is restarted by the i-stop control, the PCM sends a battery voltage (DC-DC converter downstream voltage) boost request signal to the DC-DC converter.


Block Diagram

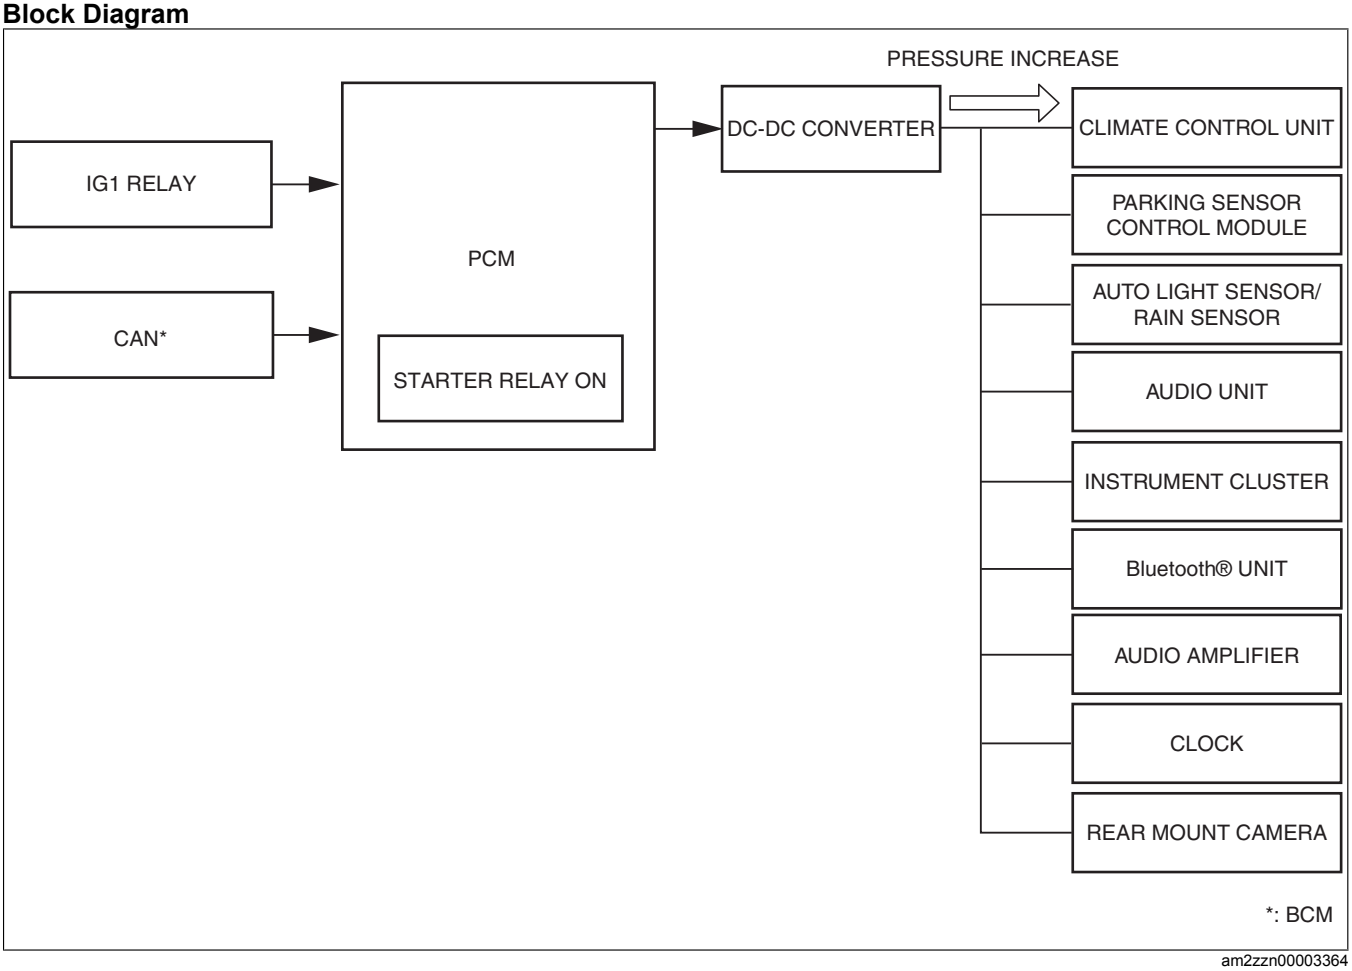

am2zzn00003364

Operation

- When the engine is restarted by the i-stop control, the PCM sends a voltage boost request signal to the DC-DC converter so that the DC-DC converter downstream voltage is maintained at **11.5—12.5 V**.

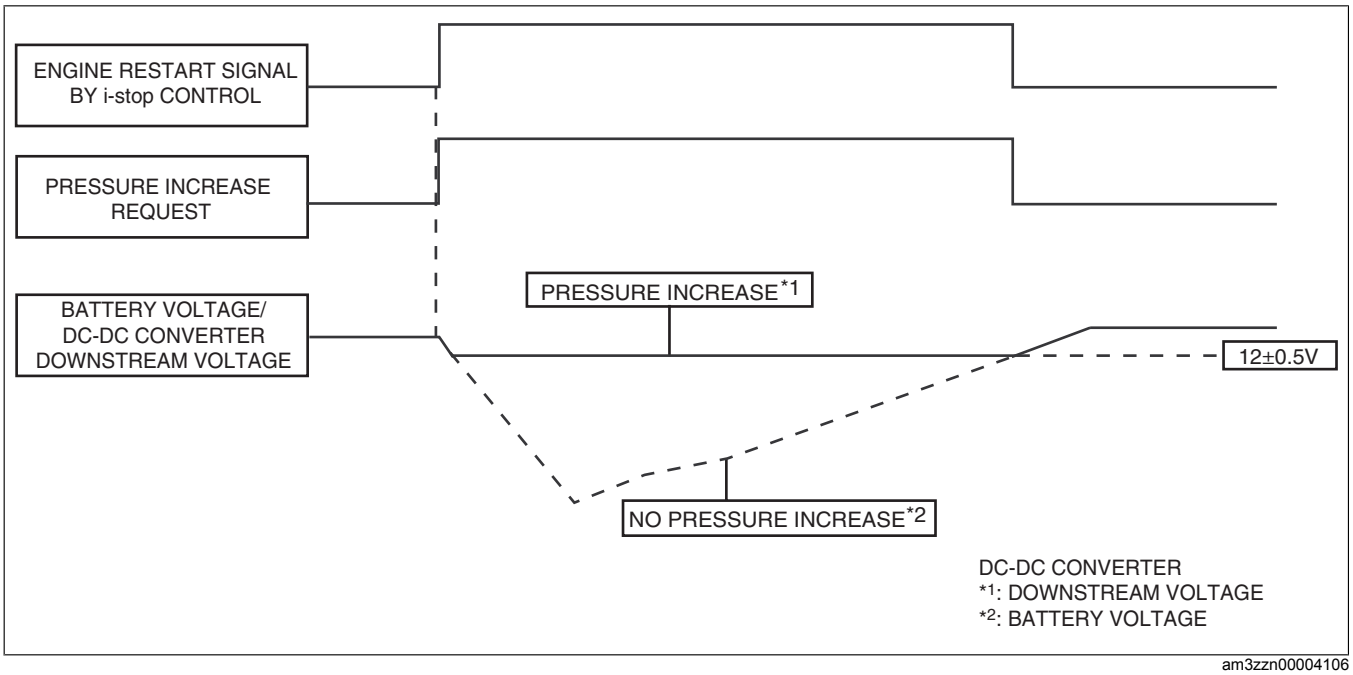

am3zzn00004106