POWER BRAKE UNIT VACUUM SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1004600

Purpose/Function

- Detects the vacuum in the power brake unit to assure brake performance while the engine is stopped by the i-stop control.
- Detects the vacuum in the power brake unit and sends it to the PCM as a power brake unit vacuum pressure signal.

Construction


- Installed to the power brake unit.
- The power brake unit vacuum sensor has adopted a piezoelectric element to the detection area for detection of the vacuum in the power brake unit.

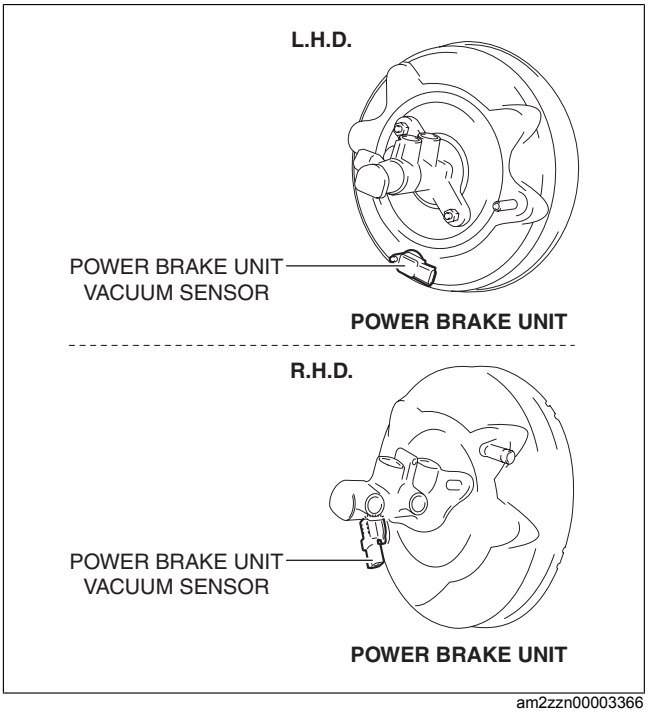

am2zzn00003366


Operation

- The signal, which changes according to the vacuum in the power brake unit, is send to the PCM.

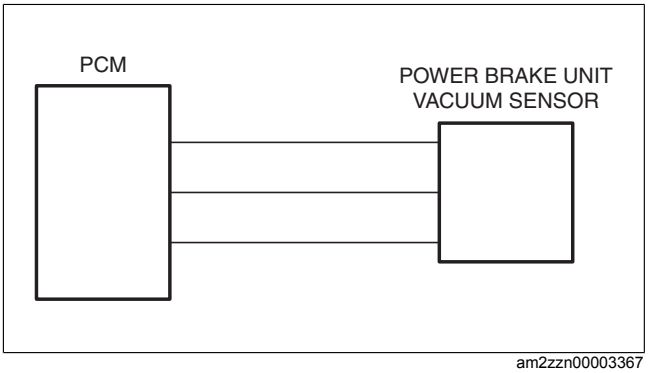

am2zzn00003367

Power brake unit vacuum sensor characteristic

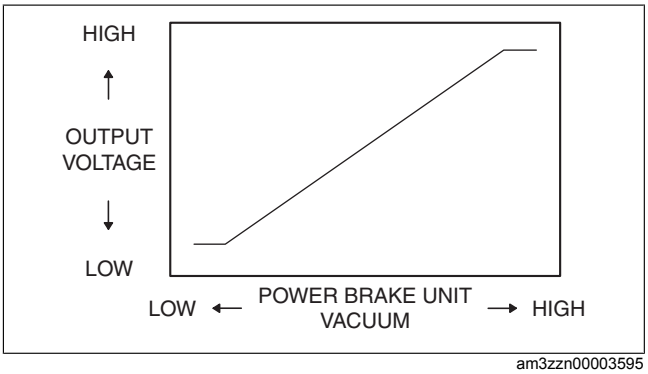

am3zzn00003595

Fail-safe

DTC No.	Fail-safe function
P0555:00	• Flashes the i-stop warning light (amber) and inhibits engine-stop by operating the i-stop function.