KNOCK SENSOR (KS) [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1004900

Purpose/Function

- Detects abnormal combustion in the cylinder as basic information (mainly used to determine the ignition timing) and sends it to the PCM as a knocking signal.

Construction


- Installed on the cylinder block.
- A piezoelectric element has been adopted (as the detecting element) for detecting abnormal combustion.

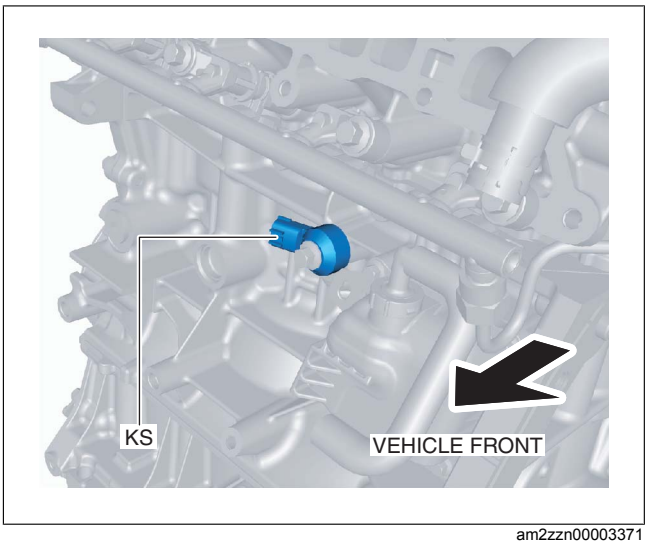

am2zzn00003371


Operation

- Sends the signal, which fluctuates according to abnormal combustion, to the PCM.

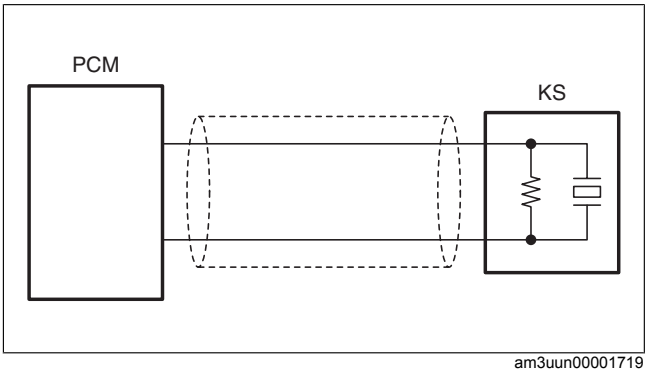

am3uun00001719

KS characteristic

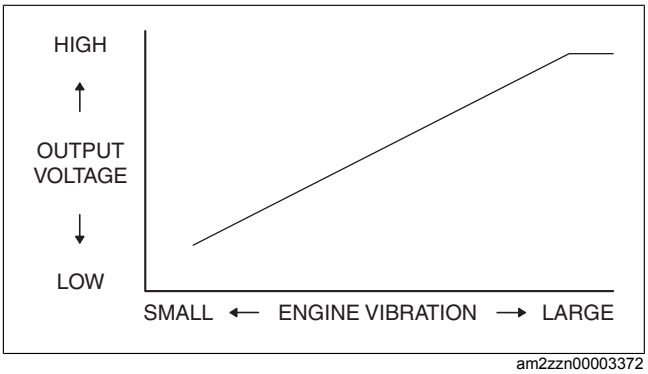

am2zzn00003372

Fail-safe

DTC No.	Fail-safe function
P0327:00	• Sets the knocking spark retard correction value of the ignition control to the fixed value.
P0328:00	• Sets the knocking spark retard correction value of the ignition control to the fixed value.