CURRENT SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1005000

Purpose/Function

- The battery conditions are monitored as basic information (to determine the generator output current) and sent to the PCM by LIN communication via the BCM.

Construction


- Installed to the negative battery cable.
- The current sensor has adopted shunt resistance on the detection area and a thermistor for detecting the battery condition.

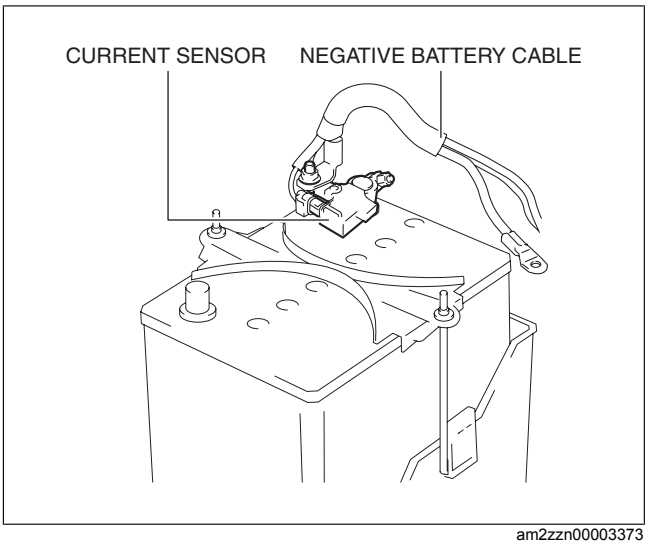

am2zzn00003373

Operation

- The battery charge/discharge flow, battery voltage, and the battery terminal temperature are send to the PCM by LIN communication via the BCM.

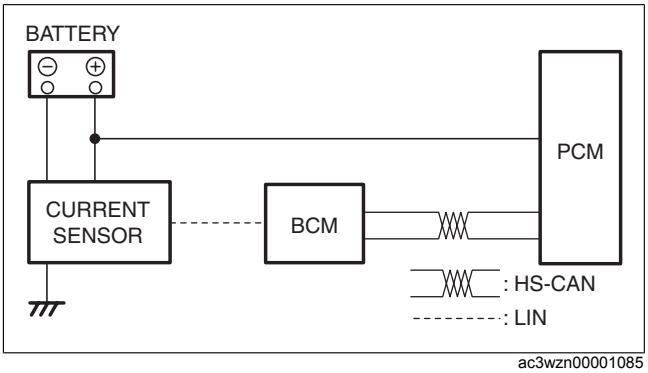

ac3wzn00001085

Fail-safe

DTC No.	Fail-safe function
P058A:00	• Inhibits engine-stop by operating the i-stop function. (with i-stop system) • Inhibits the i-ELOOP control. (with i-ELOOP)
U1007:00	• Inhibits engine-stop by operating the i-stop function. • Inhibits a part of the generator output control.