FUEL PRESSURE SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1006100

Purpose/Function

- Detects the fuel pressure in the fuel distributor as basic information (mainly used to determine the fuel injection amount) and sends it to the PCM as a fuel pressure signal.

Construction


- Installed on the fuel distributor.
- A metal diaphragm thin film distortion gauge has been adopted (as the detecting element) for detecting the fuel pressure.

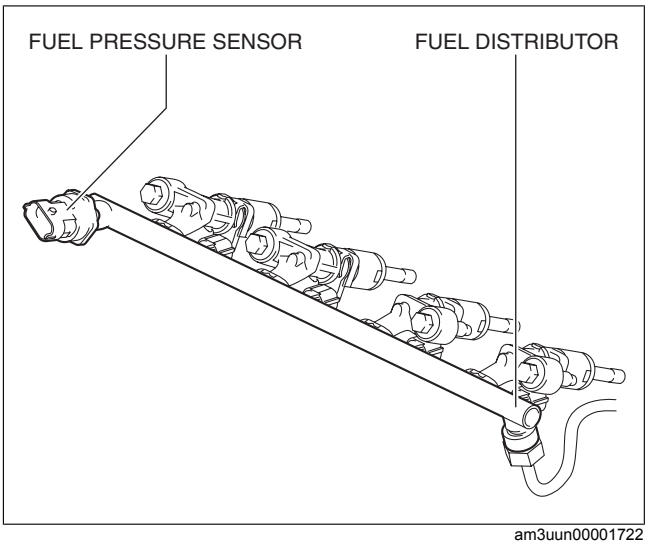

am3uun00001722


Operation

- Sends the signal, which fluctuates according to the fuel pressure, to the PCM.

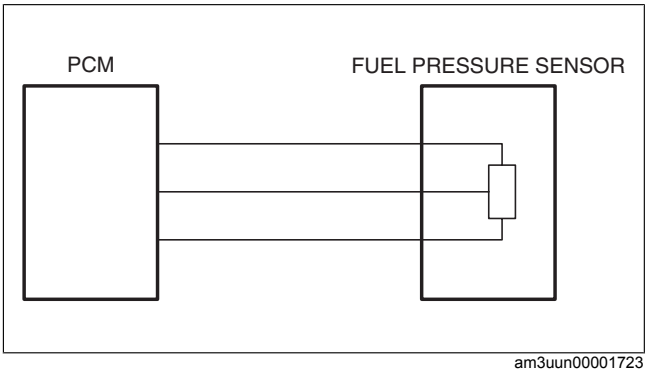

am3uun00001723

Fuel pressure sensor characteristic

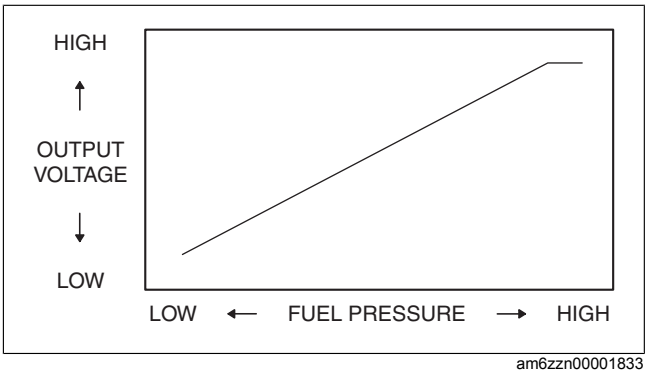

am6zzn00001833

Fail-safe

DTC No.	Fail-safe function
P0088:00	• Stops the high pressure fuel pump control. • Limits the intake air amount.
P0192:00	• Stops the high pressure fuel pump control. • Limits the intake air amount.
P0193:00	• Stops the high pressure fuel pump control. • Limits the intake air amount.