ENGINE COOLANT TEMPERATURE (ECT) SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1006200

Purpose/Function

- Detects the ECT as basic information (mainly used to determine the fuel injection amount) and sends it to the PCM as an ECT signal.

Construction


- Installed to the water outlet case.
- A thermistor has been adopted (as the detecting element) for detecting the ECT.

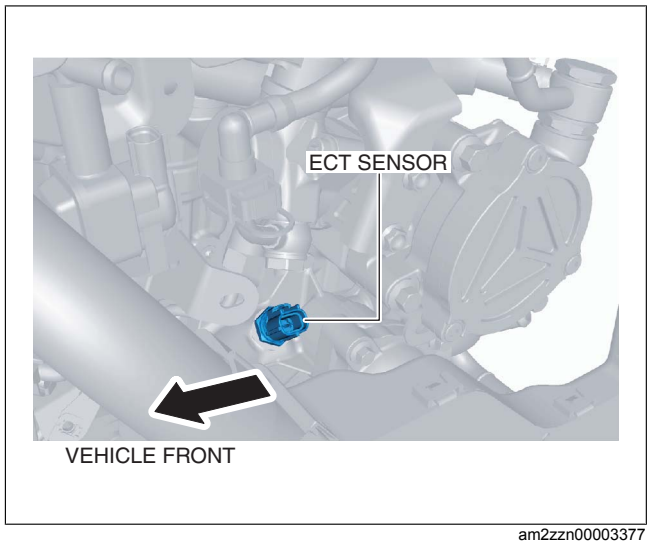

am2zzn00003377


Operation

- Sends the signal, which fluctuates according to the ECT, to the PCM.

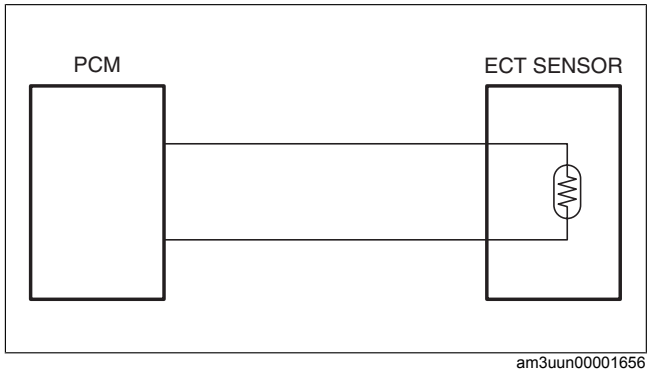

am3uun00001656

ECT sensor characteristic

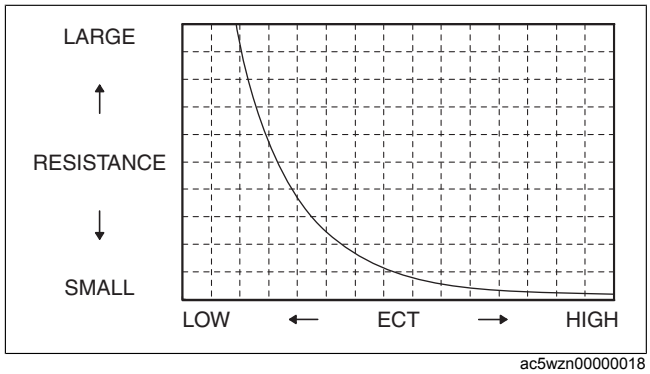

ac5wzn00000018

Fail-safe

DTC No.	Fail-safe function
P0117:00	• Fixes the water temperature for the engine control at 40 °C {104 °F}, and for the idle air control at 80 °C {176 °F}. • Operates the cooling fan (high speed rotation). • Inhibits the fuel cut control during shift change.
P0118:00	• Fixes the water temperature for the engine control at 40 °C {104 °F}, and for the idle air control at 80 °C {176 °F}. • Operates the cooling fan (high speed rotation). • Inhibits the fuel cut control during shift change.