CRANKSHAFT POSITION (CKP) SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1006300

Purpose/Function

- Detects the crankshaft speed as basic information (mainly used to determine the fuel injection timing and ignition timing) and sends it to the PCM as a CKP signal.

Construction


- Installed on the side of the cylinder block (right side).
- A MR (Magnetic Resistance) element has been adopted (as the detecting element) for detecting the crankshaft speed.

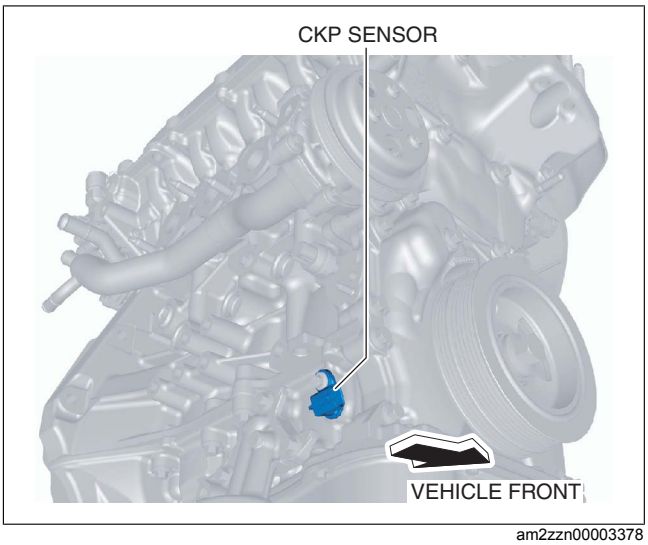

am2zzn00003378


Operation

- Sends the signal, which fluctuates according to the crankshaft speed, to the PCM.

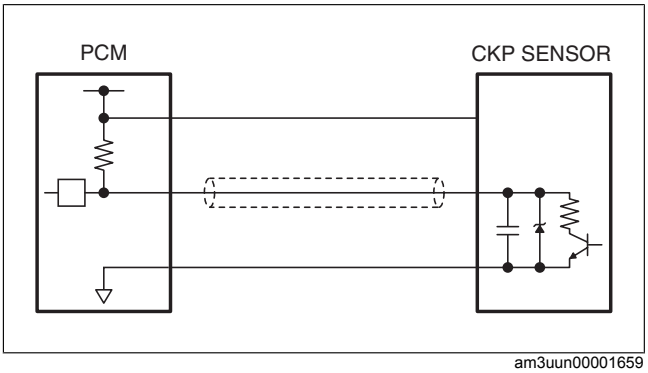

am3uun00001659

CKP sensor characteristic

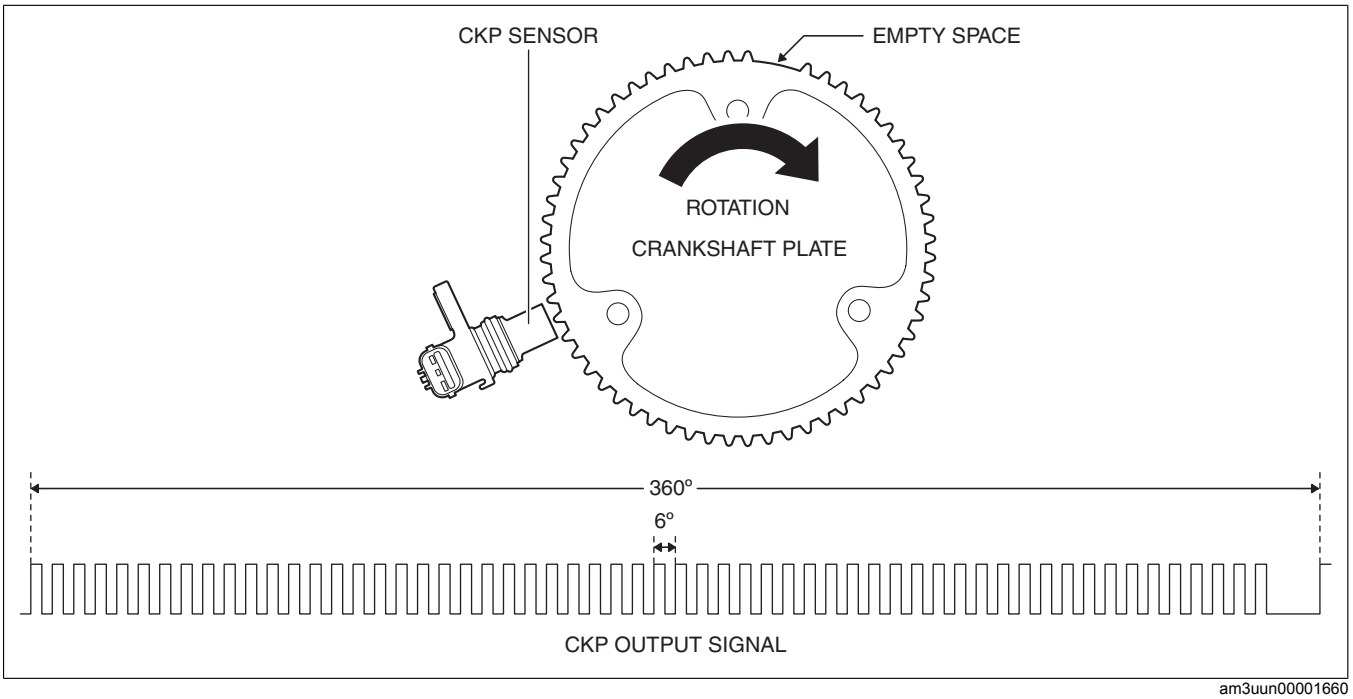

am3uun00001660

Fail-safe

DTC No.	Fail-safe function
P0335:00	• Stops fuel injection. • Stops ignition.