CAMSHAFT POSITION (CMP) SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1006700


Purpose/Function

- Detects the camshaft speed as basic information (mainly used to determine the fuel injection timing and ignition timing) and sends it to the PCM as a CMP signal.

Construction

Intake CMP sensor


- Installed on the cylinder head.
- A GMR element has been adopted (as the detecting element) for detecting the intake camshaft speed.

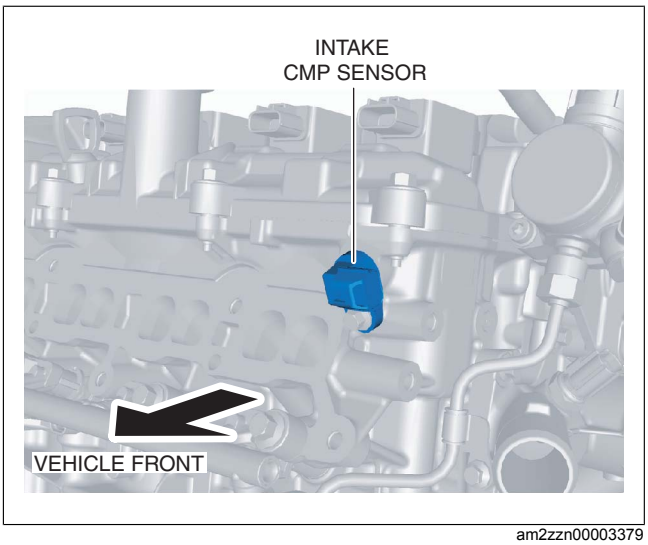

am2zzn00003379

Exhaust CMP sensor (SKYACTIV-G 1.5 (with 4-2-1 exhaust system))


- Installed on the rear housing.
- A GMR element has been adopted (as the detecting element) for detecting the exhaust camshaft speed.

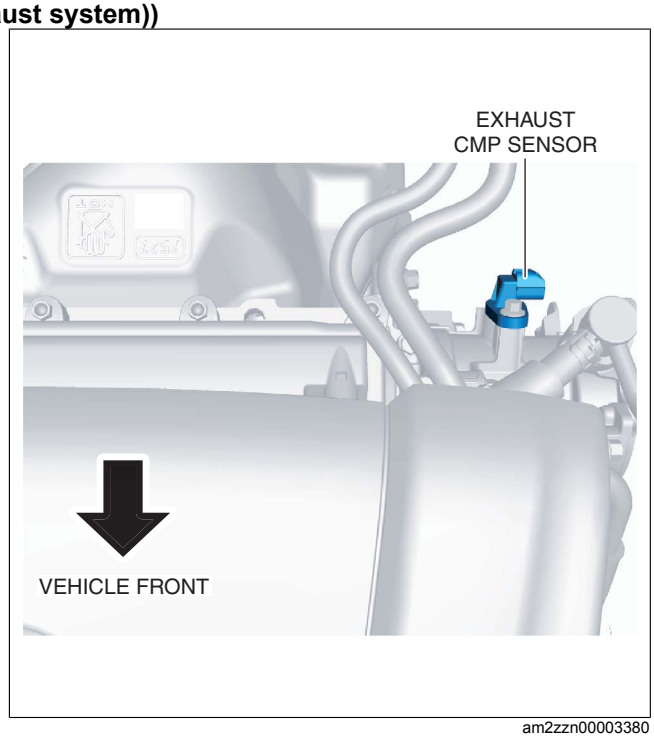

am2zzn00003380


Operation

- Sends the signal, which fluctuates according to the camshaft speed, to the PCM.

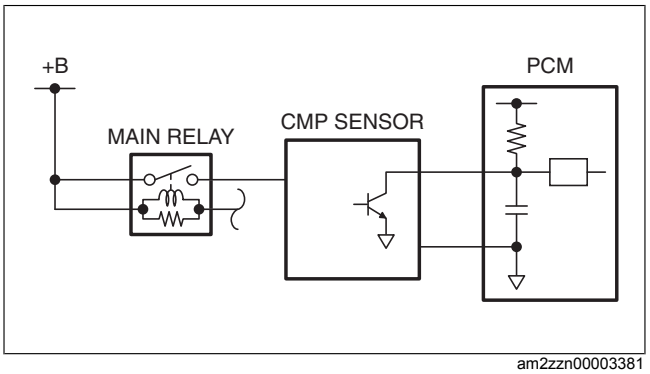


am2zzn00003381

CMP sensor characteristic (SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system))

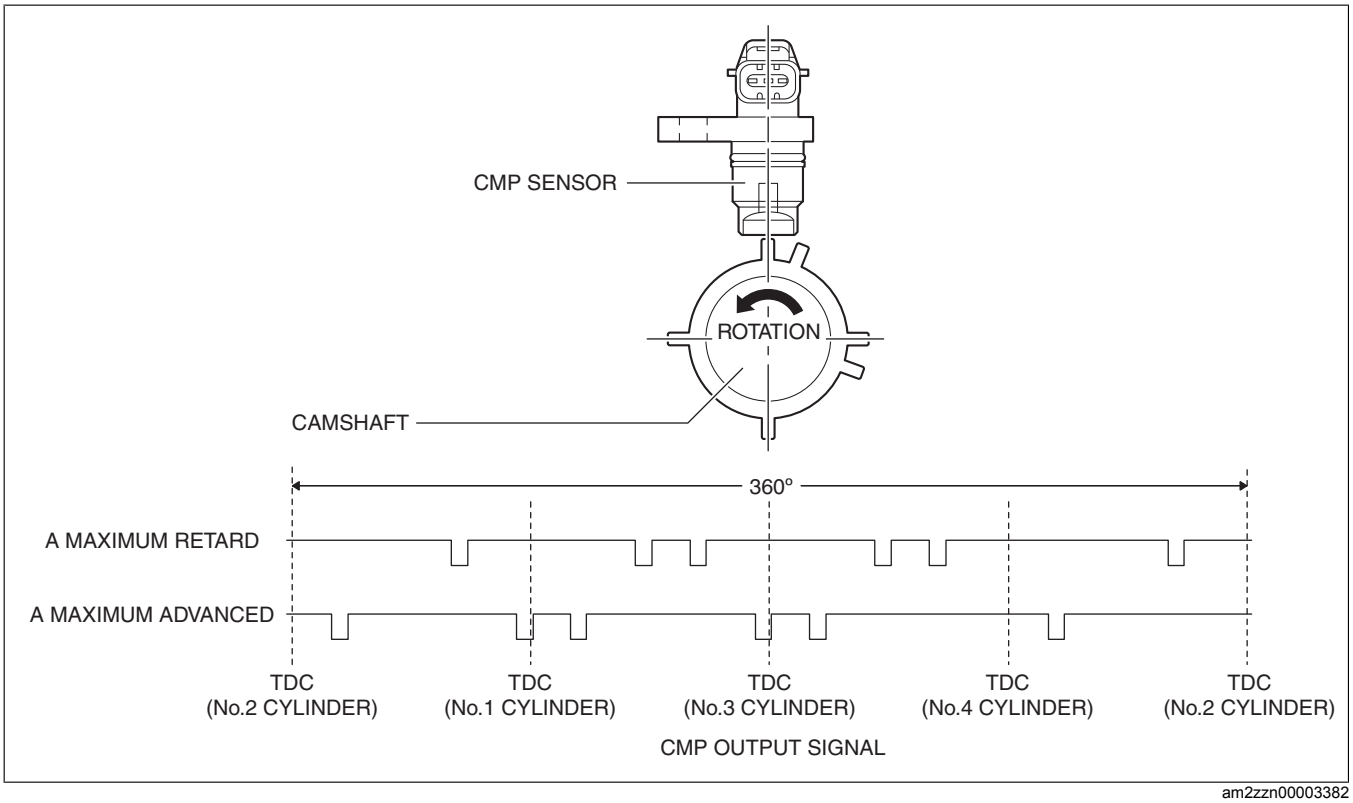

am2zzn00003382

CMP sensor characteristic (SKYACTIV-G 1.5 (with 4-2-1 exhaust system))

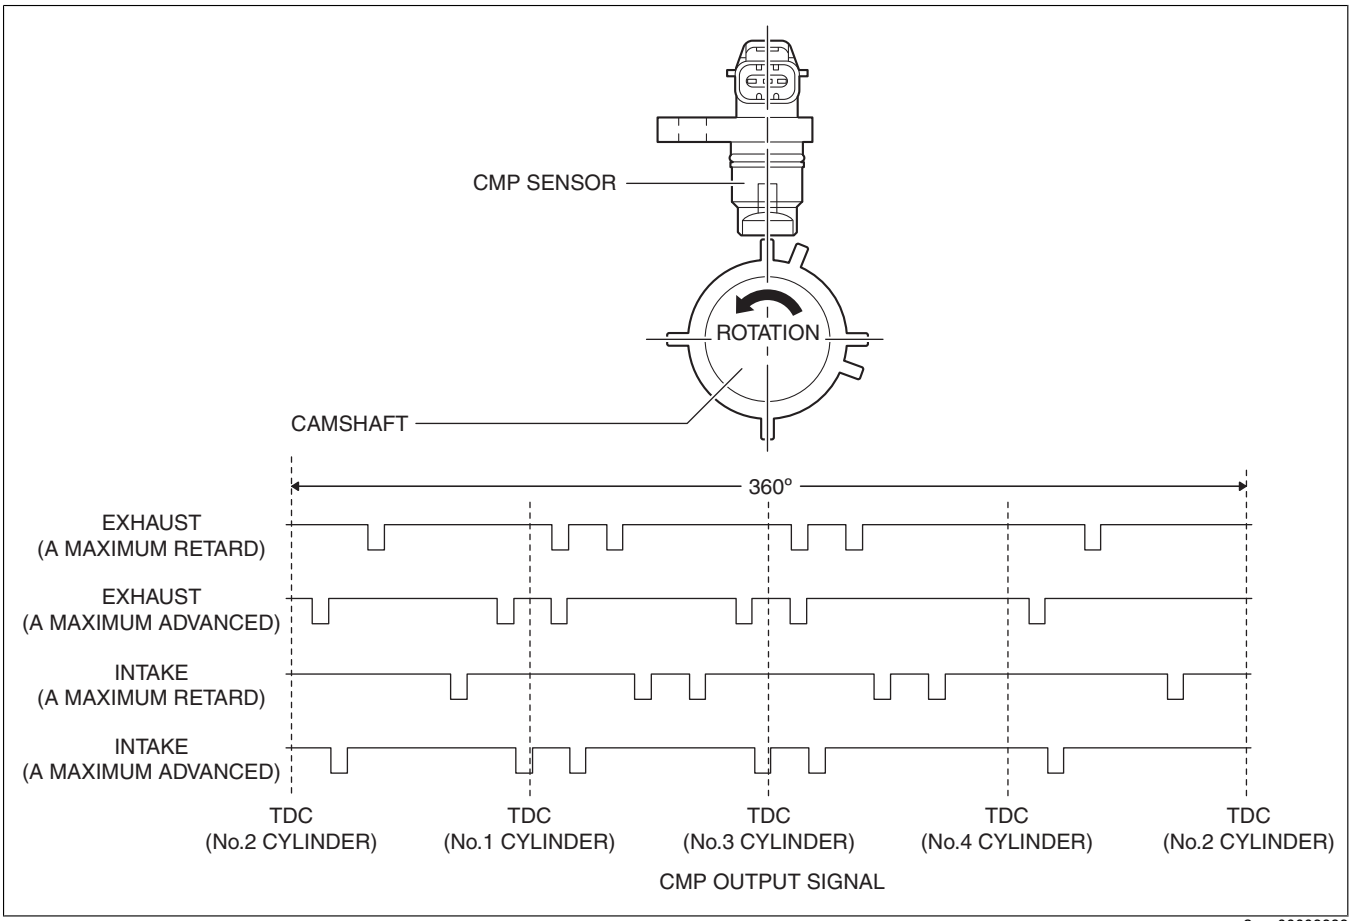

am2zzn00003383

Fail-safe
Intake CMP sensor

DTC No.	Fail-safe function
P0340:00	• Set the variable valve timing control to the maximum cam retard mode. (SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)) • Set the electric variable valve timing control to the maximum cam retard mode. (SKYACTIV-G 1.5 (with 4-2-1 exhaust system)) • Inhibits traction control.

Exhaust CMP sensor (SKYACTIV-G 1.5 (with 4-2-1 exhaust system))

DTC No.	Fail-safe function
P0365:00	• Stops fuel injection. • Stops ignition.