ACCELERATOR PEDAL POSITION (APP) SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1007300

Purpose/Function

- Detects the accelerator pedal depression amount as basic information (mainly used to determine the throttle valve opening) and sends it to the PCM as an accelerator pedal opening angle signal.

Construction


- Built into the accelerator pedal.
- An electromagnetic induction has been adopted as the detecting element for detecting the accelerator pedal depression amount.
- The APP sensor has a main sensor (No.1) and a sub sensor (No.2) for improved detection accuracy.

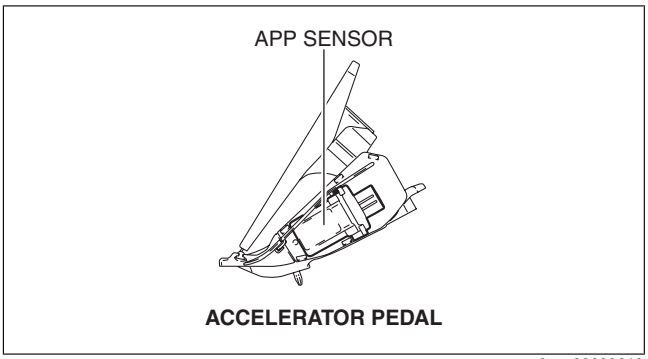

am3zzn00003618


Operation

- Sends the signal, which fluctuates according to the accelerator pedal depression amount, to the PCM.

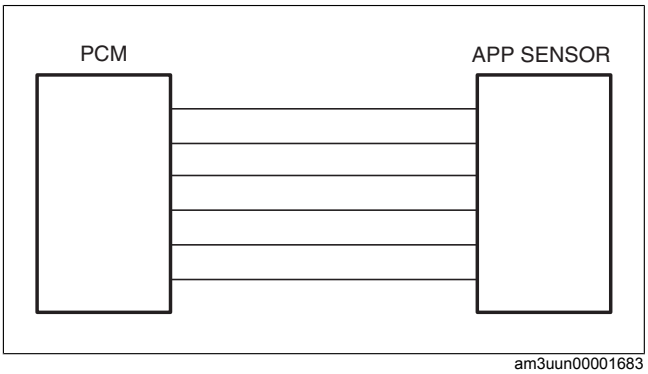

am3uun00001683

APP sensor characteristic

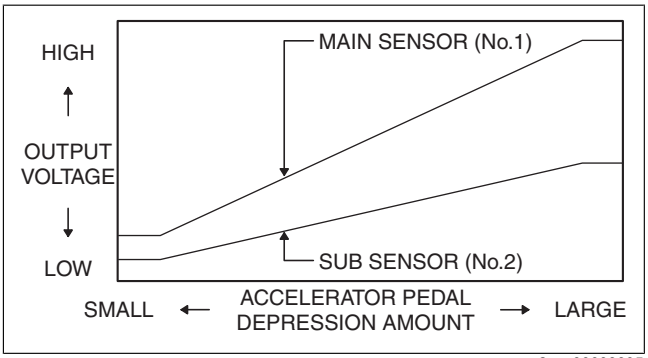

am2zzn00003395

Fail-safe

DTC No.	Fail-safe function
P2122:00	• Regulates the upper limit of the APP sensor output.
P2123:00	• Regulates the upper limit of the APP sensor output.
P2127:00	• Regulates the upper limit of the APP sensor output.
P2128:00	• Regulates the upper limit of the APP sensor output.
P2138:00	• Restricts the upper limit of the engine speed. • Stops the drive-by-wire control (throttle valve is open at approx. 8° by return spring force).