
CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1800600

Caution


- **When replacing the CKP sensor, make sure there is no foreign matter on it such as metal shavings. If it is installed with foreign matter, the sensor output signal will malfunction resulting from fluctuation in magnetic flux and cause a deterioration in engine control.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Lift up the vehicle.
3. Remove the service hole cover (installed to front under cover No.2).
4. Disconnect the CKP sensor connector.

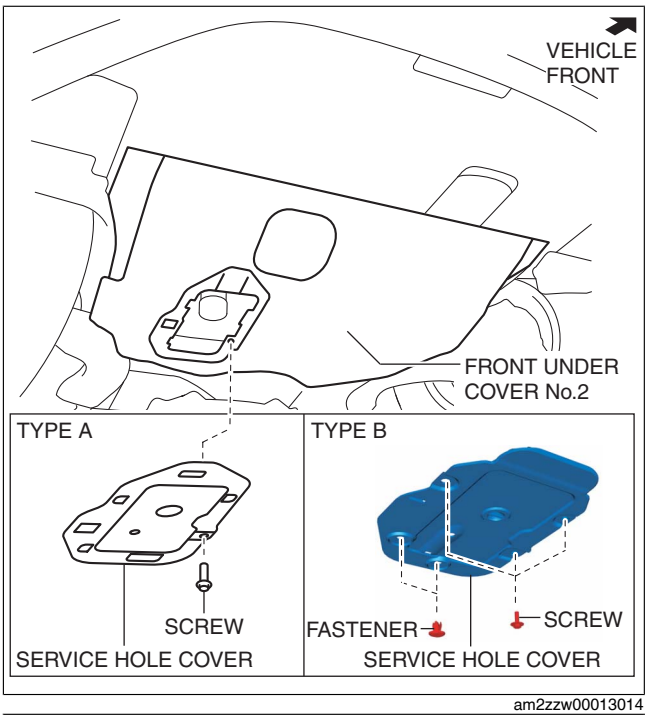

am2zzw00013014

5. Remove the bolt.
6. Remove the CKP sensor.
7. Install in the reverse order of removal.

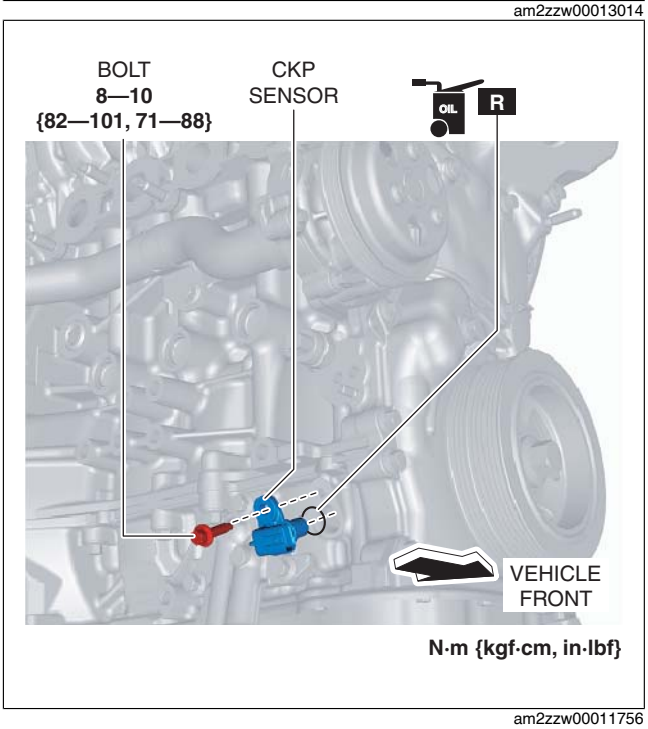

am2zzw00011756