MASS AIR FLOW (MAF) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1800700

Visual Inspection


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Visually inspect the MAF sensor for the following:
   - Damage, cracks, dirt
   - Rusted sensor terminal
   - Bent sensor terminal
     - — If there is any malfunction, repair or replace the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Voltage Inspection

1. Remove the MAF sensor/IAT sensor No.1 without disconnect the connector. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2. Connect the **M-MDS** to the DLC-2.
3. Switch the ignition ON (engine off).
4. As the air gradually approaches the MAF detection part of the MAF sensor/IAT sensor No.1, verify that the MAF sensor output voltage (PID: MAF) varies. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - If not as specified, replace the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

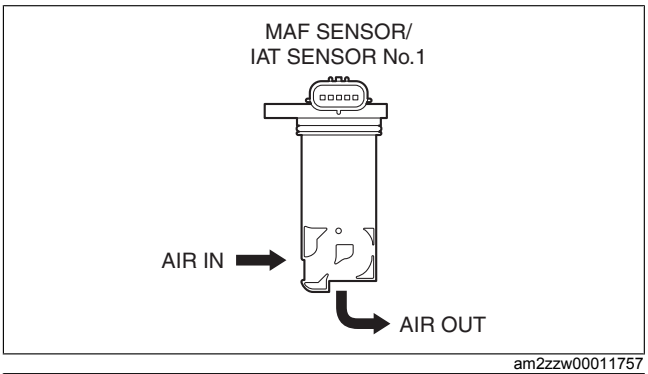

am2zzw00011757

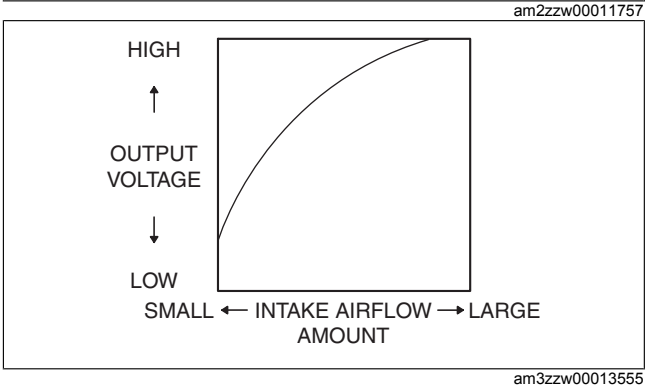

am3zzw00013555

Specification (Reference)