
NEUTRAL SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1800800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the neutral switch. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F65M-R].) (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F66M-R].)
3. Inspect for continuity between neutral switch terminal A and D.
   - If not as specified, replace the neutral switch. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F65M-R].) (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F66M-R].)

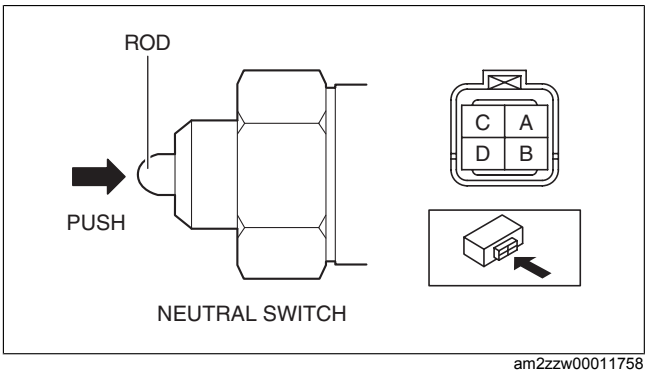

am2zzw00011758

Specification

Measured condition	Continuity
Rod pushed	**Continuity detected**
Rod not pushed	**No continuity**