FUEL PRESSURE SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1801300

Voltage Inspection

Note
- The fuel pressure sensor cannot be removed as a single unit. When replacing the fuel pressure sensor, replace it together with the fuel distributor as a single unit.

1. Connect the **M-MDS** to the DLC-2.
2. Switch the ignition ON (engine off).
3. Start the engine and warm it up completely.
4. Verify that the fuel pressure sensor output voltage (PID: FUEL_PRES) is within the specification. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - If not as specified, replace the fuel distributor. (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Specification

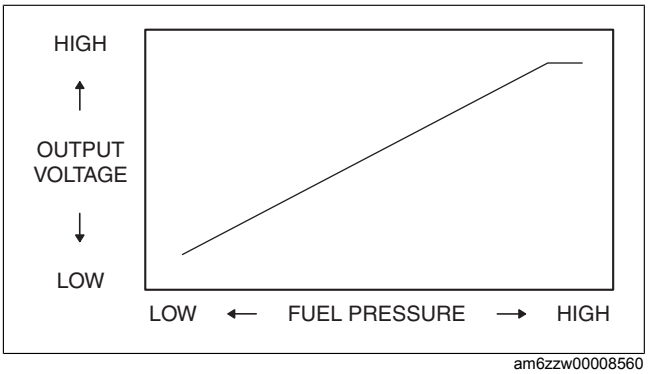

am6zzw00008560