CAMSHAFT POSITION (CMP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1801500

Caution

- **When replacing the CMP sensor, make sure there is no foreign matter on it such as metal shavings. If it is installed with foreign matter, the sensor output signal will malfunction resulting from fluctuation in magnetic flux and cause a deterioration in engine control.**

Intake CMP Sensor

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the intake manifold. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Disconnect the intake CMP sensor connector.
5. Remove the bolt.
6. Remove the intake CMP sensor.
7. Install in the reverse order of removal.

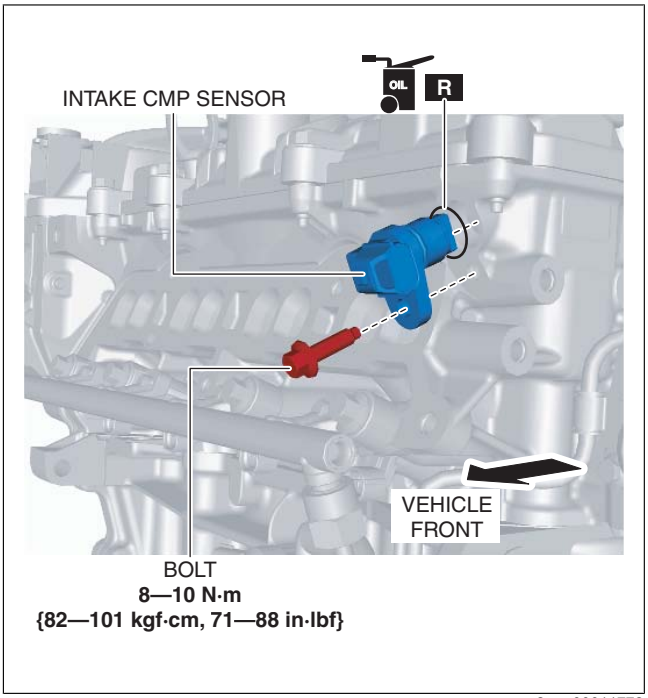


am2zzw00011772

Exhaust CMP Sensor (SKYACTIV-G 1.5 (With 4-2-1 Exhaust System))

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the exhaust CMP sensor connector.

3. Remove the bolt.
4. Remove the exhaust CMP sensor.
5. Install in the reverse order of removal.

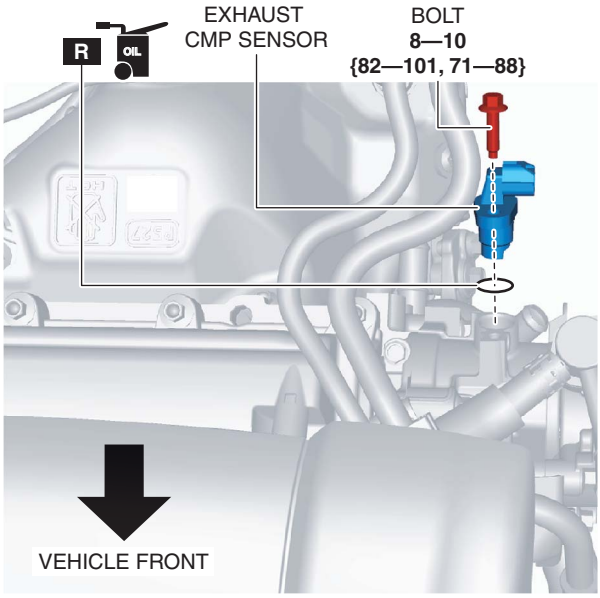

N·m {kgf·cm, in·lbf}

am2zzw00011773