
## ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1801900

**Warning**


- **A hot engine can cause severe burns. Turn off the engine and wait until it is cool before removing the ECT sensor.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Pull out the evaporative hose No.1 from the catch tank and set it aside.

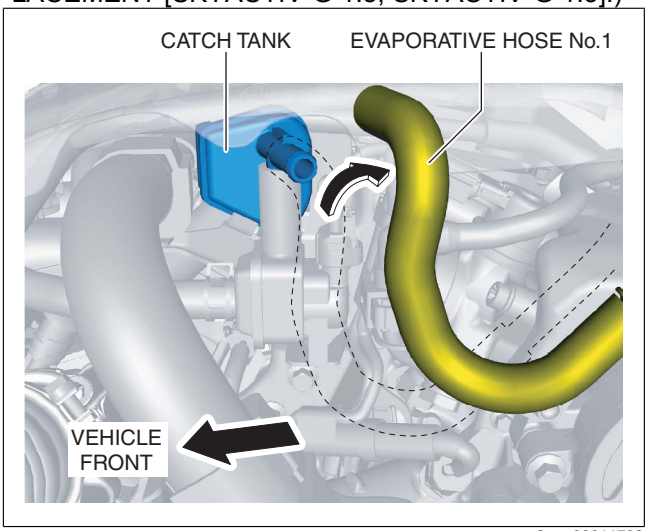



am2zzw00011782

4. While pressing the clip tabs in the direction of the arrows (1) shown in the figure, push out the clip in the direction of the arrow (2) shown in the figure and remove the clip.
5. Disconnect the ECT sensor connector.

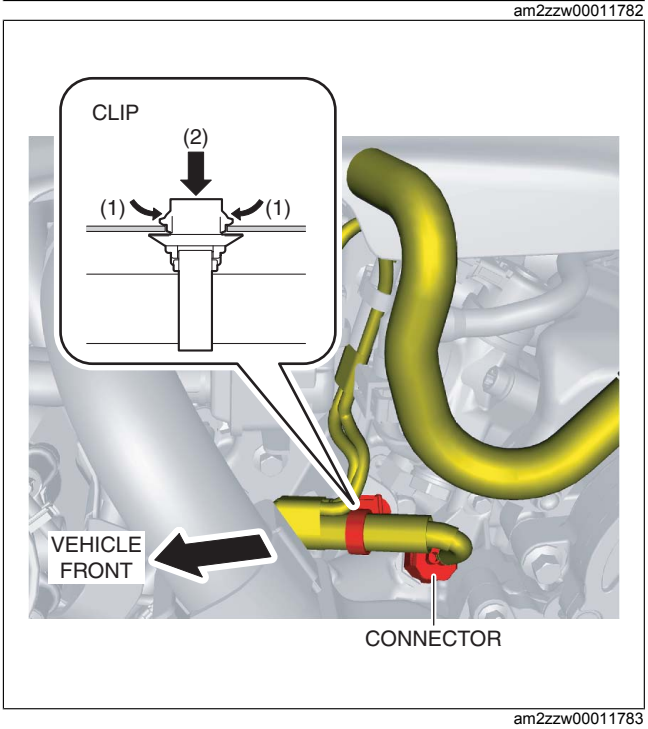


am2zzw00011783

6. Remove the ECT sensor using the **SST**.
7. Install in the reverse order of removal.
8. Refill the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

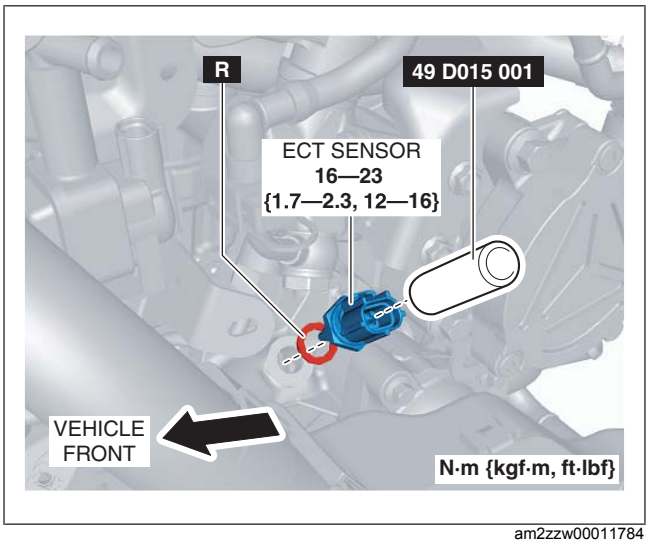


am2zzw00011784