ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1802000

Resistance Inspection

Warning

- **When the engine is hot, it can badly burn. Turn off the engine and wait until it is cool before removing the ECT sensor.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the ECT sensor. (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Place the ECT sensor in water with a thermometer, and heat the water gradually.

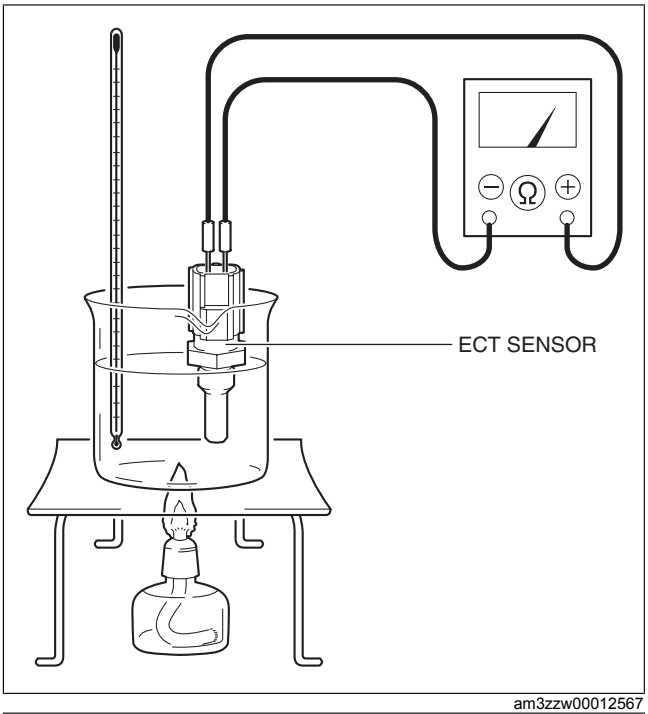


am3zzw00012567


5. Measure the resistance between ECT sensor terminals A and B.
   - If not as specified, replace the ECT sensor. (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Specification (Reference)

ECT (°C {°F})	Resistance (Kilohms)
20 {68}	Approx. 2.45
80 {176}	Approx. 0.318

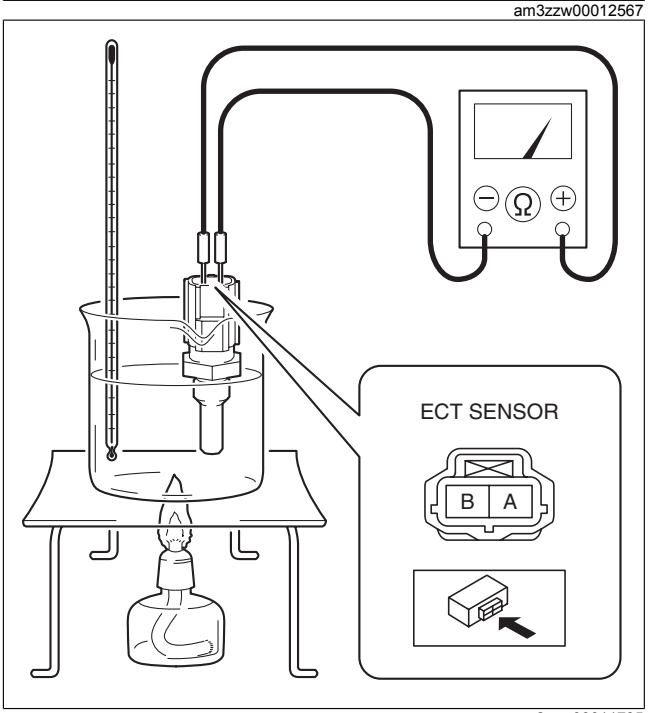

am2zzw00011785

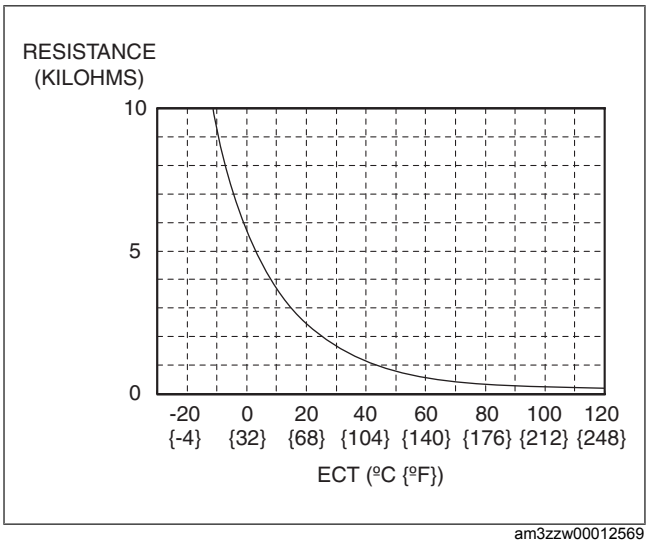

am3zzw00012569