
INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1802200

IAT Sensor No.1
Resistance inspection

Note
- Because the IAT sensor No.1 is integrated in the MAF sensor, replacing the IAT sensor No.1 includes replacement of the MAF sensor/IAT sensor No.1.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the MAF sensor/IAT sensor No.1 connector.
3. Measure the resistance between MAF sensor/IAT sensor No.1 terminals A and B.
   - If not as specified, replace the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

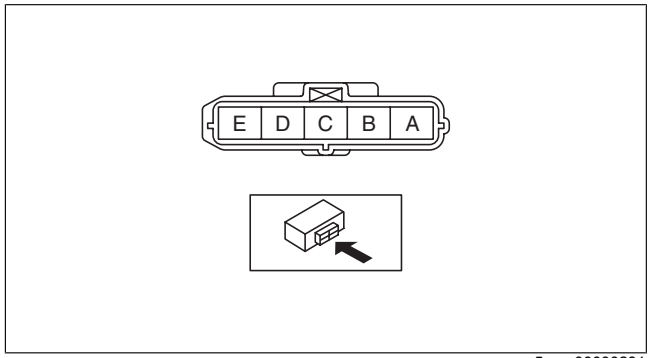

ac5wzw00000281

Specification (Reference)

IAT (°C {°F})	Resistance (Kilohms)
−20 {−4}	13.7—16.6
20 {68}	2.49—2.79
60 {140}	0.622—0.703

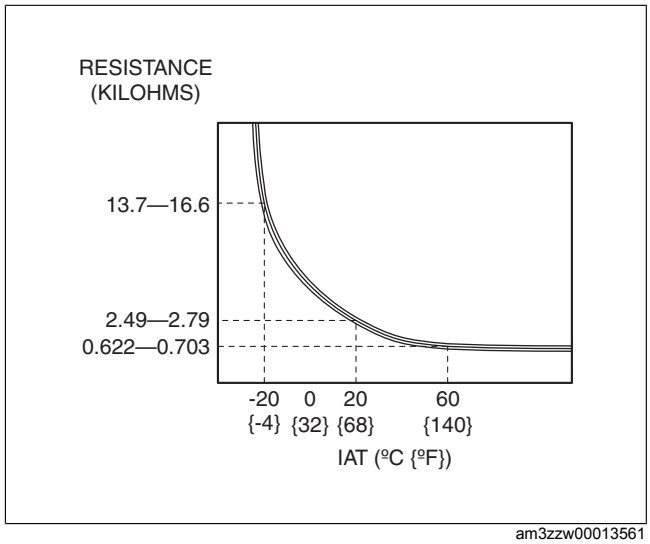

am3zzw00013561

IAT Sensor No.2
Resistance inspection


Note
- Because the IAT sensor No.2 is integrated in the MAP sensor, replacing the IAT sensor No.2 includes replacement of the MAP sensor/IAT sensor No.2.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the MAP sensor/IAT sensor No.2. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)


3. Measure the resistance between MAP sensor/IAT sensor No.2 terminals A and B.
   - If not as specified, replace the MAP sensor/IAT sensor No.2. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Specification (Reference)

IAT (°C {°F})	Resistance (Kilohms)
0 {32}	Approx. 5.9
20 {68}	Approx. 2.5
80 {176}	Approx. 0.323
130 {266}	Approx. 0.0893

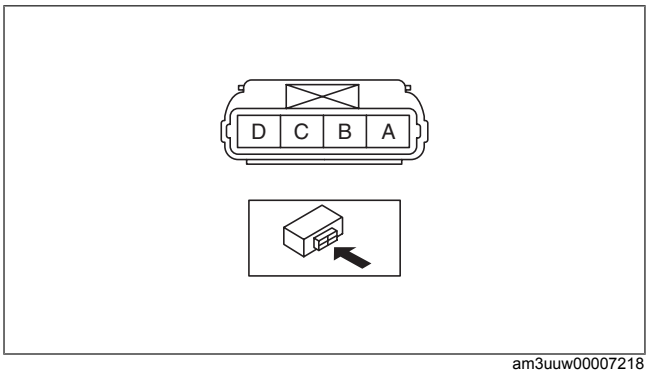

am3uuw00007218

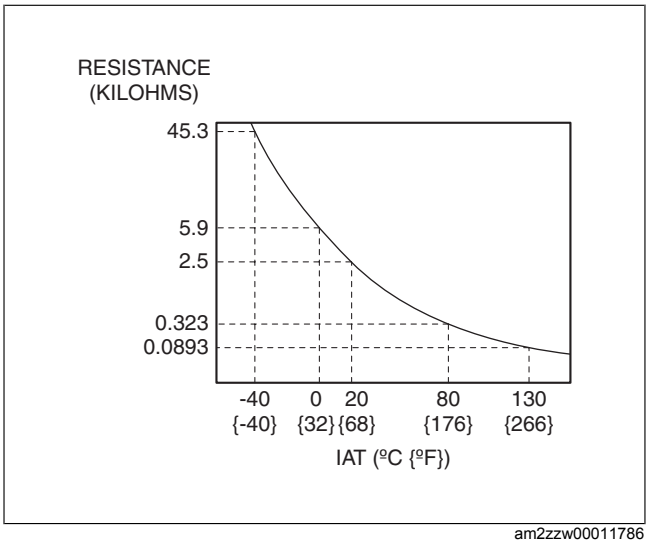

am2zzw00011786