
HEATED OXYGEN SENSOR (HO2S) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1802300

PID/DATA Monitor Inspection (HO2S)

1. Connect the **M-MDS** to the DLC-2.
2. Start the engine and warm it up completely.
3. Access the following PIDs using the **M-MDS**. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - — VSS (Vehicle speed)
   - — RPM (Engine speed)
   - — O2S12 (HO2S output voltage)
4. Drive the vehicle and decelerate the engine speed by releasing the accelerator pedal fully when the engine speed is **3,000 rpm or more**.
5. Verify that the HO2S output voltage (PID: O2S12) changes as shown in the figure during deceleration. (outputs **0.6 V or more** once or more, then **0.3 V or less**.)
   - If not as verified, replace the HO2S. (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

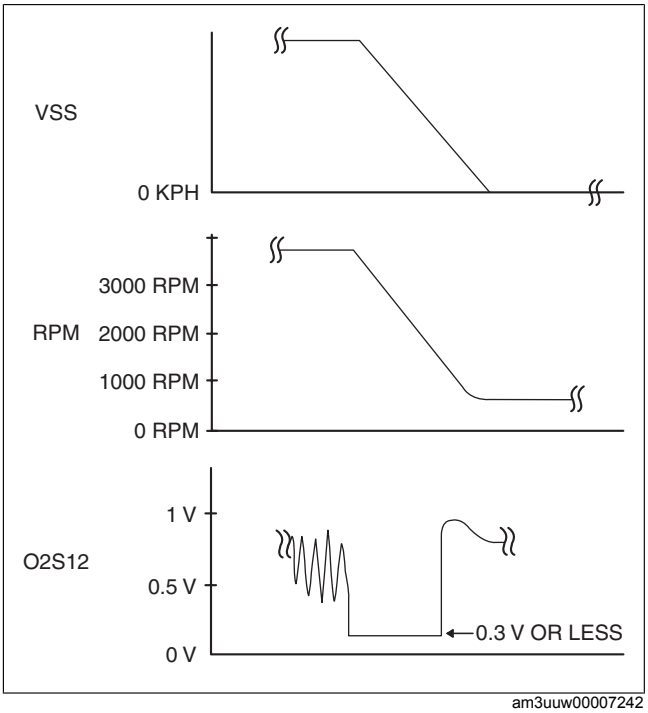

am3uuw00007242

Resistance Inspection (HO2S Heater)

Warning


- **A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before removing the exhaust system.**

Caution

- **Do not allow flammable objects such as the taping for bundling wiring harness to come into contact with the exhaust manifold and silencer.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Lift up the vehicle.
3. Remove the insulator. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Disconnect the HO2S connector.
5. Measure the resistance between HO2S terminals C and D.
   - If not as specified, replace the HO2S. (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

HO2S heater resistance
2—50 ohms [normal temperature]

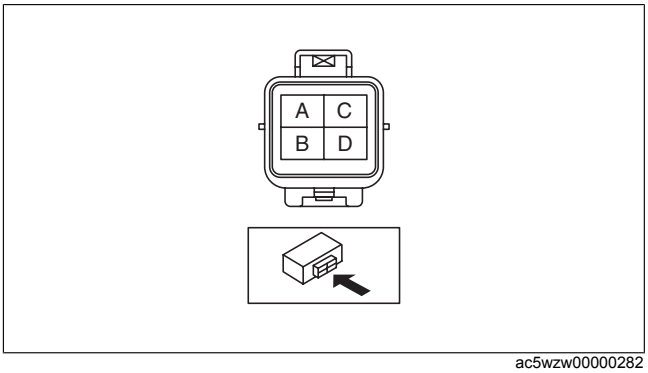

ac5wzw00000282