
KNOCK SENSOR (KS) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1802800

Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the intake manifold. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Remove the KS. (See KNOCK SENSOR (KS) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5. Measure the resistance between KS terminals A and B.
   - If not as specified, replace the KS. (See KNOCK SENSOR (KS) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

   Specification (Reference)
   504—616 kilohms [10—30 °C {50—86 °F}]

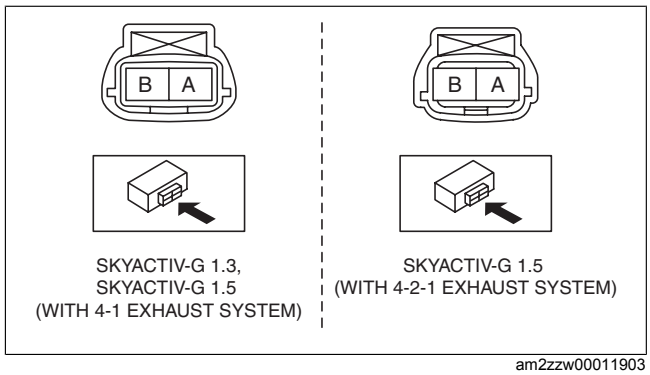

am2zzw00011903